





E796783 ELO-STAND-SELF-SERVICE-15-22-COUNTERTOP

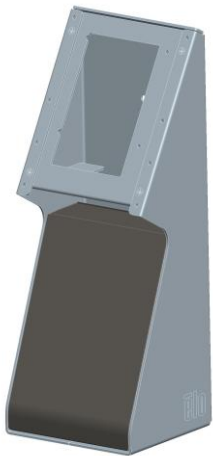


Head Assembly  
Qty. 1

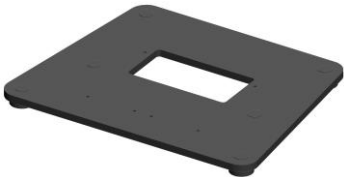

Countertop Base  
Qty. 1



Display Bracket, Android  
Qty. 1

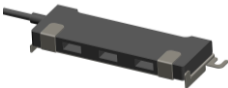

USB Hub  
Qty. 1



Tie-wrap  
Qty. 3




Display Bracket, Windows  
Qty. 1

Screws		
Bag <b>A</b>	Qty.10	SCREW, M4X8, PAN-HEAD, CROSS-RECESS
Bag <b>B</b>	Qty.4	SCREW, M4X8, FLAT-HEAD, CROSS-RECESS
Bag <b>C</b>	Qty.3	SCREW, M3X8, PAN-HEAD, CROSS-RECESS,
Bag <b>D</b>	Qty.4	SCREW, 3mm X8L, THREAD-FORMING, PAN-HEAD
Bag <b>L</b>	Qty.4	SCREW, M4X6, PAN-HEAD, CROSS-RECESS
Bag <b>M</b>	Qty.4	SCREW, M4X18, PAN-HEAD, CROSS-RECESS
Bag <b>N</b>	Qty.4	SCREW, M4X12, PAN-HEAD, CROSS-RECESS
Bag <b>S</b>	Qty.3	SCREW, M4X5, PAN-HEAD, CROSS-RECESS


Panel Hardware	
Qty.2	SCREW, M6X14, PAN-HEAD, CROSS-RECESS
Qty.2	BACKER BOARD SPACER
Qty.2	THUMB SCREW

1

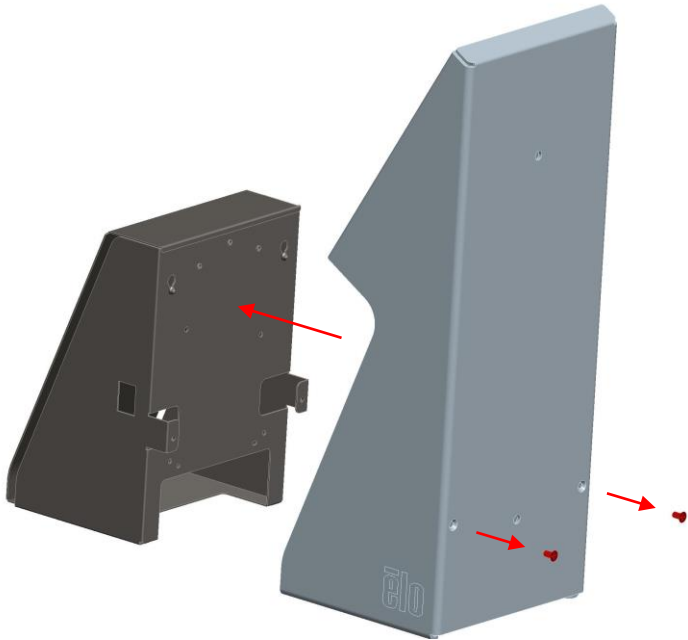


Remove and save (2) screws on rear of Head, pull out printer tray.

2

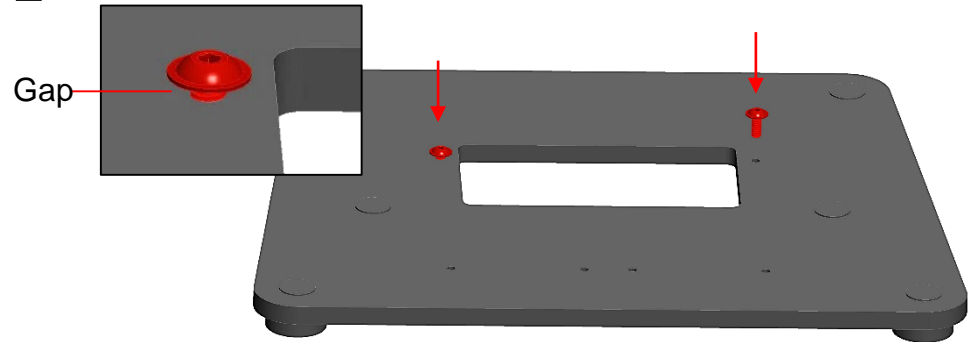


Add (2) screws from bag "A";  
leave ~3mm (1/8") gap for Head.

3

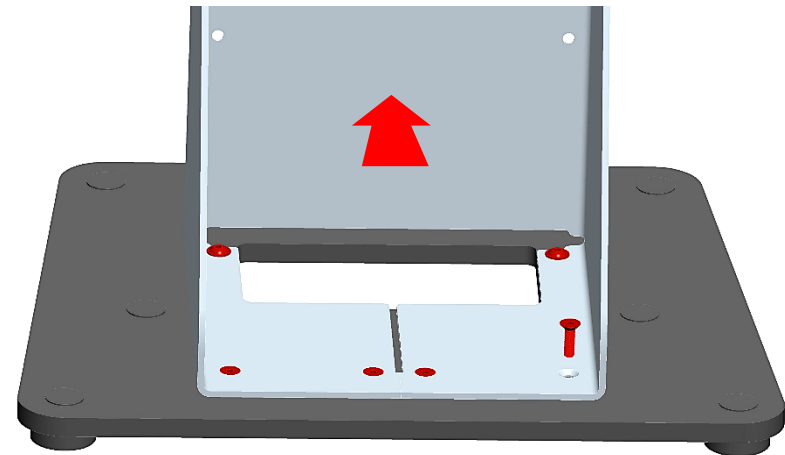

Align slots on bottom rear of Head with (2) screws on base and slide on stand. Add (4) screws from bag "B". Tighten (2) previous screws at rear.


4

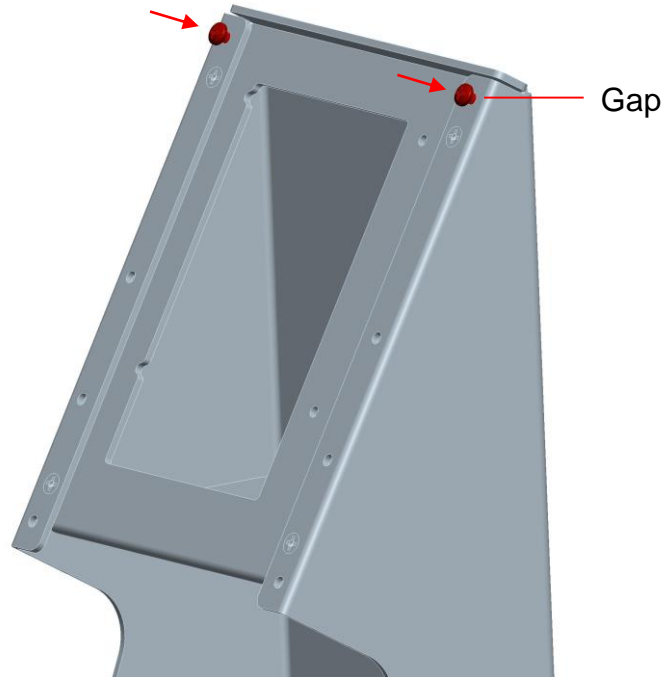

Add (2) screws from bag "A"; leave ~3mm (1/8") gap (for Display Bracket).


5

Choose Android or Windows Display Bracket

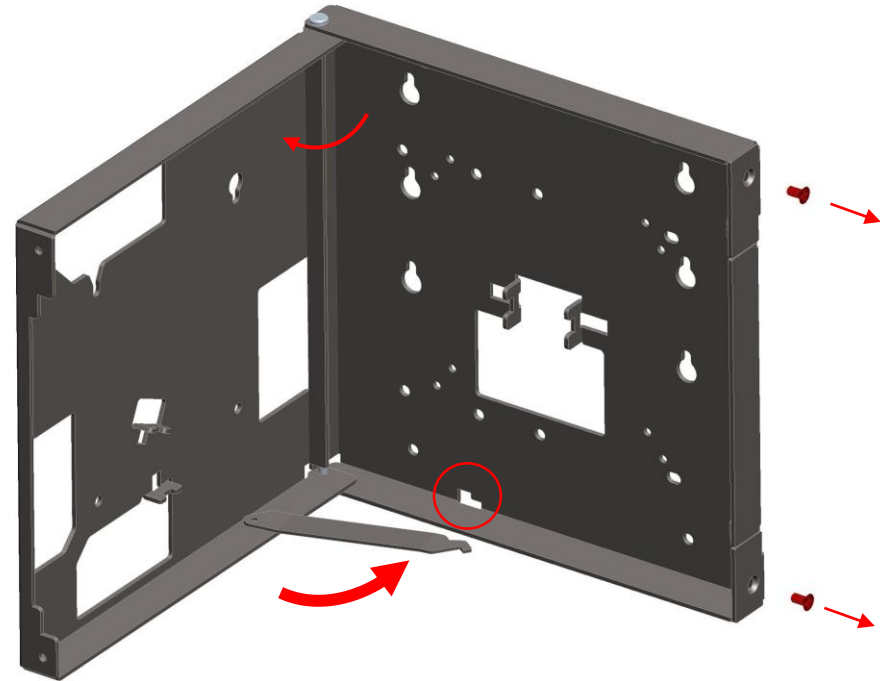


Remove and save (2) screws, open cover of Display Bracket; pivot out and fix prop.

6

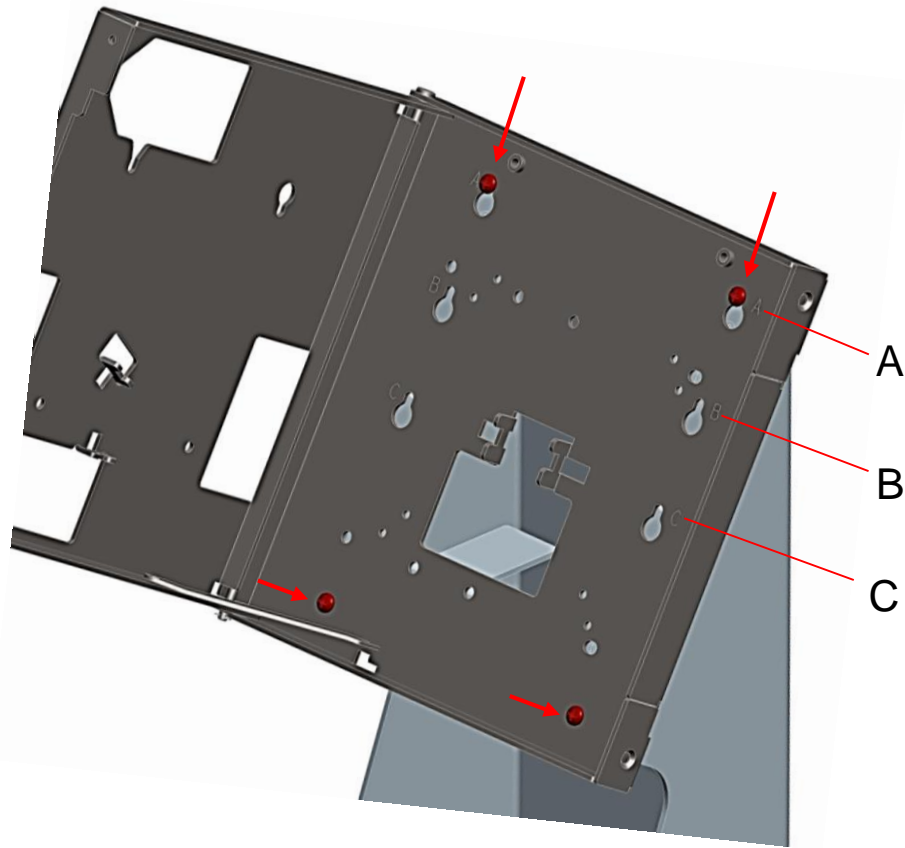

Assemble Display Bracket onto Head.  
 Position "A" for 15", 22" in landscape.  
 Position "B" for 15" in portrait  
 Position "C" for 22" in portrait  
 Add (2) screws from bag "A" at bottom holes.

7

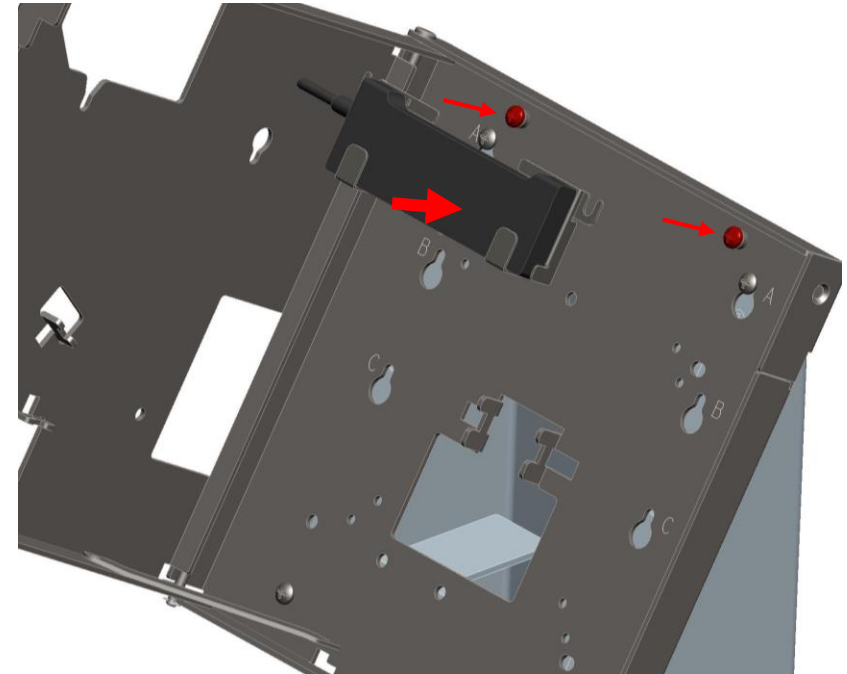

Assemble USB Hub.  
 Add (2) screws from bag "S"; leave ~3mm (1/8") gap for USB bracket to slide on; tighten screws.

If using an EMV Cradle, follow those instructions before moving on.

For Android, continue to step **8**  
 For Windows, continue to step **12**

8

## Android Landscape (For Portrait, go to step 10)


Top Landscape



↓ Cable  
direction

Add (2) screws from bag “L” to top VESA positions. Leave ~3mm (1/8”) gap for mounting to display bracket.  
Remove cable cover(s) before mounting displays on stand.

9

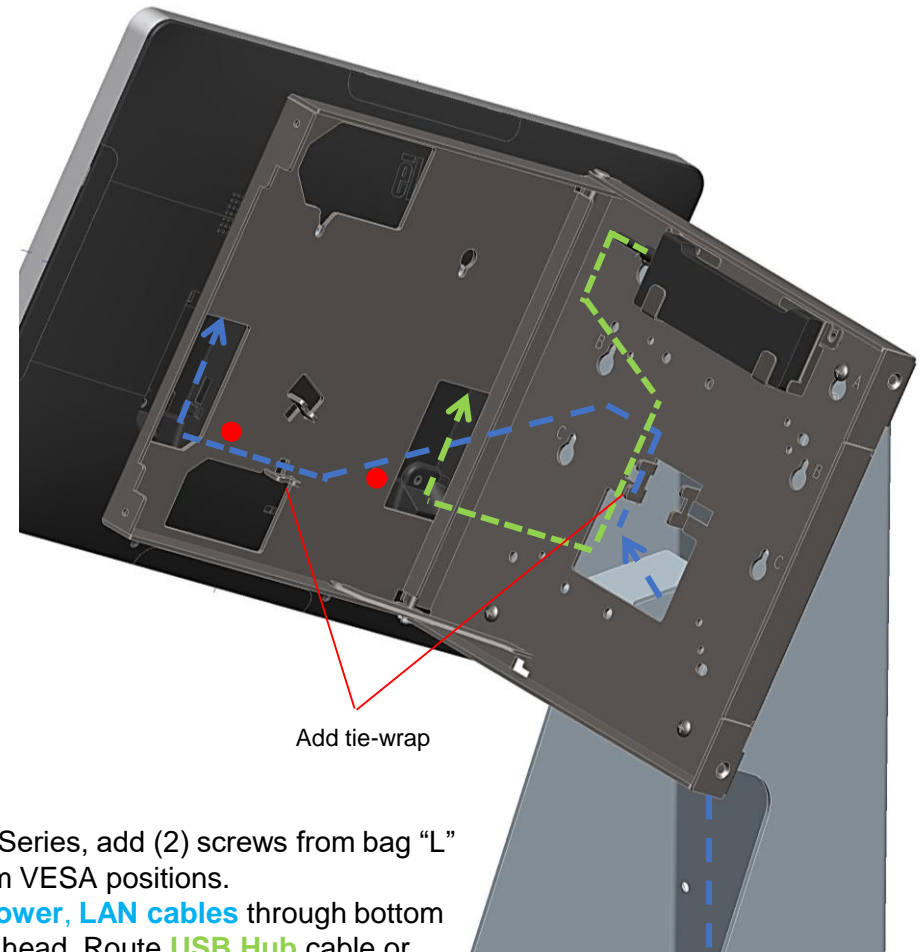


Add tie-wrap

Mount I-Series, add (2) screws from bag “L” to bottom VESA positions.  
Route **power**, **LAN cables** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.

Continue to step 18


10

## Android Portrait

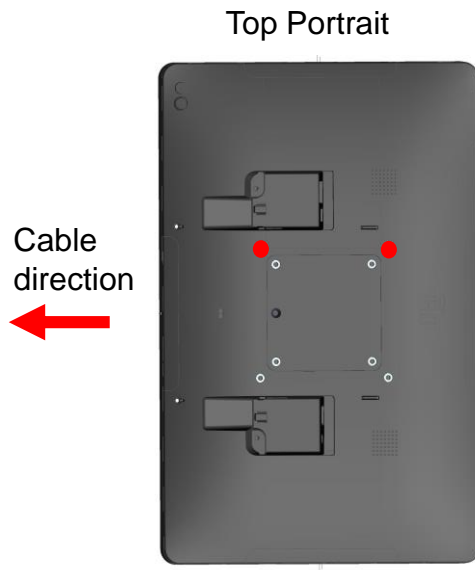

Add (2) screws from bag “L” to top VESA positions. Leave ~3mm (1/8”) gap for mounting to display bracket.  
Remove cable cover(s) before mounting displays on stand.

11

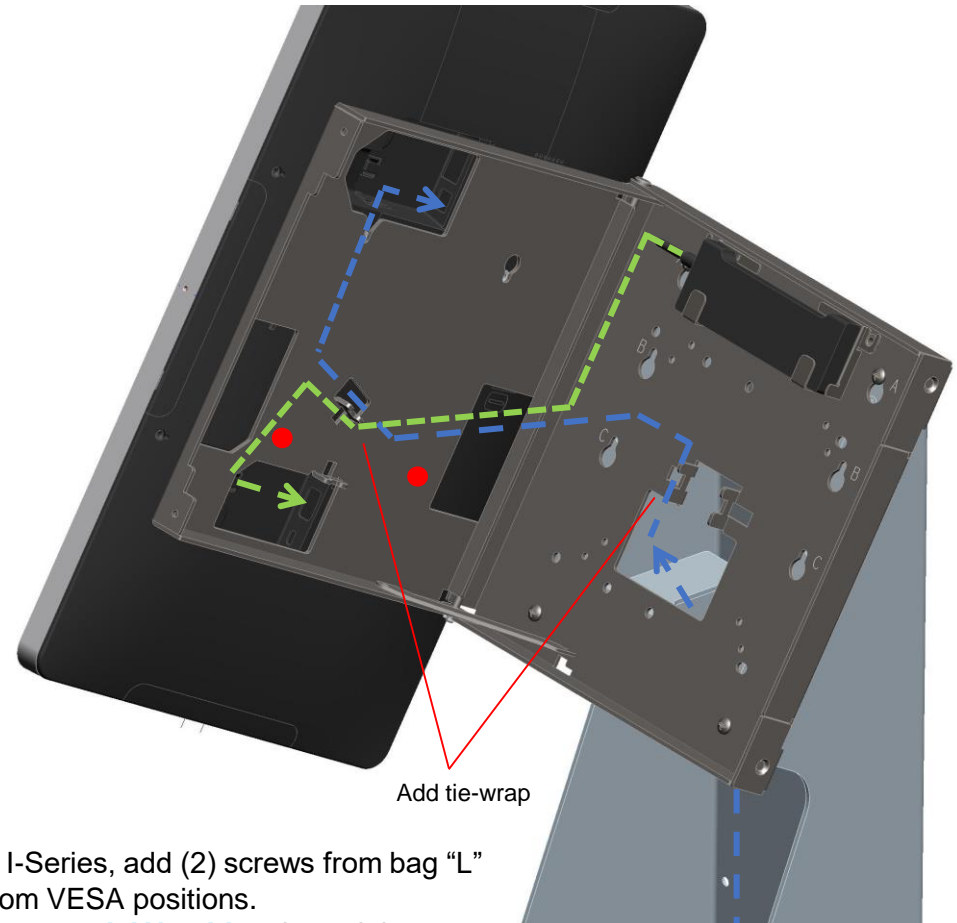

Mount I-Series, add (2) screws from bag “L” to bottom VESA positions.  
Route **power, LAN cables** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.

Continue to step 18

12

Windows Landscape  
(For Portrait, go to step 15)

15" Landscape




22" Landscape



15": add (2) screws from bag "M" to top 75mm VESA positions.  
22": add (2) screws from bag "N" to top 75mm VESA positions.


Leave ~3mm (1/8") gap for mounting to display bracket.

13

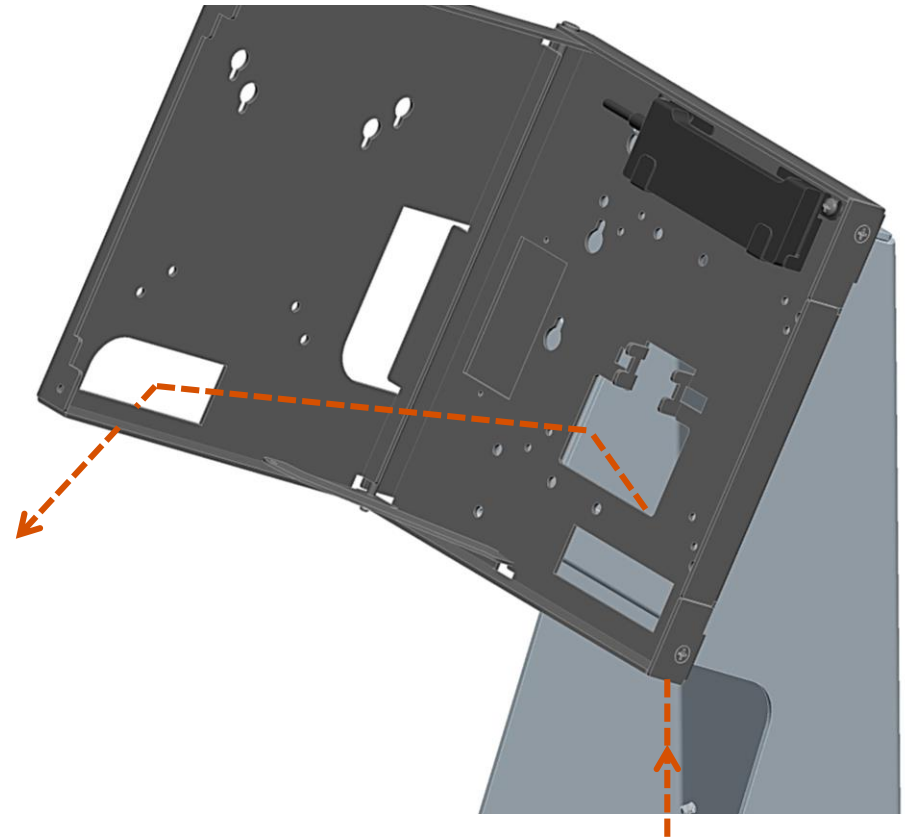

Route power cable from I-series through bottom of stand, through openings in the mount bracket as shown.

## 14a

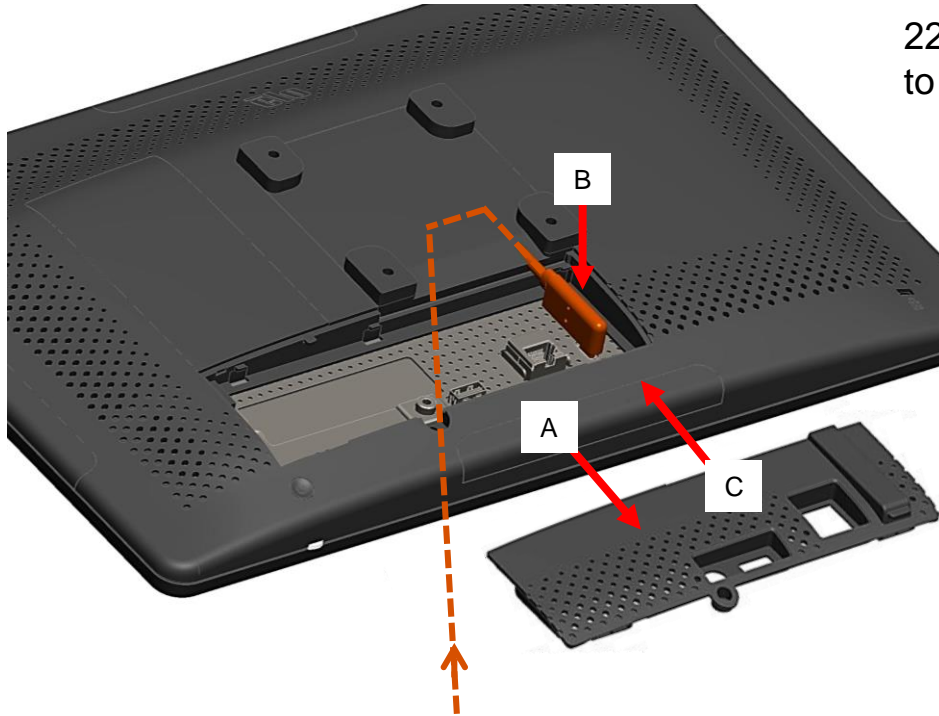


Place I-Series on surface near stand head, within reach of cable. Remove cable door (A), plug in power cable (B) and replace cable door (C) as shown.

## 14b

Mount I-Series, then add bottom VESA screws:

22": add (2) screws from bag "N" to bottom 75mm VESA positions.

15": add (2) screws from bag "M" to bottom 75mm VESA positions.

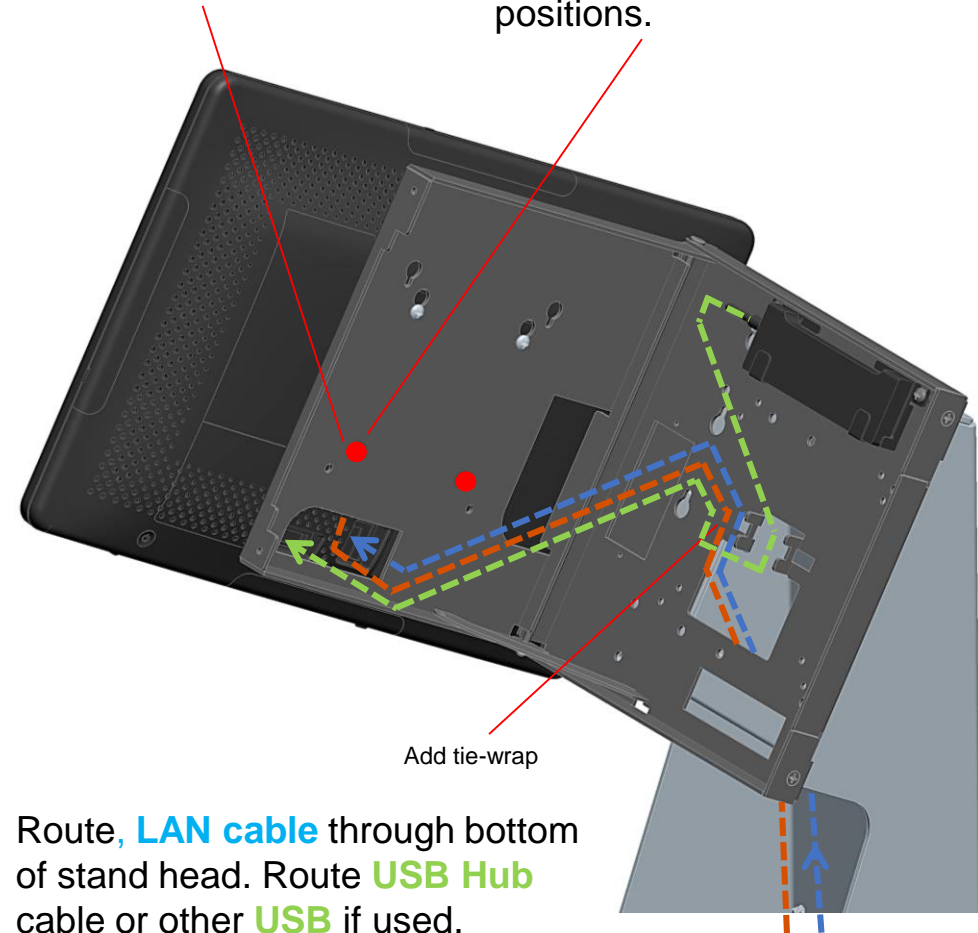

Add tie-wrap

Route, **LAN cable** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.


Continue to step **18**

15

## Windows Portrait

15" Portrait


22" Portrait

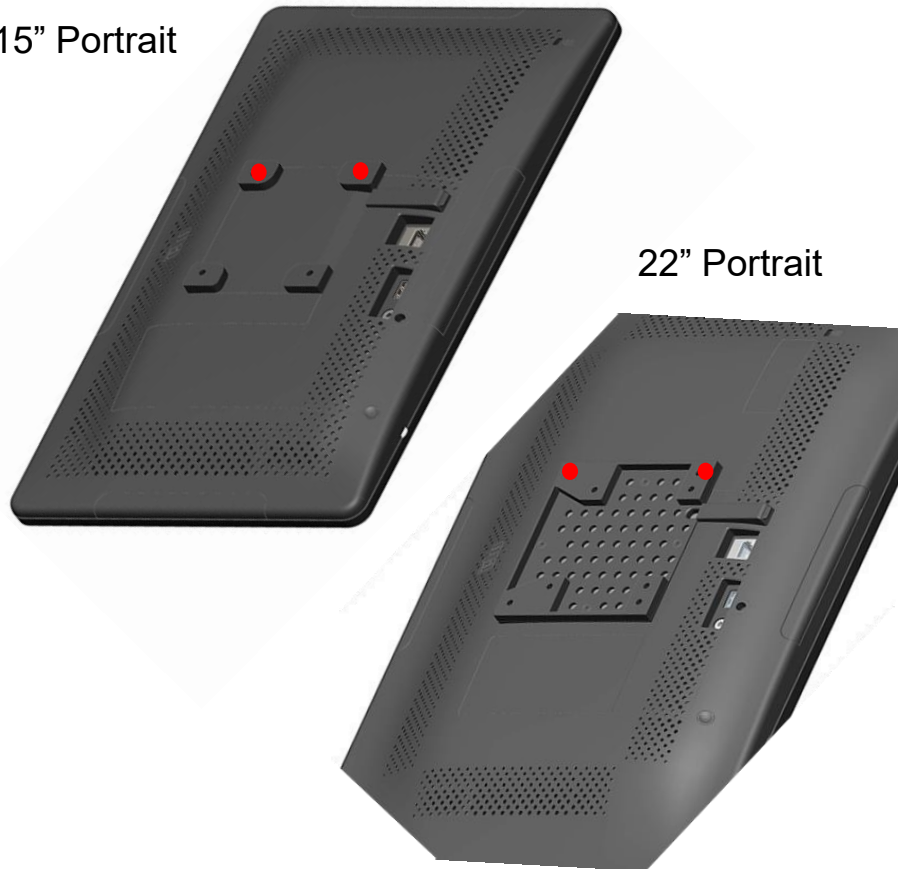

15": add (2) screws from bag "M" to top 75mm VESA positions.  
22": add (2) screws from bag "N" to top 100mm VESA positions.


Leave ~3mm (1/8") gap for mounting to display bracket.

16

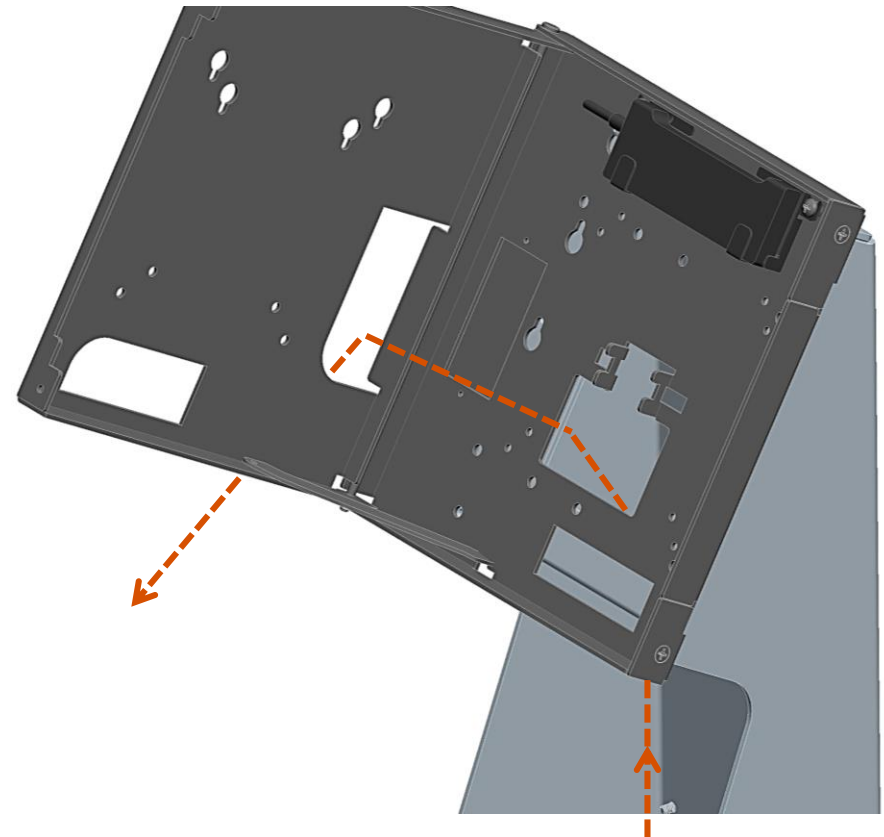

Route power cable from I-series through bottom of stand, through openings in the mount bracket as shown.


## 17a

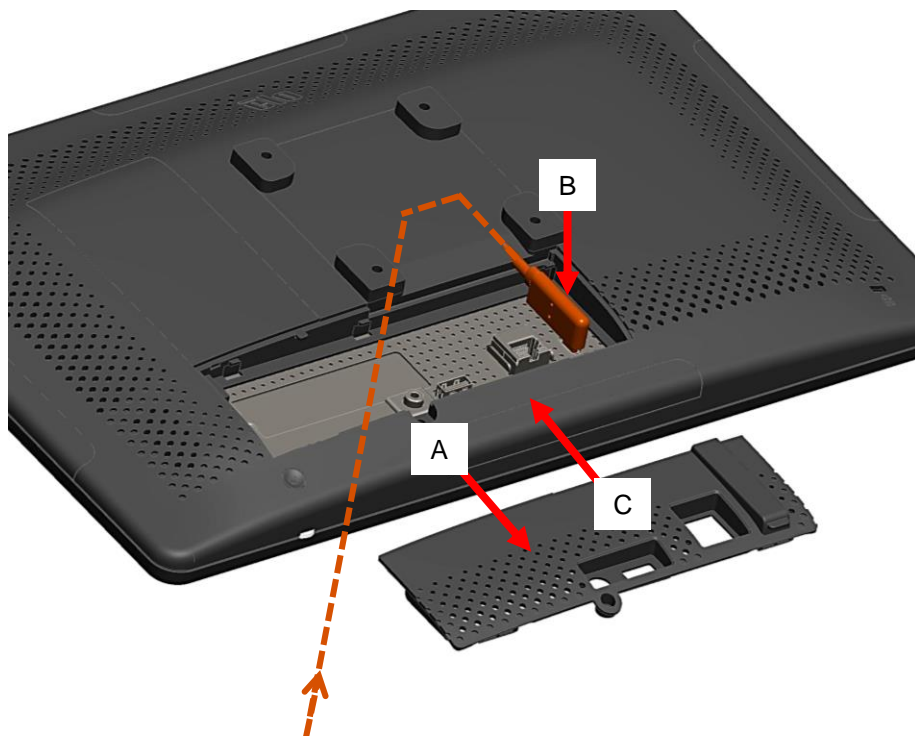

Place I-Series on surface near stand head, within reach of cable. Remove cable door (A), plug in power cable (B) and replace cable door (C) as shown.

## 17b Mount I-Series, then add bottom VESA screws:

15": add (2) screws from bag "M" to bottom 75mm VESA positions.  
22": add (2) screws from bag "N" to bottom 100mm VESA positions.

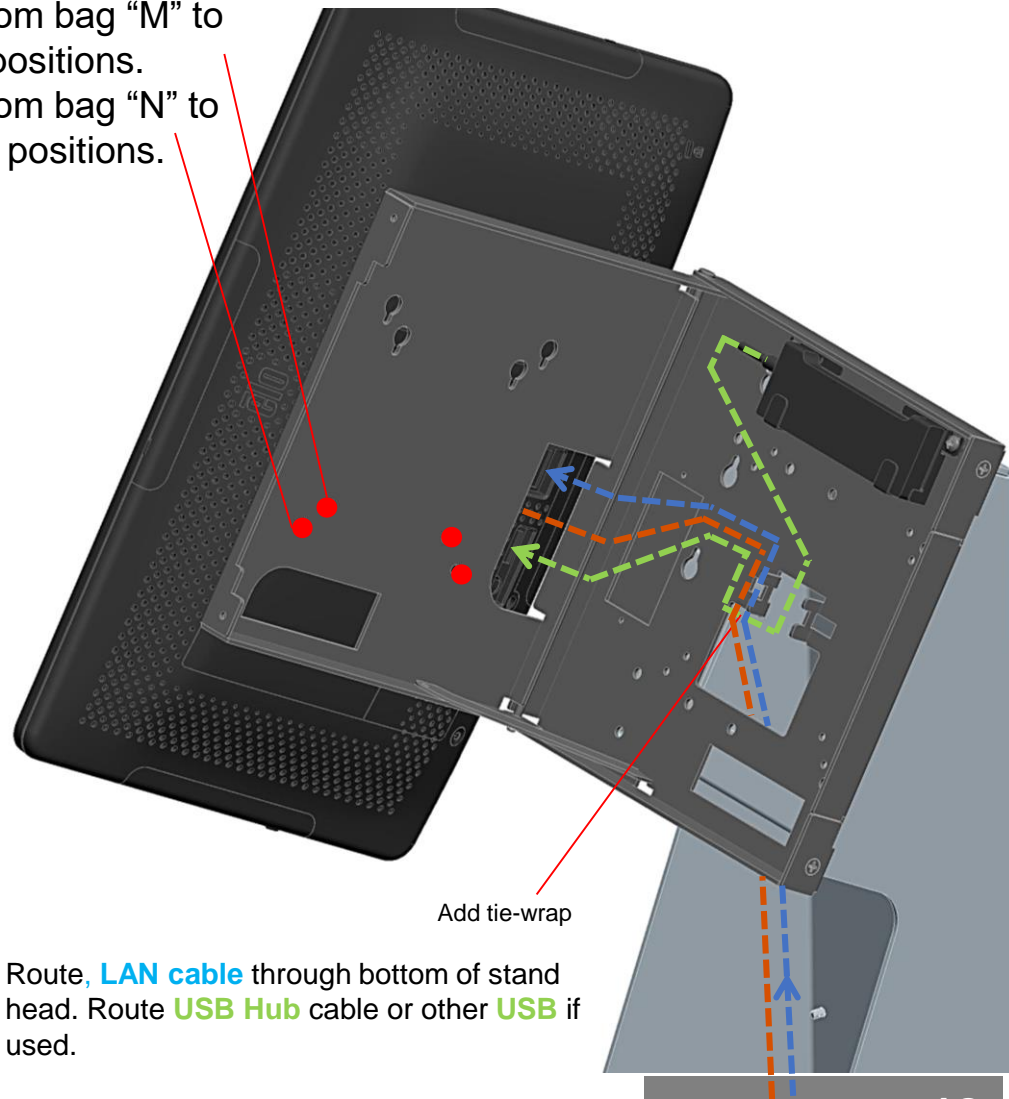


Route, **LAN cable** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.

Add tie-wrap

Continue to step **18**

18

If no printer, skip to step 23

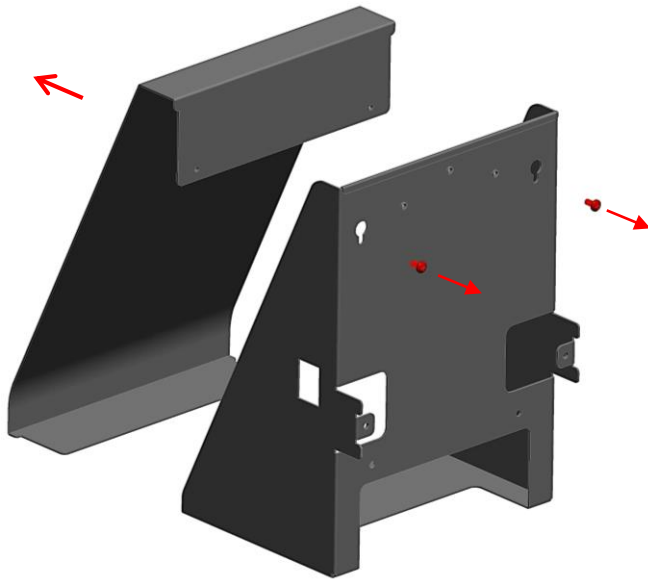


If using printer, remove cover to add printer.


Go to step 19 for **Star** printers.  
For **Epson TM-T88**, go to step 22.

19


Add (2) screws from bag “C” to printer tray; use Star printer bracket to set depth of screws then remove Star bracket.

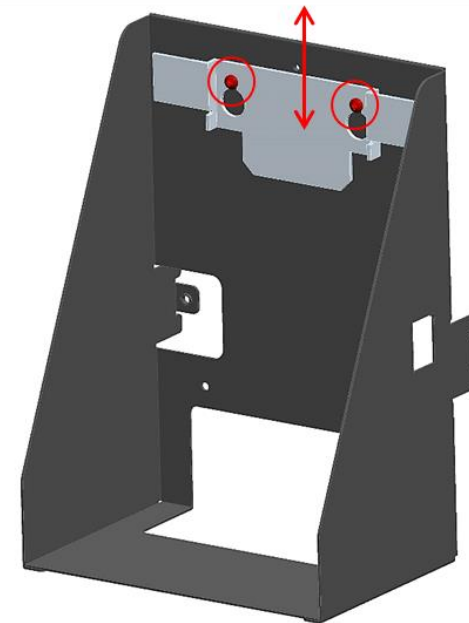

- 20** Add Star printer bracket to printer; refer to Star instructions.

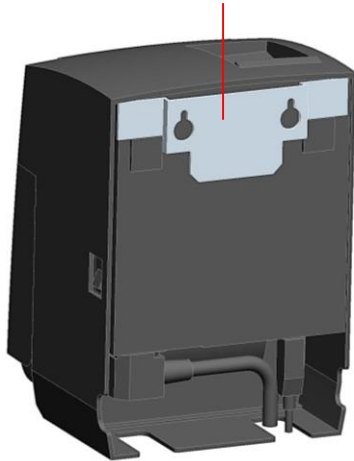


- 21** Add Star printer with bracket to printer tray. Secure printer to printer tray using 3<sup>rd</sup> screw from bag “C”.

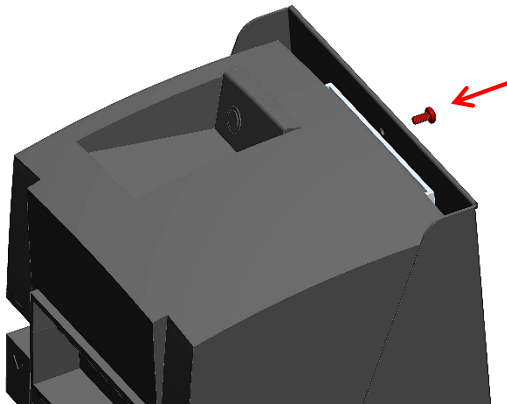

Continue to step **23**


- 22** Add (4) screws from bag “D” to attach printer to the tray.

Epson TM-T88

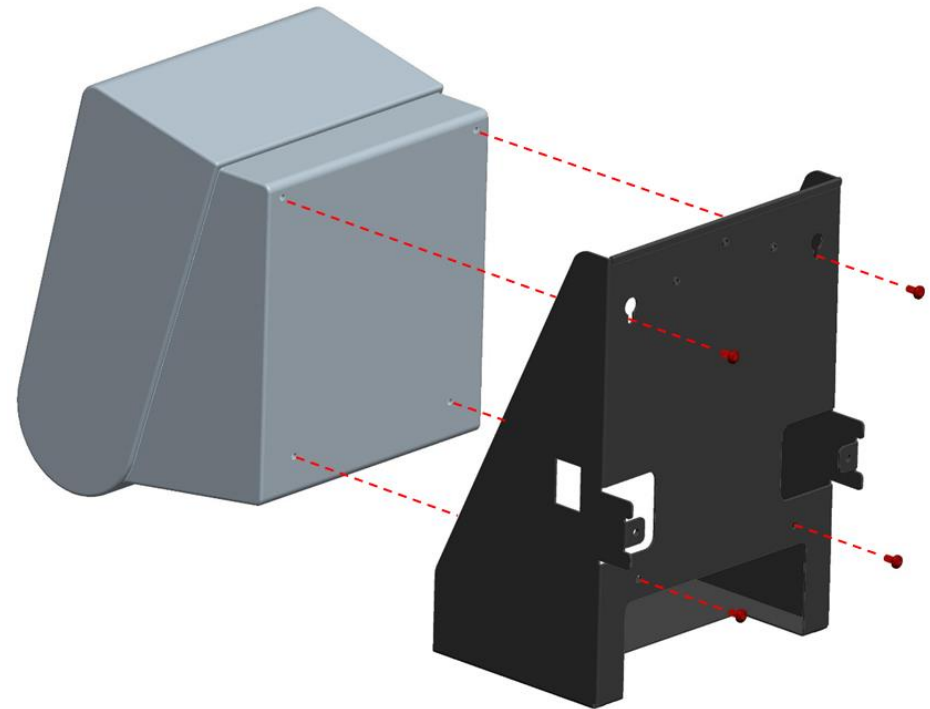


Continue to step **23**

23

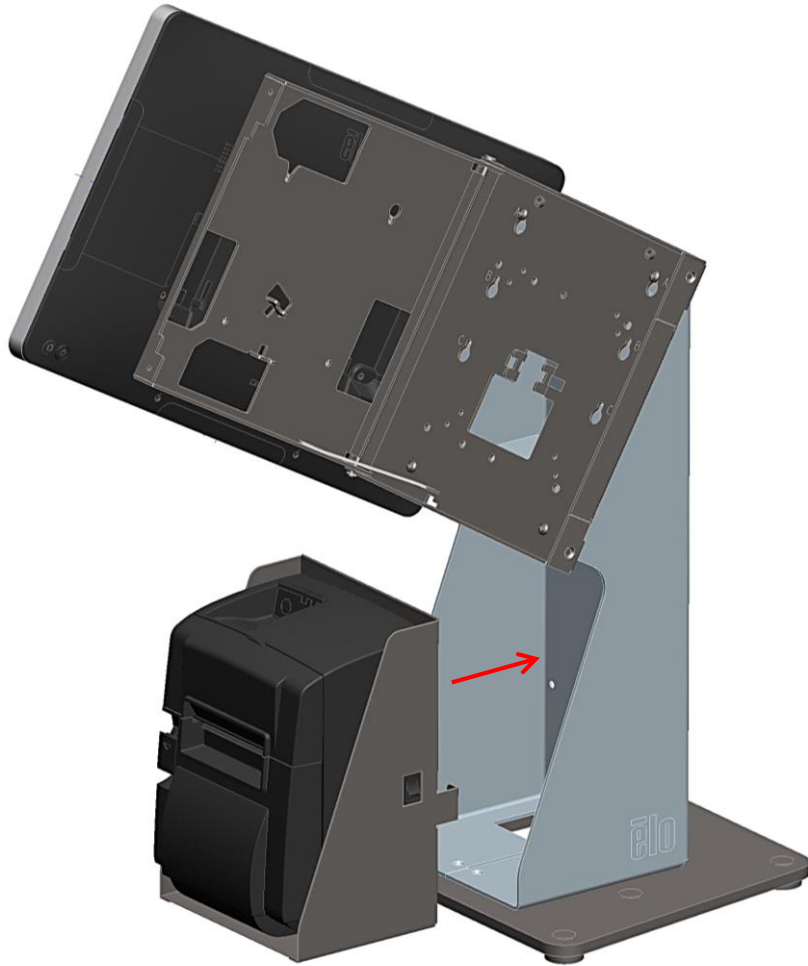

Route cables from/to printer as needed, slide in printer tray assembly (or printer tray with cover if no printer).

24

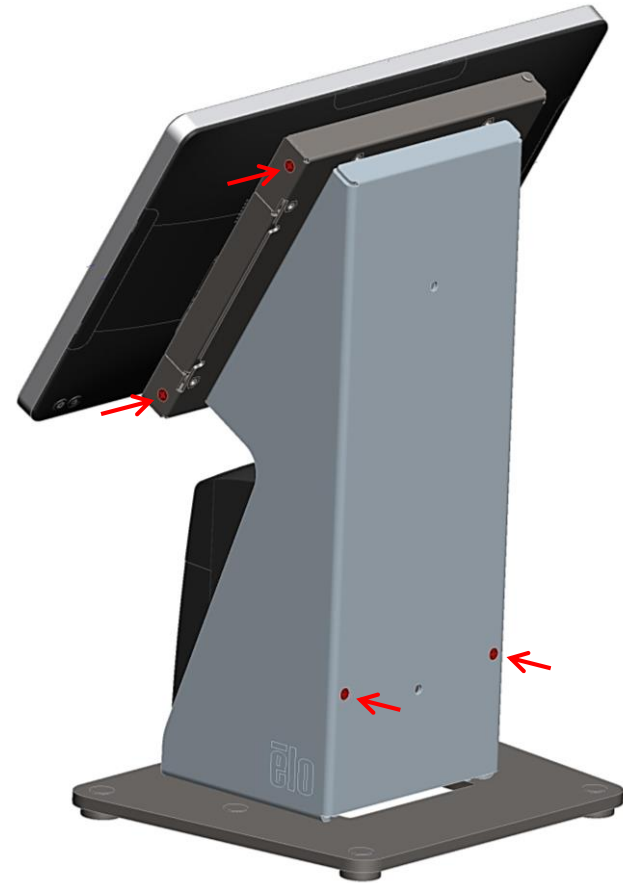


Close Display Bracket and add (2) screws saved from step 5. Secure printer assembly with (2) screws saved from step 1.


25

If installing an EMV Cradle, finish by adding  
(1) screw from bag “S”.

EMV-SERV-SERV-ING-RP757

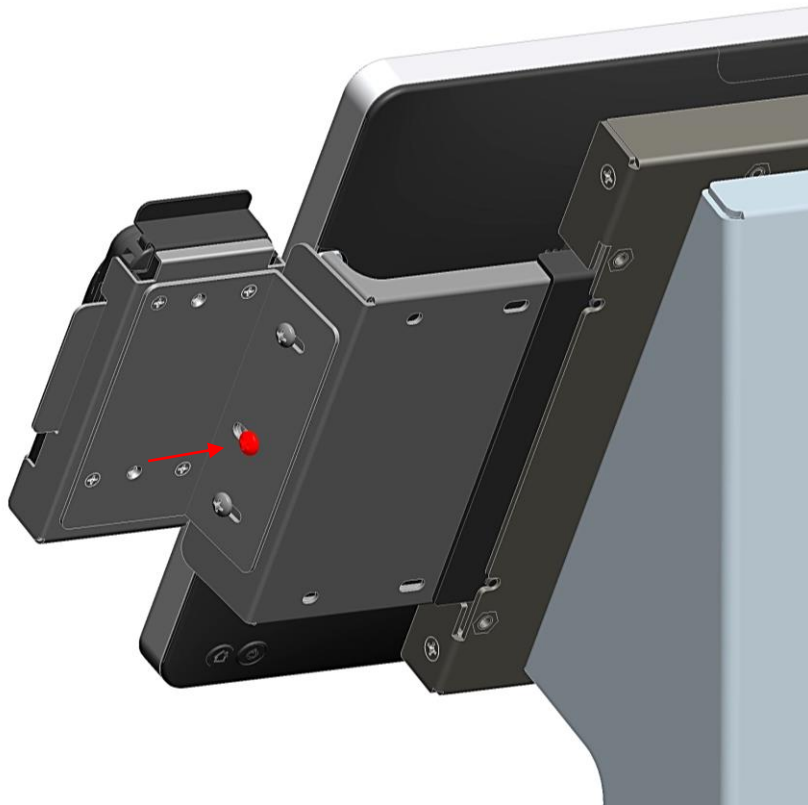

EMV-SERV-SERV-15-22-ING-IPP320/350/315  
EMV-SERV-SERV-15-22-VF-MX915-ING-ISC250

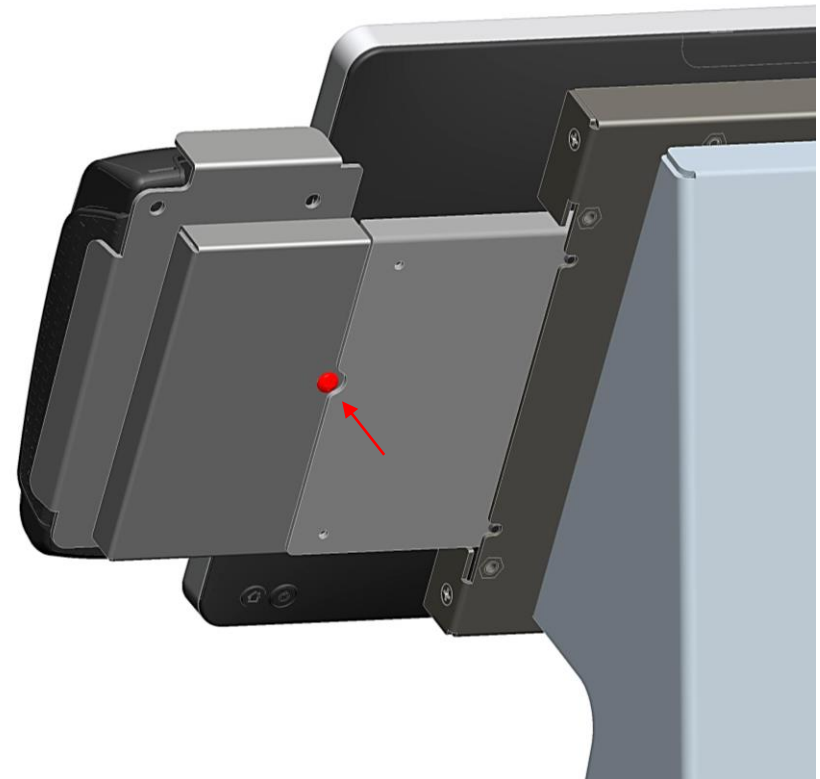

---

For more information, go to [www.elotouch.com/support](http://www.elotouch.com/support), or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.