# ASSEMBLY INSTRUCTIONS, ELO SELF SERVICE STAND



ēlo

# E796965 ELO-STAND-SELF-SERVICE-15-22-FLOOR-TOP E797162 ELO-STAND-SELF-SERVICE-15-22-FLOOR-BASE

#### Contents for Kit: E796965 ELO-STAND-SELF-SERVICE-15-22-FLOOR-TOP





Display Bracket, Android Qty. 1



Display Bracket, Windows Qty. 1

Floor-Head Assembly Qty. 1


Tie-wrap Qty. 3

Straps Qty. 3

USB Hub Qty. 1


Screws		
Bag <b>A</b>	Qty.10	SCREW, M4X8, PAN-HEAD, CROSS-RECESS
Bag <b>B</b>	Qty.4	SCREW, M4X8, FLAT-HEAD, CROSS-RECESS
Bag <b>C</b>	Qty.3	SCREW, M3X8, PAN-HEAD, CROSS-RECESS
Bag <b>D</b>	Qty.4	SCREW, 3mm X8L, THREAD-FORMING, PAN-HEAD
Bag <b>K</b>	Qty.6	SCREW, M5X10, FLAT-HEAD, CROSS-RECESS
Bag <b>L</b>	Qty.4	SCREW, M4X6, PAN-HEAD, CROSS-RECESS
Bag <b>M</b>	Qty.4	SCREW, M4X18, PAN-HEAD, CROSS-RECESS
Bag <b>N</b>	Qty.4	SCREW, M4X12, PAN-HEAD, CROSS-RECESS
Bag <b>S</b>	Qty.3	SCREW, M4X5, PAN-HEAD, CROSS-RECESS

Panel Hardware			
Qty.2	SCREW, M6X14, PAN-HEAD, CROSS- RECESS		
Qty.2	BACKER BOARD SPACER		
Qty.2	THUMB SCREW		

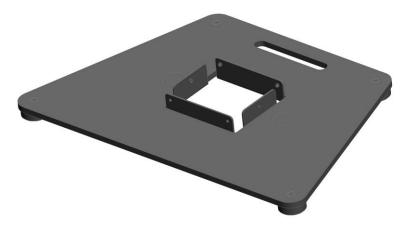


Floor Base Qty. 1


ēlo

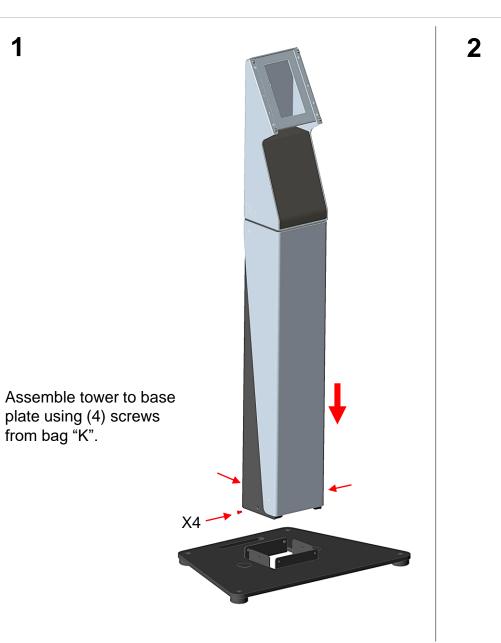


1

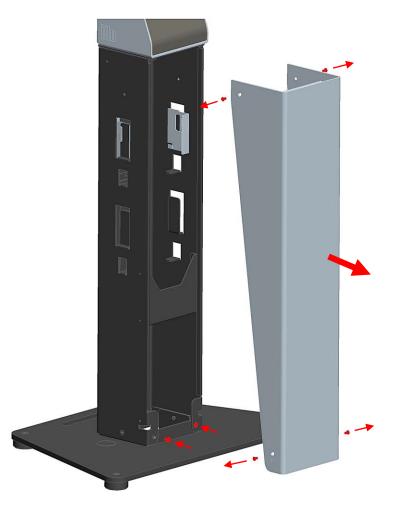


Remove and save the (4) screws on the left and right of the stand front cover. Pull off the silver cover and set aside. Add (2) remaining screws from bag "K" to bottom front of stand.

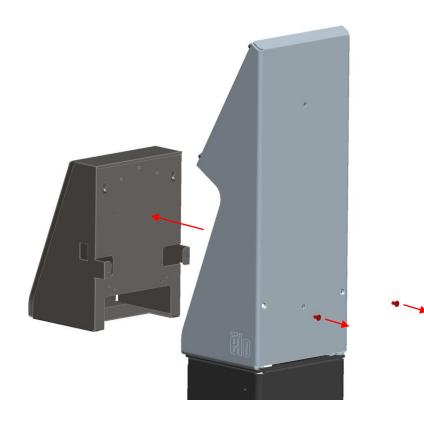


Remove and save (2) screws on rear of Head, pull out printer tray.

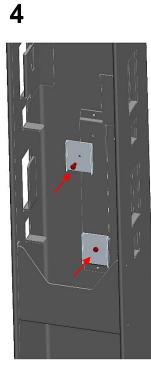

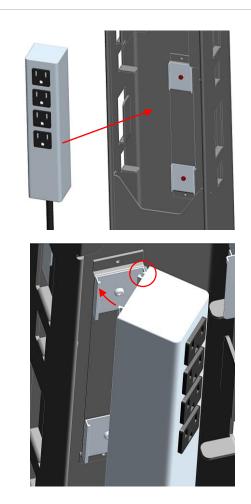


# (Power strip shown available from McMaster-Carr, item #7361K43)

Add power strip brackets (supplied with power strip) using (2) screws from bag "L". Hook one side of power strip onto brackets than push to snap down. 5

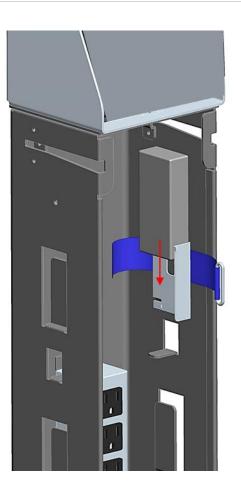

Add power bricks into tower using provided straps.

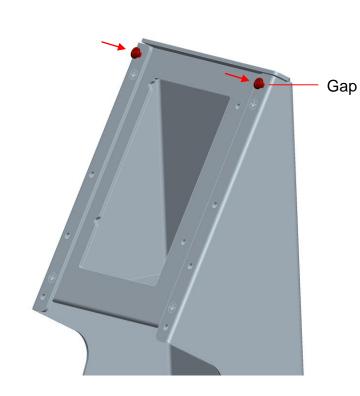


6


Add (2) screws from bag "A"; leave ~3mm (1/8") gap (for Display Bracket).

7


Choose Android or Windows Display Bracket

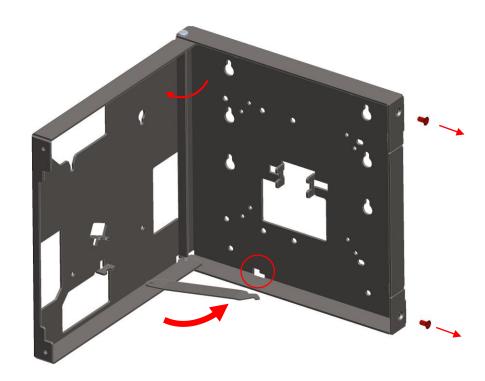

Remove and save (2) screws, open cover of Display Bracket; pivot out and fix prop. 8

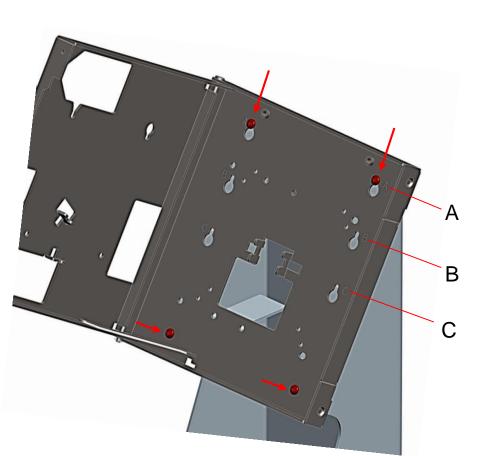

Assemble Display Bracket onto Head. Position "A" for 15", 22" in landscape. Position "B" for 15" in portrait Position "C" for 22" in portrait Add (2) screws from bag "A" at bottom holes.

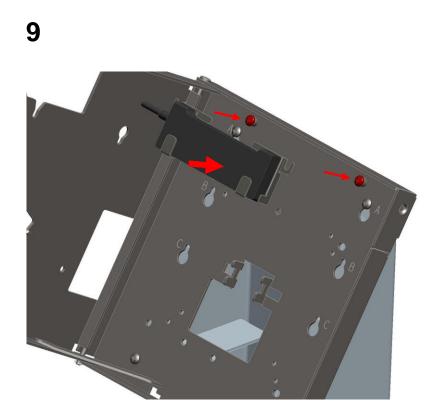

Assemble USB Hub. Add (2) screws from bag "S"; leave ~3mm (1/8") gap for USB bracket to slide on; tighten screws.

If using an EMV Cradle, follow those instructions before moving on.

For Android, continue to step **10** For Windows, continue to step **14** 

# 10

### Android Landscape (For Portrait, go to step 12)


#### Top Landscape




Cable direction


Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket.

Remove cable cover(s) before mounting displays on stand.

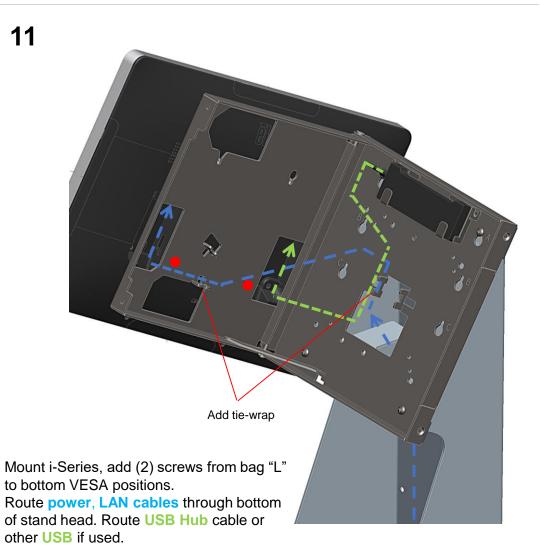


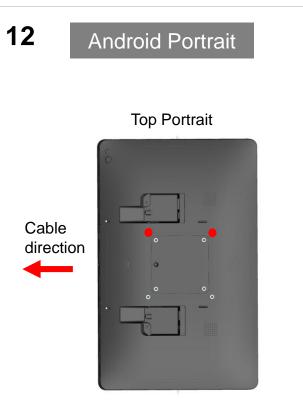

Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket. Remove cable cover(s) before mounting displays on stand.

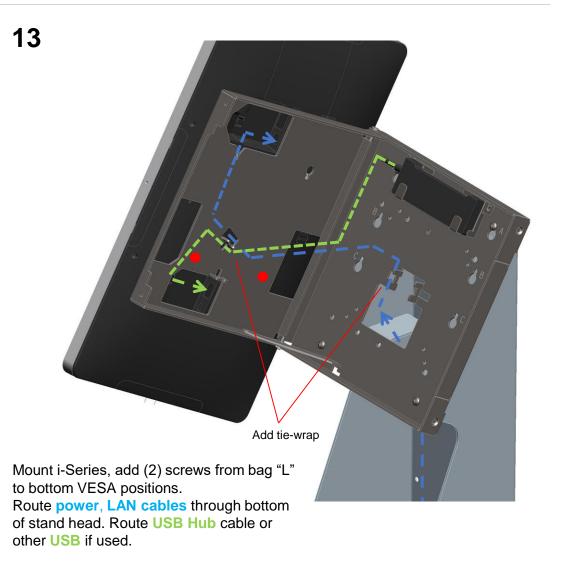


ēlo

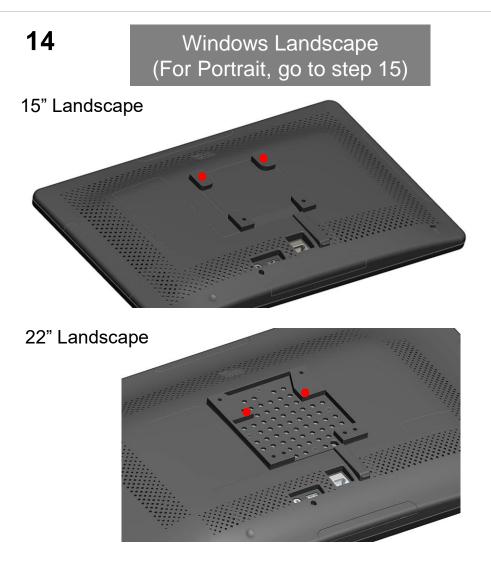


15": add (2) screws from bag "M" to top 75mm VESA positions. 22": add (2) screws from bag "N" to top 75mm VESA positions.

Leave ~3mm (1/8") gap for mounting to display bracket.

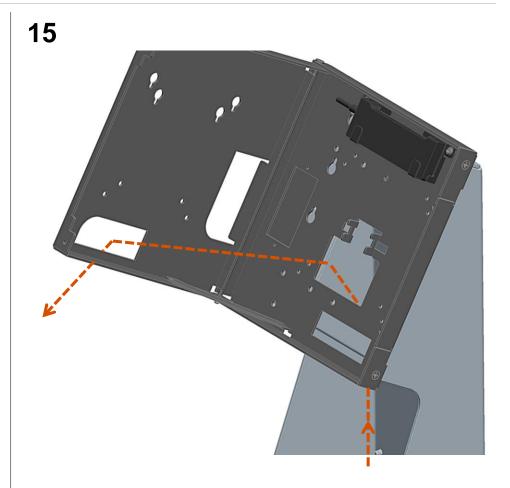

Route power cable from I-series through bottom of stand, through openings in the mount bracket as shown. 16a

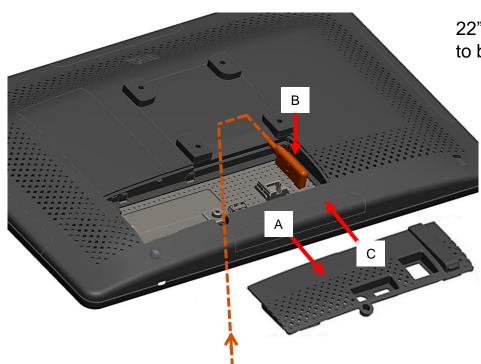


**16b** Mount I-Series, then add bottom VESA screws:

15": add (2) screws from bag 22": add (2) screws from bag "N" "M" to bottom 75mm VESA to bottom 75mm VESA positions. positions. Add tie-wrap Route, LAN cable through bottom of stand head. Route USB Hub cable or other USB if used. Continue to step **18** 


Place I-Series on surface near stand head, within reach of cable. Remove cable door (A), plug in power cable (B) and replace cable door (C) as shown.

ēlo

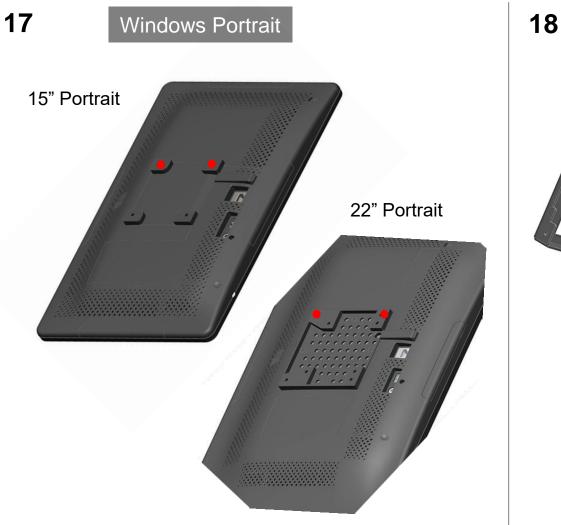

15": add (2) screws from bag "M" to top 75mm VESA positions. 22": add (2) screws from bag "N" to top 100mm VESA positions.

Leave ~3mm (1/8") gap for mounting to display bracket.

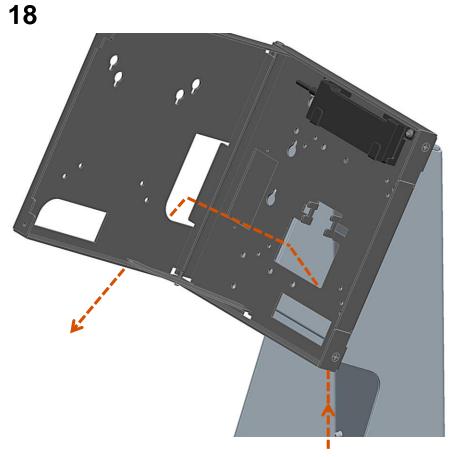

Route power cable from I-series through bottom of stand, through openings in the mount bracket as shown.

## **19a**

Mount I-Series, then add bottom VESA screws: **19b** 15": add (2) screws from bag "M" to bottom 75mm VESA positions. 22": add (2) screws from bag "N" to bottom 100mm VESA positions. Add tie-wrap Place I-Series on surface near stand head, Route, LAN cable through bottom of stand head. Route USB Hub cable or other USB if

within reach of cable. Remove cable door (A), plug in power cable (B) and replace cable door (C) as shown.

used.

© Copyright 2019 Elo Touch Solutions, Inc. 14




If no printer, skip to step **25** 

K


20

21


Add (2) screws from bag "C" to printer tray; use Star printer bracket to set depth of screws than remove Star bracket.

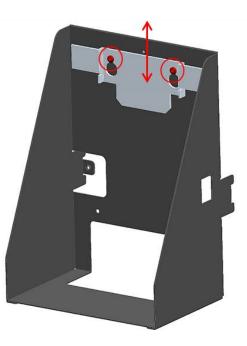

**22** Add Star printer bracket to printer; refer to Star instructions.

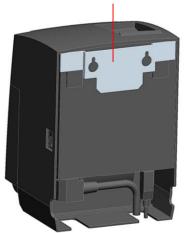


**23** Add Star printer with bracket to printer tray. Secure printer to printer tray using 3<sup>rd</sup> screw from bag "C".

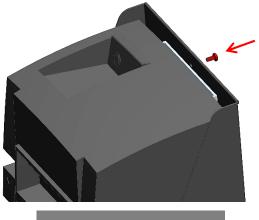

Continue to step 25


24 Add (4) screws from bag "D" to attach printer to the tray. Epson TM-T88

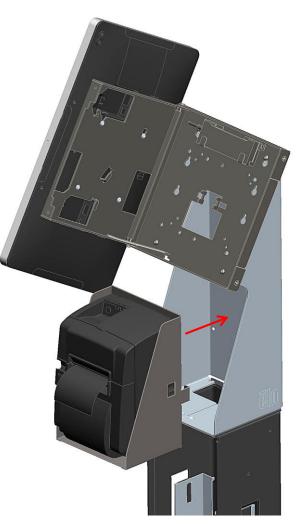

Route cables from/to printer as needed, slide in printer tray assembly (or printer tray with cover if no printer).




Close Display Bracket and add (2) screws saved from step 7. Secure printer assembly with (2) screws saved from step 3.

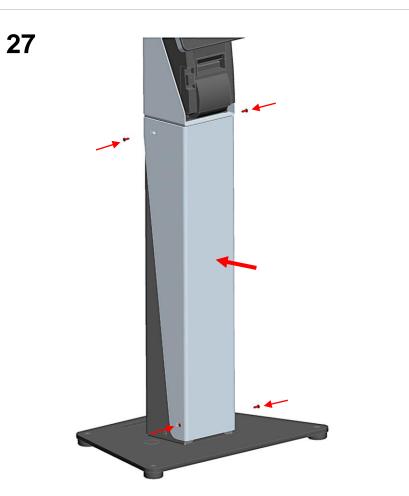

Replace floor stand cover and secure using (4) screws saved from step 2.

28

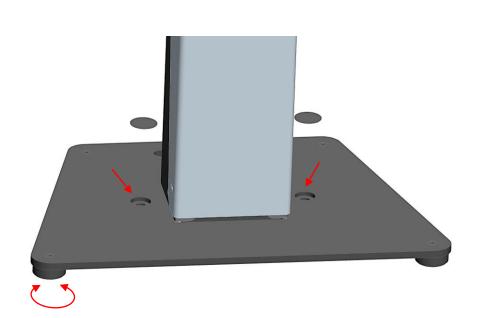



(2) bolt holes available on top of base to secure stand to floor. Feet can be adjusted in case of uneven surfaces.

If installing an EMV Cradle, finish by adding (1) screw from bag "S".

#### EMV-SELF-SERV-ING-RP757

#### EMV-SELF-SERV-15-22-ING-IPP320/350/315 EMV-SELF-SERV-15-22-VF-MX915-ING-ISC250

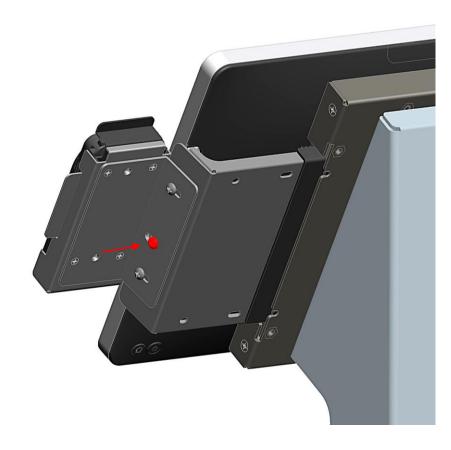

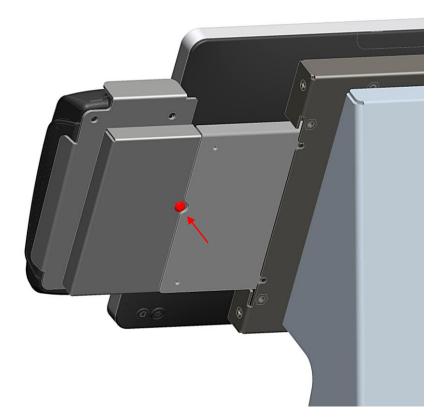

29

For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.