

Contents:

- Elo M60 Mobile Computer
- 18W AC-DC Adapter
- US/EU/UK Adapter plugs



Quick Installation Guide

Elo M60 Mobile Computer

Revision A
P/N E242557

Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
elosales.na@elotouch.com

Europe (EMEA)

Tel +32 16 930 136
emea.sales@elotouch.com

Asia Pacific

Tel +86 (21) 3329 1385
EloAsia@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc..





Battery removal




Battery replacement



Micro SD/Nano Sam card installation

1. Remove battery.
2. Pull out Micro SD card/Nano SAM holder.
3. Place SD card/Nano SAM with contacts facing down.
4. Replace holder.

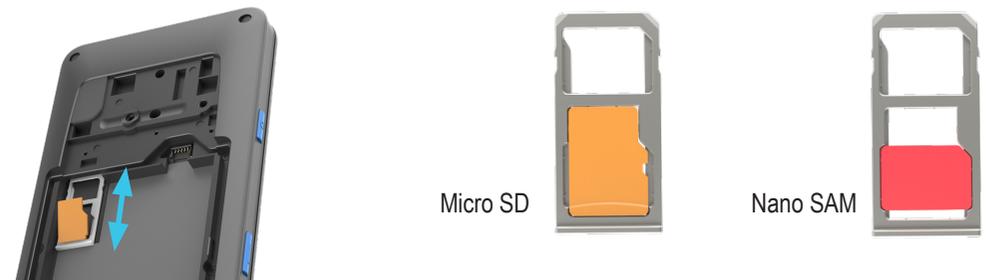

Contents:

- Elo M60C Mobile Computer
- 18W AC-DC Adapter
- US/EU/UK Adapter plugs



Quick Installation Guide

Elo M60C Mobile Computer

Revision A
P/N E242751

Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
elosales.na@elotouch.com

Europe (EMEA)

Tel +32 16 930 136
emea.sales@elotouch.com

Asia Pacific

Tel +86 (21) 3329 1385
EloAsia@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc..





Battery removal



Battery replacement



Micro SD/Nano Sam card + Nano SIM card Installation

1. Remove battery.
2. Pull out Micro SD card/Nano SAM + Nano SIM holder.
3. Place SD cadr/Nano SAM and/or Nano SIM with contacts facing down.
4. Replace holder.

