



Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
EloSales.NA@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
EloAsia@elotouch.com

Europe(EMEA)

Tel +32 (0)16 930 136
EMEA.Sales@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc.



Quick Installation Guide


ELO Speaker Bar

Revision A
P/N E456687

Installation


Please go to www.elotouch.com/support to verify you have the latest drivers before installing this device.

1

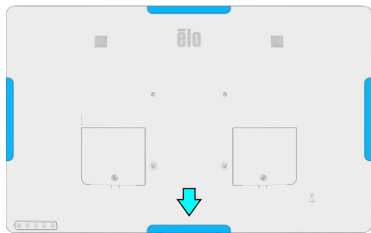


Select location to mount the speaker bar kit.
Elo recommends the bottom location in either portrait or landscape orientation.

2

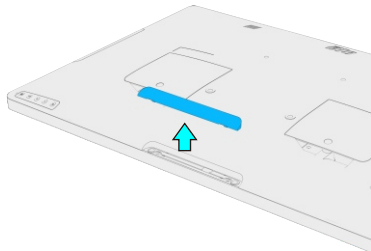


Remove the selected peripheral cover from the touchmonitor.

3

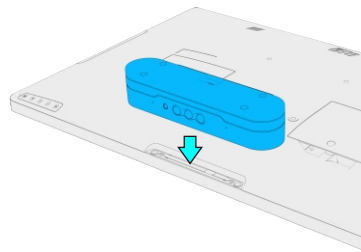

Gently insert the speaker bar kit into the peripheral bay taking care to ensure the connector mates properly.

4

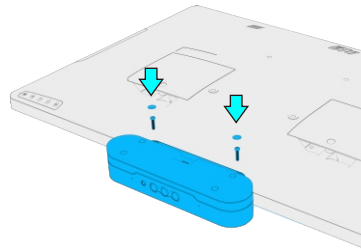

Install the 2 flat head screws included with the kit and cover the screws with the adhesive mylar covers if desired.

5



If you connect the speaker kit to Elo system product whose edge connect does not support 1.2A, we suggest you use the Micro USB cable included in accessory to connect speaker back Micro USB power port to another edge connector to get better sound experience.