



**Box Contents:**

- 1 x Elo Pay 7"
- 1 x 18W Adapter + USB-C Right Angle Plug
- 2 x M3\*L4.1mm Flat Head Screws
- 1 x USB Door
- 1 x US Plug
- 1 x EU Plug
- 1 x UK Plug
- 1 x QIG

**Caution:**

Risk of explosion if battery is replaced by an incorrect type.  
Dispose of used batteries according to the instructions.

**Quick Installation Guide**  
Elo Pay 7"

Learn more about Elo at [EloTouch.com](http://EloTouch.com)

**America**

Tel +1 408 597 8000  
EloSales.NA@elotouch.com

**Europe (EMEA)**

Tel +32 16 930 136  
EMEA.sales@elotouch.com

**Asia Pacific**

Tel +86 (21) 3329 1385  
EloAsia@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.


Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc.

© 2024 Elo Touch Solutions, Inc. All rights reserved.




[www.EloTouch.com](http://www.EloTouch.com)

**Installation:**

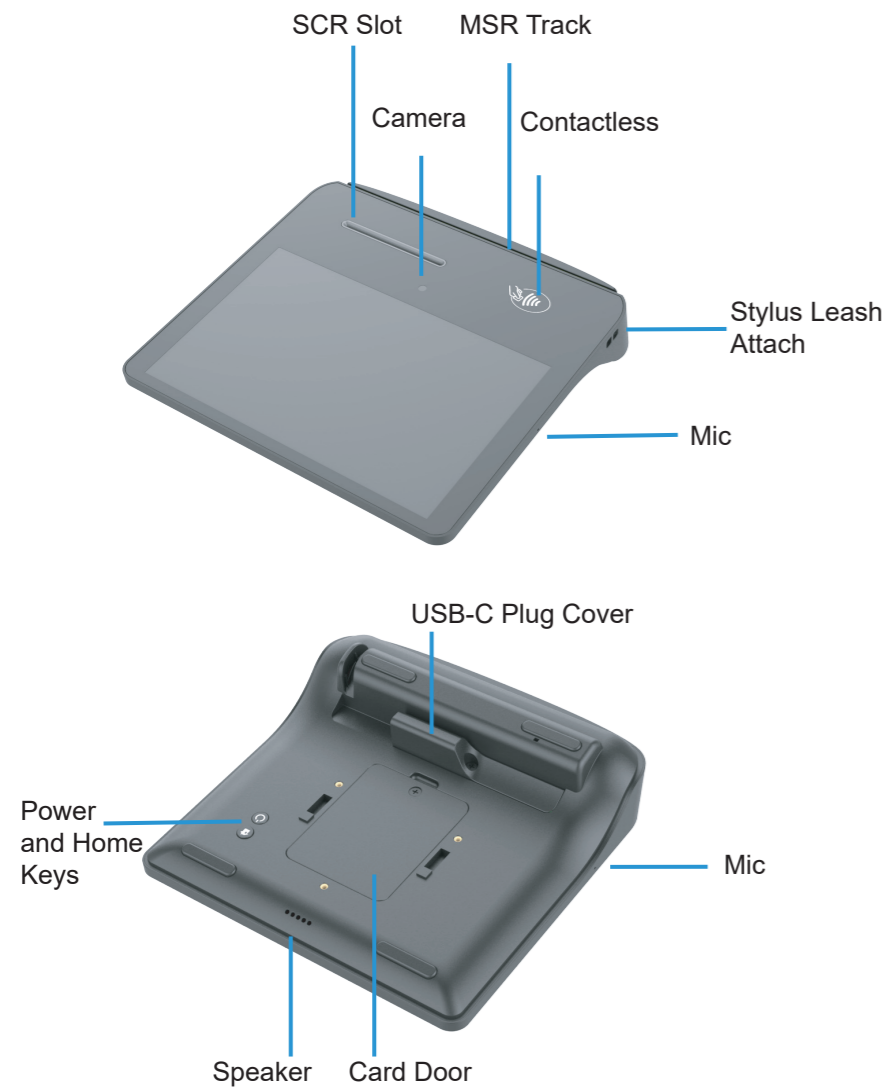

**Step 1:** Remove card door

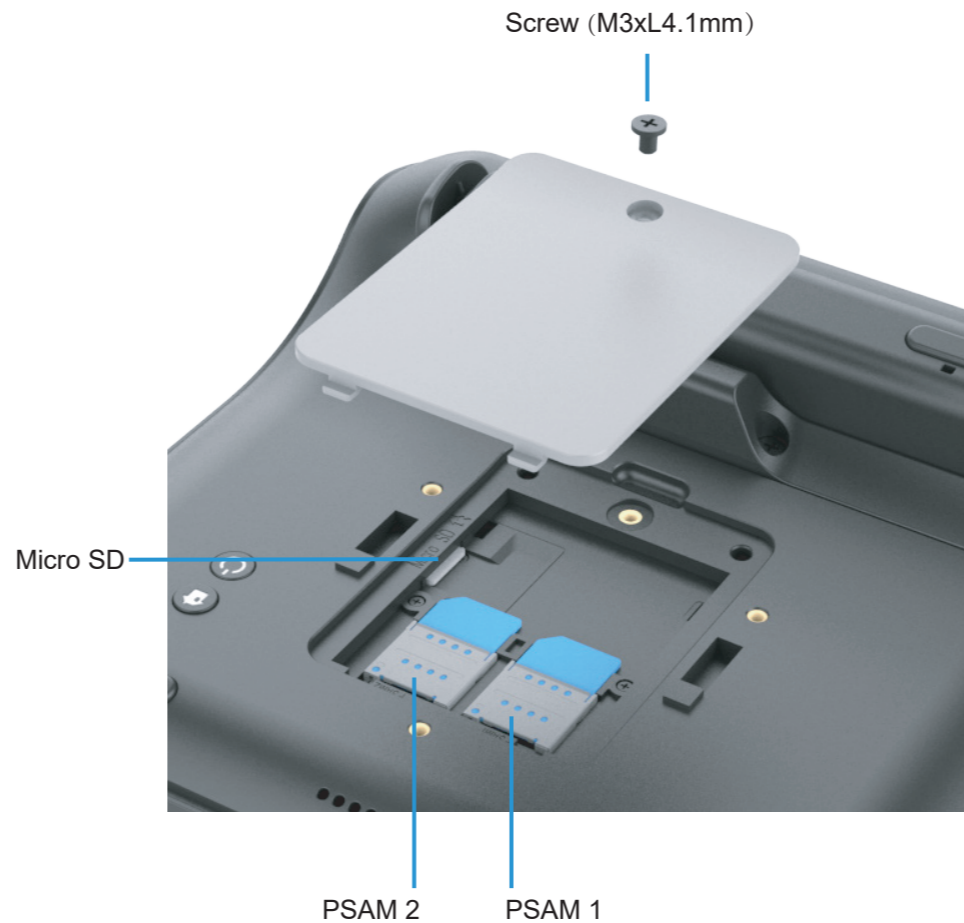

**Step 2:** Plug in right angle USB-C from Power Adapter or right angle USB-C (green plug) from optional Hubs. Mounting USB-C door.

