

Go to [www.elotouch.com/support](http://www.elotouch.com/support) to download user manual.

请访问[www.elotouch.com.cn](http://www.elotouch.com.cn) 获取用户手册 请保留备用

Maximum system power rating = 19V/90W

**Box Contents:**

- 1x Quick Install Guide
- 1x US Power cable
- 1x EU Power cable
- 1x Power Adapter
- 2x SMA Antenna
- 1x USB-C Cable
- 2x Side-mount Bracket
- 4x M4x5mm screws (For side-mount brackets)
- 4x M4x40mm Flat-head screws (for 100mm VESA mounting)



**EU Battery Declaration**

This symbol on the battery or on the packaging indicates that the battery provided with this product should not be treated as household waste. Instead, please separate the battery/batteries from other types of waste and recycle them through your local recycling system to protect the environment and health. The chemical symbol for lead (Pb) is added under this symbol if the battery contains more than 0.004% lead. Additionally, the chemical symbol for cadmium (Cd) is added under this symbol if the battery contains more than 0.002% cadmium. For more detailed information about the recycling of these batteries, please contact your local authority or the shop where you purchased the product or batteries.

Learn more about Elo at [EloTouch.com](http://EloTouch.com)

**America**

Tel +1 408 597 8000  
EloSales.NA@elotouch.com

**Europe (EMEA)**

Tel +32 16 930 136  
EMEA.sales@elotouch.com

**Asia Pacific**

Tel +86 (21) 3329 1385  
EloAsia@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc.



## Quick Installation Guide

# Elo Backpack<sup>®</sup> with Intel


Revision A  
P/N E735929



Elo Backpack® with Intel comes installed with Windows. Go to [www.elotouch.com/support](http://www.elotouch.com/support) for additional information such as user manual, detailed dimensional drawings, and alternate OS options such as Linux. **Remove any plastic protection film covering the venting holes before powering on the device.**

1. Mount the Elo Backpack using option 1a or 1b below

1a. The Elo Backpack has a 100mm through-hole mounting pattern. The mounting holes on the top side are countersunk for use with M4 flat-head screws. Screw length and type depends on mounting bracket thickness and what the Elo Backpack is being mounted to. Elo includes M4x40mm flat head screws for mounting.

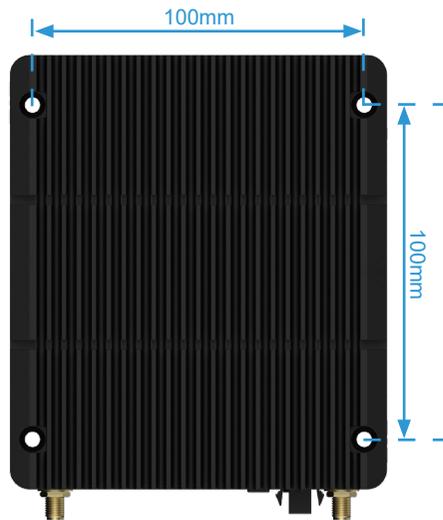

1b. M4x5mm machine screws (x4) are included to secure the brackets to the Elo Backpack. Mount side brackets to solid surface using four M4 or #8 mounting screws (not included) Screw type depends on surface material and construction.



2. Connect a display with HDMI, DisplayPort, or USB-C and WiFi antennas (if Wi-Fi is required). Connect the power cable with locking thumbscrew. Press the power button to power up the computer and proceed to registering Windows. Refer to user manual for detailed setup instructions.

