

Quick Installation Guide

Elo 2D Barcode Scanner

Elo Touch Solutions Technical Support

Online self-help: www.support.elotouch.com

North America 800-ELO-TOUCH Tel +1 408 597 8000

Tel +1 408 597 8000 Fax +1 408 597 8050 EloSales.NA@elotouch.com

Europe Tel +32 (0)16 70 45 00 Fax +32 (0)16 70 45 49 elosales@elotouch.com **Asia-Pacific** Tel +86 (21) 3329 1385 Fax +86 (21) 3329 1400 EloAsia@elotouch.com

Latin America Tel 786-923-0251

Fax 305-931-0124 EloSales.LATAM@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

© 2017 Elo Touch Solutions, Inc. All rights reserved. 1900001



Revision B P/N E487265

Installation

2

Please go to www.elotouch.com/support to verify you have the latest drivers before installing this device.



Select location to mount the bar code scanner. Elo recommends the lower location in either portrait or landscape orientation.



Install the 2 flat head screws included with the kit and cover the screws with the adhesive mylar covers if desired.

Windows Systems:

4

Visit the N3680 product page on the Honeywell Scanning and Mobility website to download and install EZConfig for Scanning (Version 4.5.20) and Honeywell Scanning and Mobility USB Serial Driver

Android systems:

The Elo Barcode Scanner is ready to use in its default mode. The scanner default mode is:

1. USB virtual com port interface

- 2. Presentation mode (always on)
- 3. Beep on scan

4. Set up to read most common codes.



USB Keyboard Mode



Please note: USB Keyboard Mode will automatically add a CR (carriage return) suffix. To return the scanner to the default configuration mode (USB Virtual COM Port), scan the barcode below:



For additional settings and configurations, please visit the product page on www.elotouch.com



Gently insert the bar code scanner into the peripheral bay taking care to ensure the connector mates properly.

Remove the selected peripheral

cover from the touchmonitor