

Learn more about Elo at **EloTouch.com**

America

Tel +1 408 597 8000 EloSales.NA@elotouch.com

Europe (EMEA)

Tel +32 16 930 136 EMEA.sales@elotouch.com

Asia Pacific

Tel +86 (21) 3329 1385 EloAsia@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc.





Quick Installation Guide

Computer Module for Elo IDS XXX3 Series


Revision B P/N E911261

Remove the screw from the ECM docking tray cover.



To remove the ECM, power down the system and loosen the security screw.


Gently pull the ECM out by the handle while supporting it on the bottom side to ensure it doesn't fall during removal.

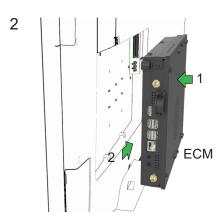

Place the ECM guide rails over the corresponding guides on the rear of the IDS Display and then slide it back toward the docking connectors. Visually inspect it to make sure it seated completely.



Use a screw driver to tighten the ECM security screw (hand tight only). The security screw must be installed to ensure the ECM does not come out inadvertantly.

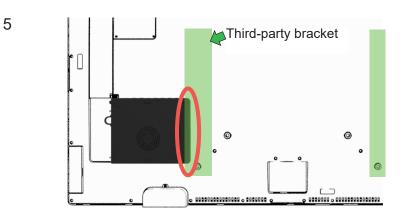

Some third-party VESA mounting systems may interfere with installation or removal of the ECM. The ECM kit includes a set of 15mm spacers, 35mm spacers, and longer mounting screws to aid in adding additional clearance between the VESA mount and the ECM. Additional screw lengths (not included) may be required depending on the mounting system. Do not block any air venting on the ECM or IDS display.

Elo low-profile wallmounts (See elotouch.com for P/N) does not require these spacers or screws when using an Elo ECM.



