

**Included Items:**

- E309480 includes one 1GB DDR2 Memory DIMM, 800MHz
- E355477 includes one 2GB DDR2 Memory DIMM, 800MHz
- E331130 includes one 4GB DDR2 Memory DIMM, 800MHz

# Quick Installation Guide

*Installing the memory module for B/C Series Touchcomputers and IDS Computer Module*

**Caution:**  
The touch computer must be unplugged before any installation occurs.



[www.elotouch.com](http://www.elotouch.com)



Revision B  
P/N E919251

**North America**  
Elo Touchsystems  
301 Constitution Drive  
Menlo Park, CA 94025  
www.elotouch.com

**Elo Technical Support**  
Online self-help:  
[www.elotouch.com/go/websupport](http://www.elotouch.com/go/websupport)  
**Technical Support contacts in your region:**  
[www.elotouch.com/go/contactsupport](http://www.elotouch.com/go/contactsupport)

**Europe**  
Tel +32 (0)16 35 21 00  
Fax +32 (0)16 35 21 01  
elosales@elotouch.com

**Asia-Pacific**  
Tel +81 (45) 478-2161  
Fax +81 (45) 478-2180  
www.tps.co.jp

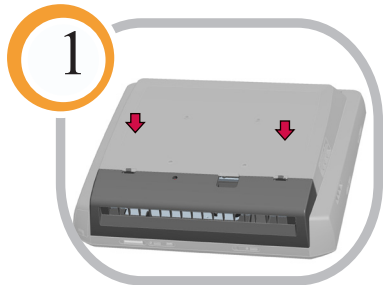
**Latin America**  
Tel 1-305-428-5210  
Fax 1-305-717-4909  
www.elotouch.com.ar

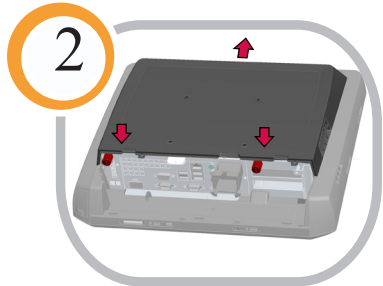
Elo (logo), Elo TouchSystems, TE (logo) and Tyco Electronics are trademarks of the Tyco Electronics group of companies and its licensors.

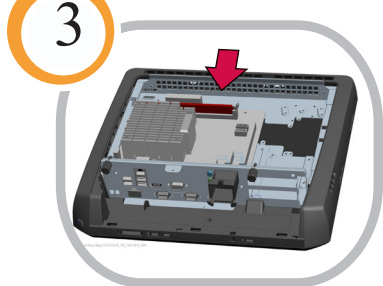


Our commitment. Your advantage.

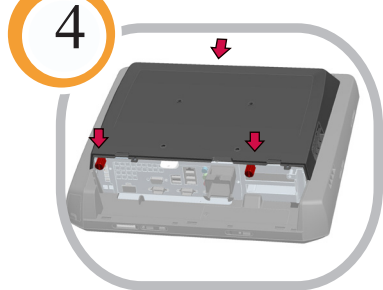
For B/C Series Touchcomputers

- 

▶▶▶ Remove the cable cover.
- 

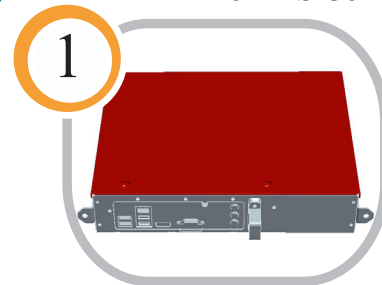
▶▶▶ Remove the rear cover by unscrewing the two thumb screws and sliding the cover upward.
- 

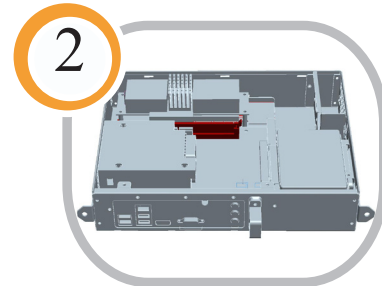
▶▶▶ Insert memory module into an available socket, or replace an existing module.

Note: Model B1, B3, C1, C3 touchcomputers have only one memory socket.
- 

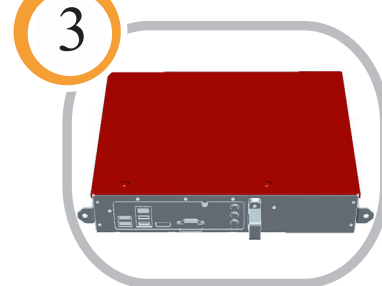
▶▶▶ Re-install the rear cover, tighten the thumb screws, and reinstall the cable cover.

For IDS Computer Modules

- 

▶▶▶ Remove the two retaining screws from the cover plate of the computer module.
- 

▶▶▶ Insert memory module into an available socket, or replace an existing module.

Note: Model ECM1 has only one memory socket.
- 

▶▶▶ Reinstall the retaining screws on the cover plate of the computer module.