



[www.elotouch.com](http://www.elotouch.com)

## Quick Installation Guide

# Magnetic Stripe Reader Elo E-Series AiO Touchcomputer

Revision B  
P/N E134671

### Elo Touch Solutions Technical Support

Online self-help:  
[www.support.elotouch.com](http://www.support.elotouch.com)

#### North America

800-ELO-TOUCH  
Tel +1 408 597 8000  
Fax +1 408 597 8050  
[EloSales.NA@elotouch.com](mailto:EloSales.NA@elotouch.com)

#### Europe

Tel +32 (0)16 70 45 00  
Fax +32 (0)16 70 45 49  
[elosales@elotouch.com](mailto:elosales@elotouch.com)

#### Asia-Pacific

Tel +86 (21) 3329 1385  
Fax +86 (21) 3329 1400  
[EloAsia@elotouch.com](mailto:EloAsia@elotouch.com)

#### Latin America

Tel 786-923-0251  
Fax 305-931-0124  
[EloSales.LATAM@elotouch.com](mailto:EloSales.LATAM@elotouch.com)

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

© 2017 Elo Touch Solutions, Inc. All rights reserved.




## Installation


Remove all power from the system before installation.

Go to [www.elotouch.com/support](http://www.elotouch.com/support) to download the configuration and demo utility for this device.


- 1 Remove access cover "A" and "B".

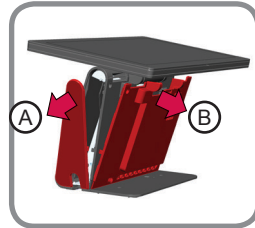


- 2 Remove the two mounting screw covers on the back of the display.

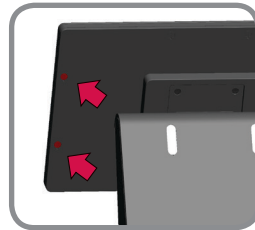


- 3 Secure the MSR to the back of the display as shown using the included screws.

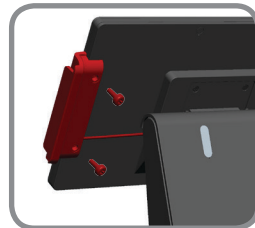

- 4 Install two new screw covers over the MSR mounting screws.

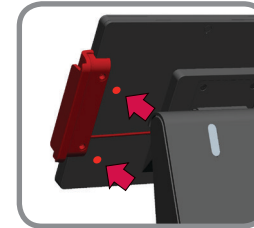

- 5 Connect the MSR to an available USB port on the computer I/O panel and secure the cable using the two clips indicated at right.

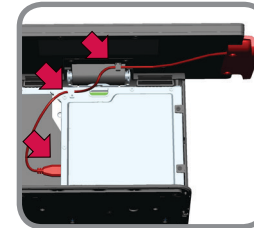

- 6 Reinstall cover "B" and then cover "A".

