



[www.elotouch.com](http://www.elotouch.com)

## Quick Installation Guide

# WallMount for ESYXX AiO Touchcomputer

Revision B  
P/N E148959

### Elo Touch Solutions Technical Support

Online self-help:  
[www.support.elotouch.com](http://www.support.elotouch.com)

#### North America

800-ELO-TOUCH  
Tel +1 408 597 8000  
Fax +1 408 597 8050  
[EloSales.NA@elotouch.com](mailto:EloSales.NA@elotouch.com)

#### Europe

Tel +32 (0)16 70 45 00  
Fax +32 (0)16 70 45 49  
[elosales@elotouch.com](mailto:elosales@elotouch.com)

#### Asia-Pacific

Tel +86 (21) 3329 1385  
Fax +86 (21) 3329 1400  
[EloAsia@elotouch.com](mailto:EloAsia@elotouch.com)

#### Latin America

Tel 786-923-0251  
Fax 305-931-0124  
[EloSales.LATAM@elotouch.com](mailto:EloSales.LATAM@elotouch.com)

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.


Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

© 2017 Elo Touch Solutions, Inc. All rights reserved.




## Installation


For more detailed dimensional information, please refer to the AiO or monitor dimensional drawings at [www.elotouch.com](http://www.elotouch.com)

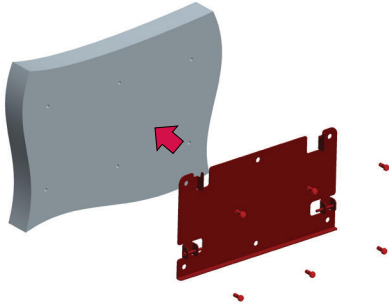

Mount the wall bracket to the wall using 6 fasteners appropriate for the type of wall structure following all applicable building code standards.

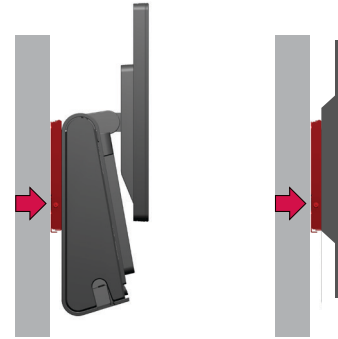

Hang the AiO on the wall bracket and secure using 2 M3 screws included with the kit on the left and right side of the bracket.

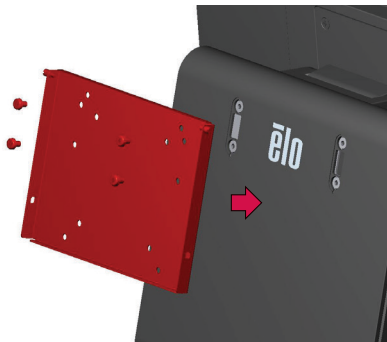

Attach the other bracket to the AiO system or monitor using the 4 M4 screws included in the kit.