

Elo Technical Support

Online self-help:www.elotouch.com/support

America

800-FLO-TOUCH Tel +1 408 597 8000 EloSales.NA@elotouch.com

Europe(EMEA)

Tel +32 (0)16 70 45 00 elosales@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc.

Asia-Pacific

Tel +86 (21) 3329 1385 FloAsia@elotouch.com

Quick Installation Guide

Magnetic Stripe Reader For 1515/1715L LCD Desktop

> Revision D P/N E208145



Installation

Please go to www.elotouch.com/support to verify you have the latest drivers before installing this device.

]



Open the box containing the MSR kit.

2



Verify kit contents:

 
- ▶ MSR device with USB cable*1
- ▶ Mounting screws*2
- ▶ Touch Tools Driver software CD*1

3



Place monitor face down on a clean, soft and smooth surface.

4



Align and insert mounting screws into holes and tighten using a Philips screwdriver.

5



Attach USB cable from MSR device to the USB port on the rear of the computer.

6



Turn on power to the computer.