

Quick Installation Guide

LCD Touchmonitor and Touch Driver

Revision_G
SW602681

Elo Touch Solutions Technical Support

Online self-help: www.elotouch.com/go/websupport

Technical Support contacts in your region:

www.elotouch.com/go/contactsupport

North America

Elo Touch Solutions
1033 McCarthy Boulevard
Milpitas, CA 95035

800-ELO-TOUCH

Tel +1 408 597 8000

Fax +1 408 597 8050

customerservice@elotouch.com

Europe

Tel +32 (0)16 70 45 00

Fax +32 (0)16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385

Fax +86 (21) 3329 1400

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com



The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

Installation

1 Power

Four power connection options are shown, each with a yellow arrow pointing to the connection point. The options are: a standard AC power cord, a DC power adapter, and two different power cables with their respective ports. Each option is separated by an 'OR' icon.

4 OSD Remote (if applicable)

Two OSD remote options are shown, each with a yellow arrow pointing to the connection point. The options are: a standard remote and a USB remote. Each option is separated by an 'OR' icon.

2 Video

Four video connection options are shown, each with a yellow arrow pointing to the connection point. The options are: HDMI, DVI, VGA, and DisplayPort. Each option is separated by an 'OR' icon.

5 Install

<http://elotouch.com/Support/Downloads/dnld.asp>

The screenshot shows the ELO Touch Solutions website. The 'UNPACK AND RUN' section is highlighted, showing instructions for Windows XP and Windows 7. A yellow arrow points from the website to the installation screens.

Windows XP

The Windows XP installation screen shows the 'ELO TOUCH SOLUTIONS' logo and the text 'Welcome to the ELO Touchscreen Setup.' Below the logo, there are three checkboxes: 'Install Serial Touchscreen Drivers', 'Install USB Touchscreen Drivers', and 'Install AMX Touchscreen Driver'. The 'Install USB Touchscreen Drivers' checkbox is checked. There are 'Back', 'Next', and 'Cancel' buttons at the bottom.

Windows 7

The Windows 7 installation screen shows the 'ELO TOUCH SOLUTIONS' logo and the text 'Welcome to the ELO Touchscreen Setup.' Below the logo, there are three checkboxes: 'Install Serial Touchscreen Drivers', 'Install USB Touchscreen Drivers', and 'Install AMX Touchscreen Driver'. The 'Install USB Touchscreen Drivers' checkbox is checked. There are 'Back', 'Next', and 'Cancel' buttons at the bottom.

3 Touch

Two touch connection options are shown, each with a yellow arrow pointing to the connection point. The options are: IOIOI and a USB touch controller. Each option is separated by an 'OR' icon.