

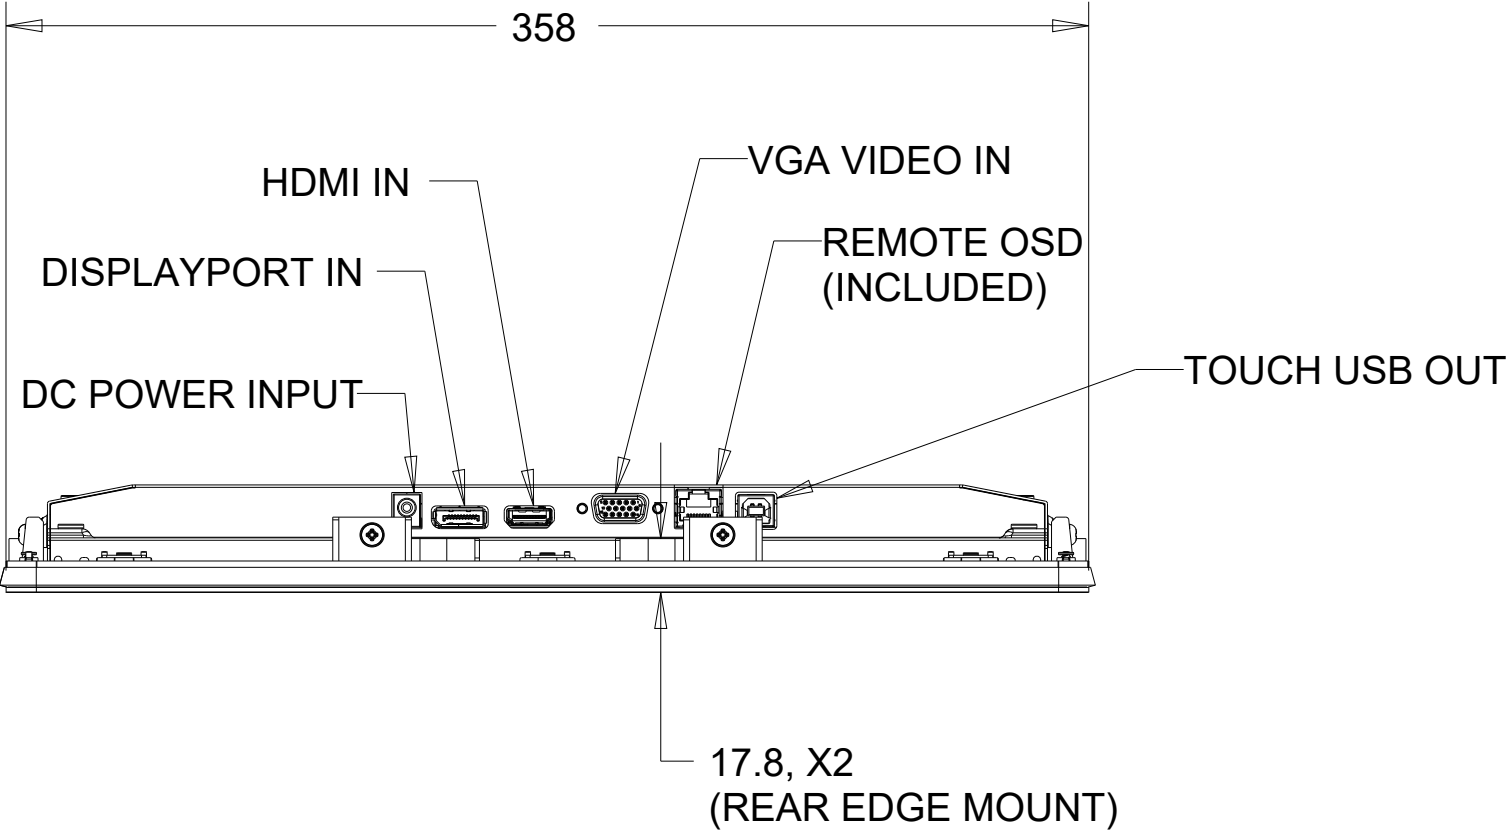
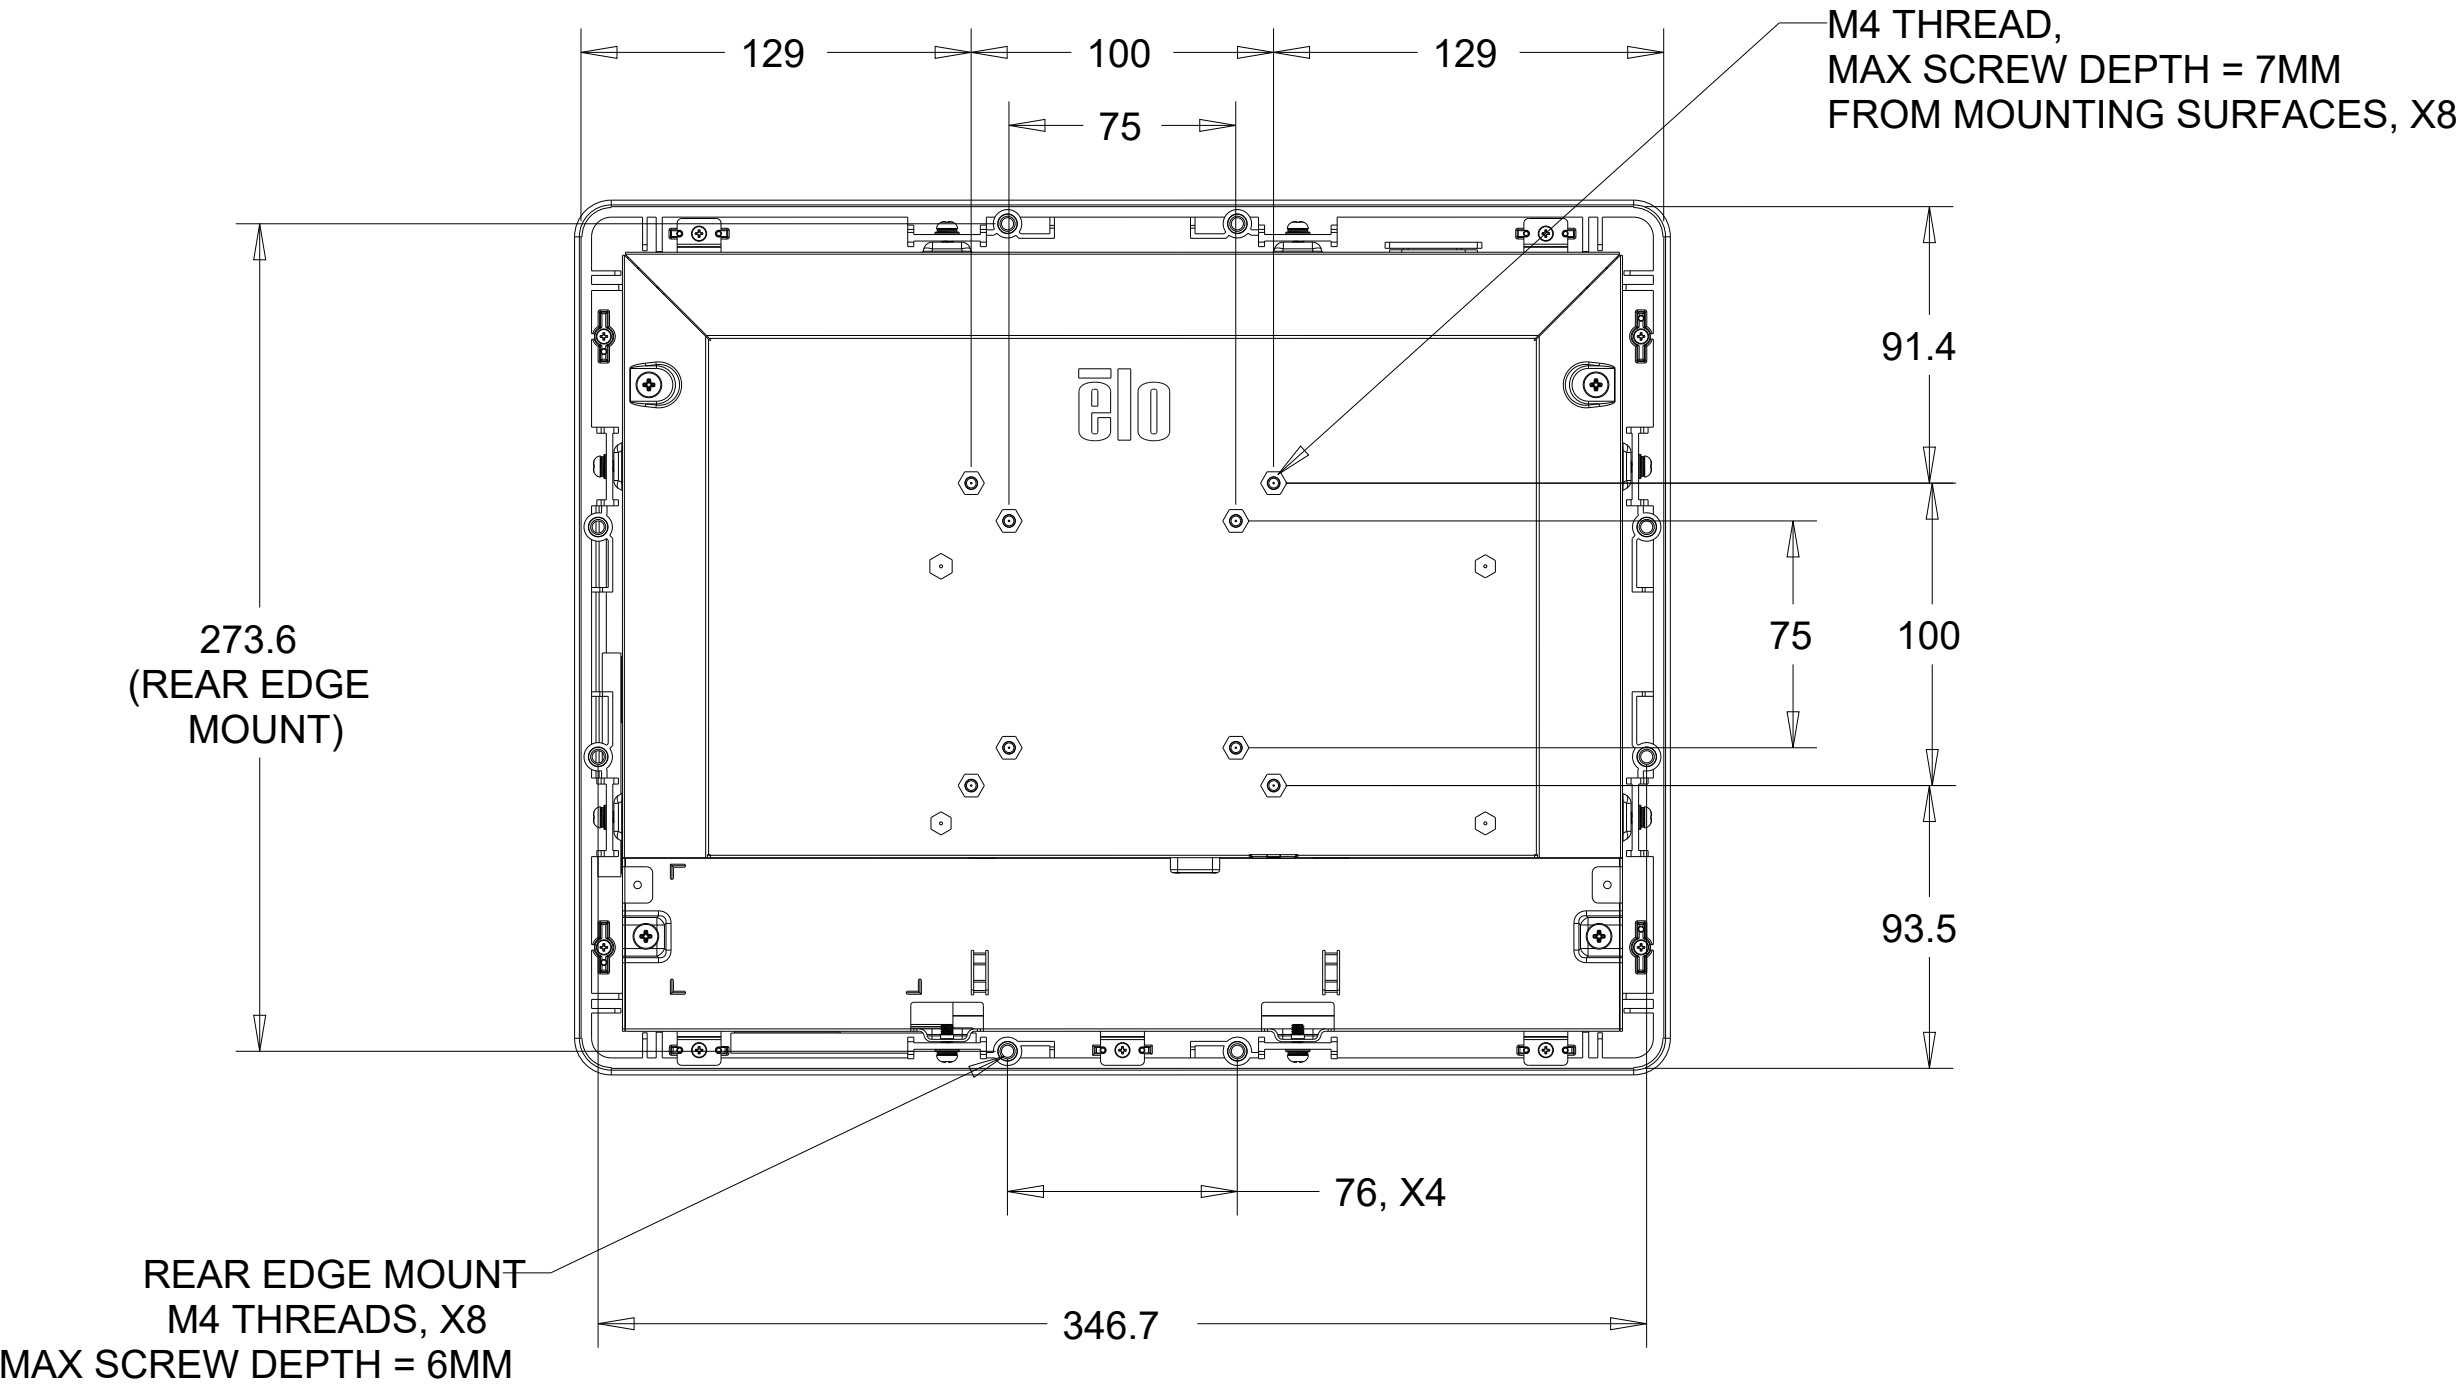
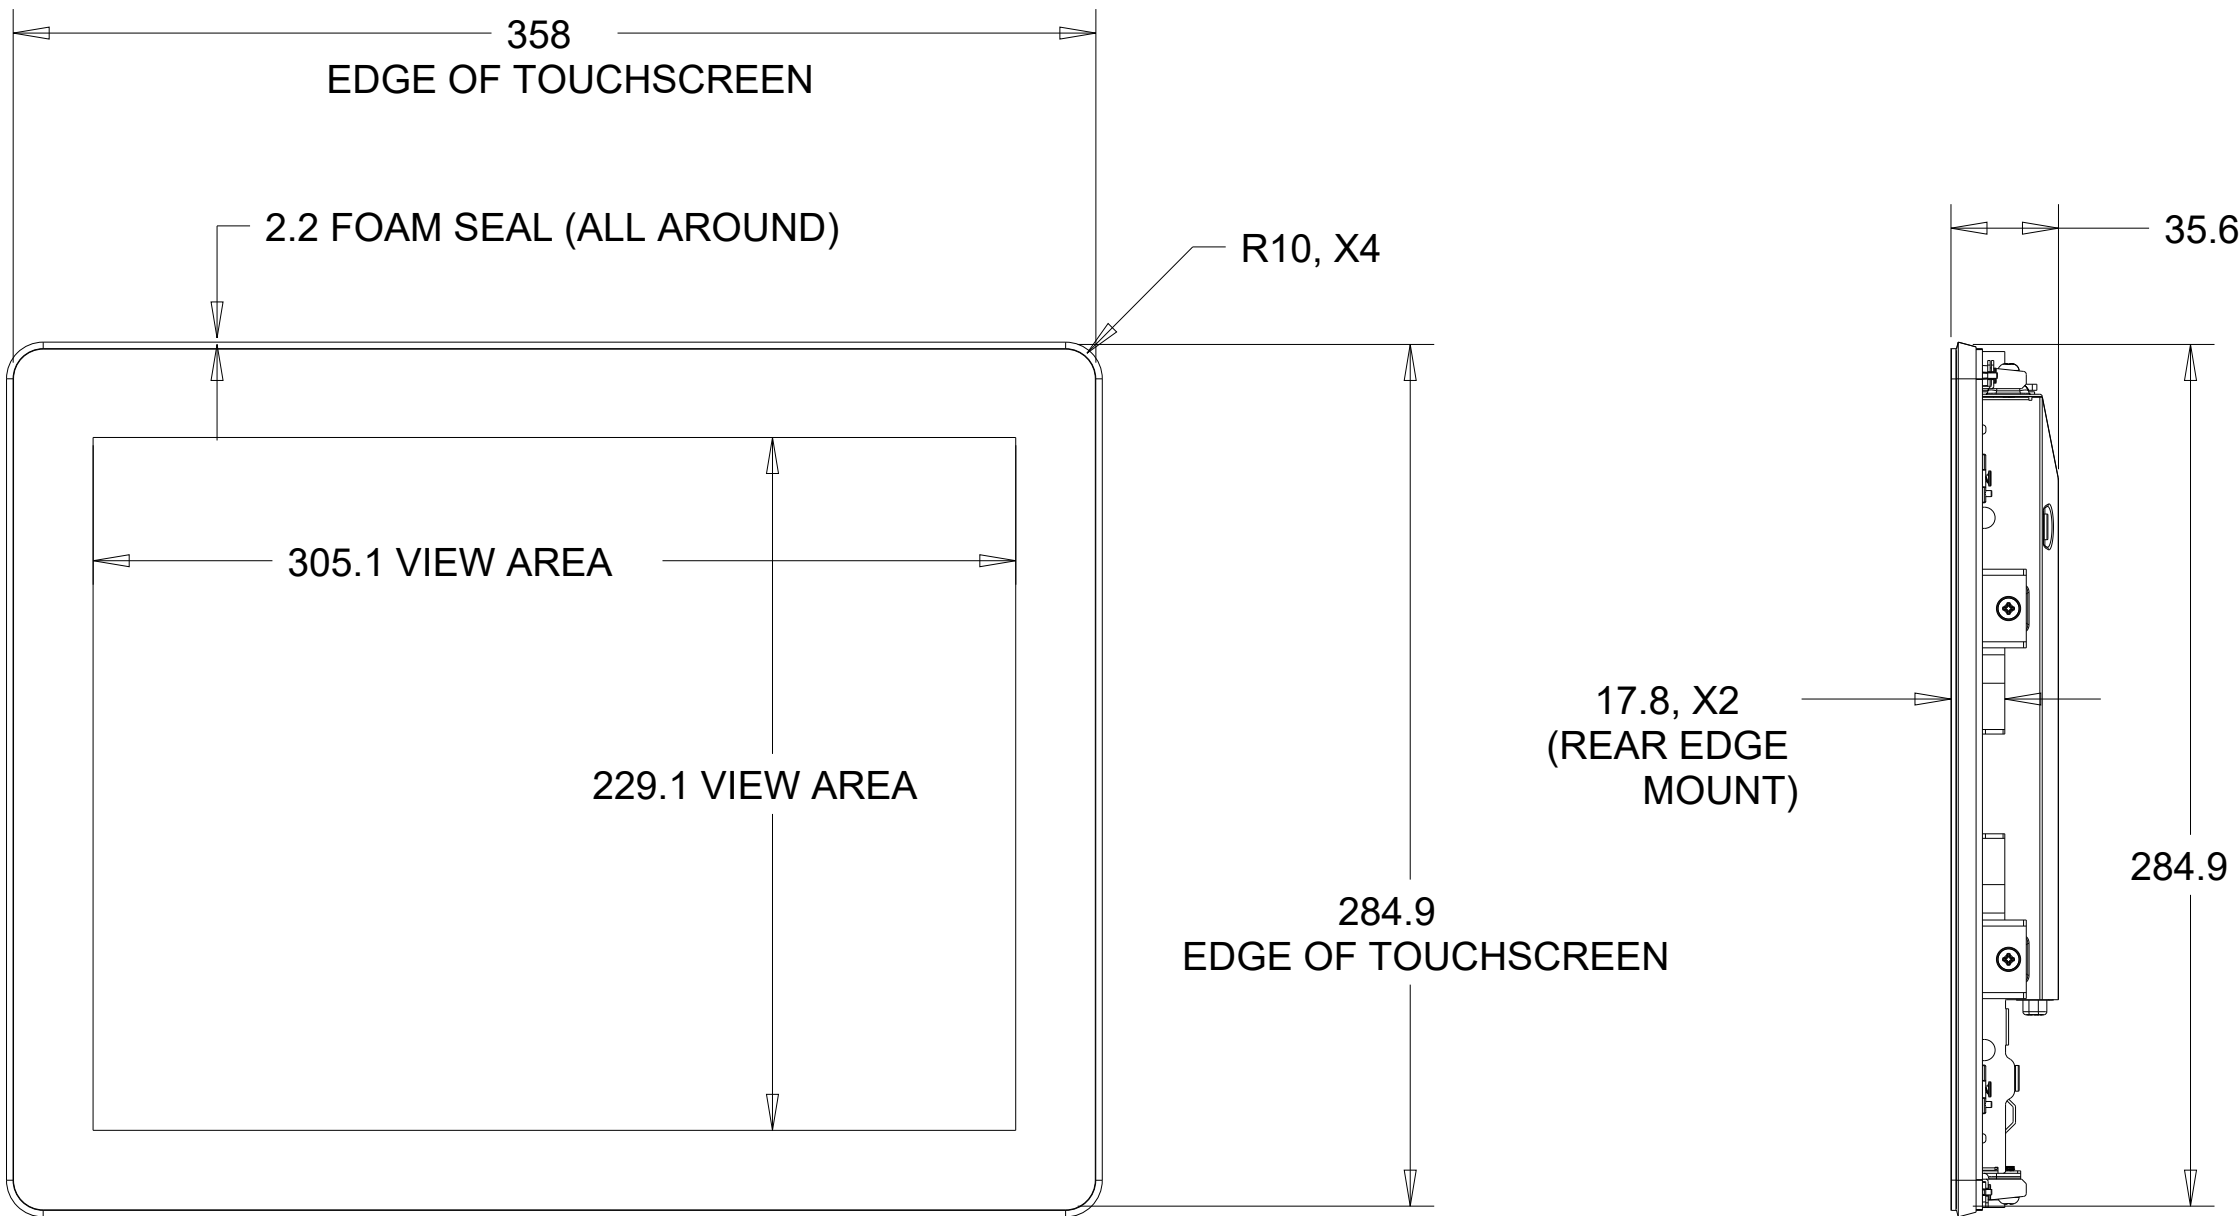
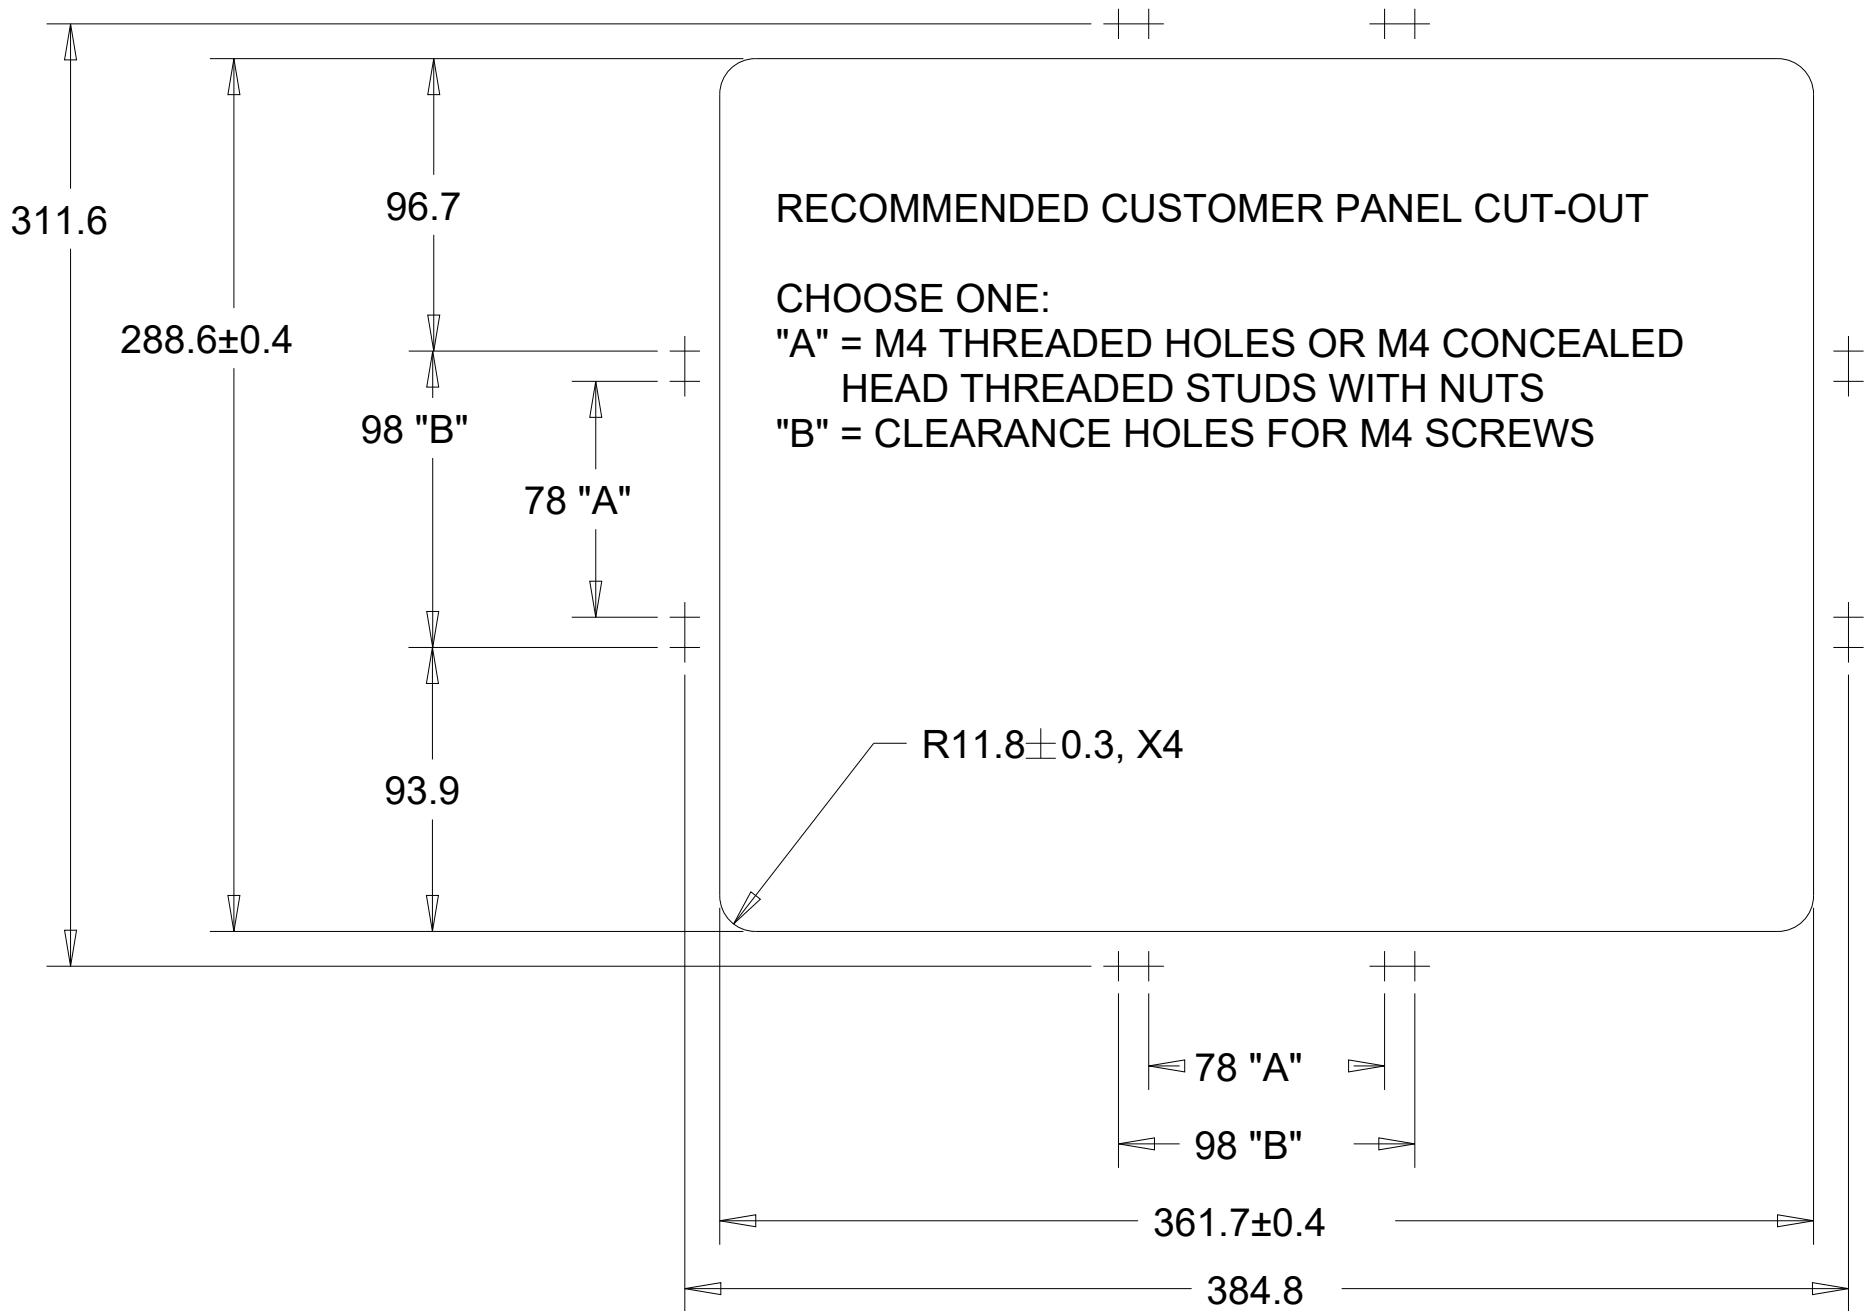
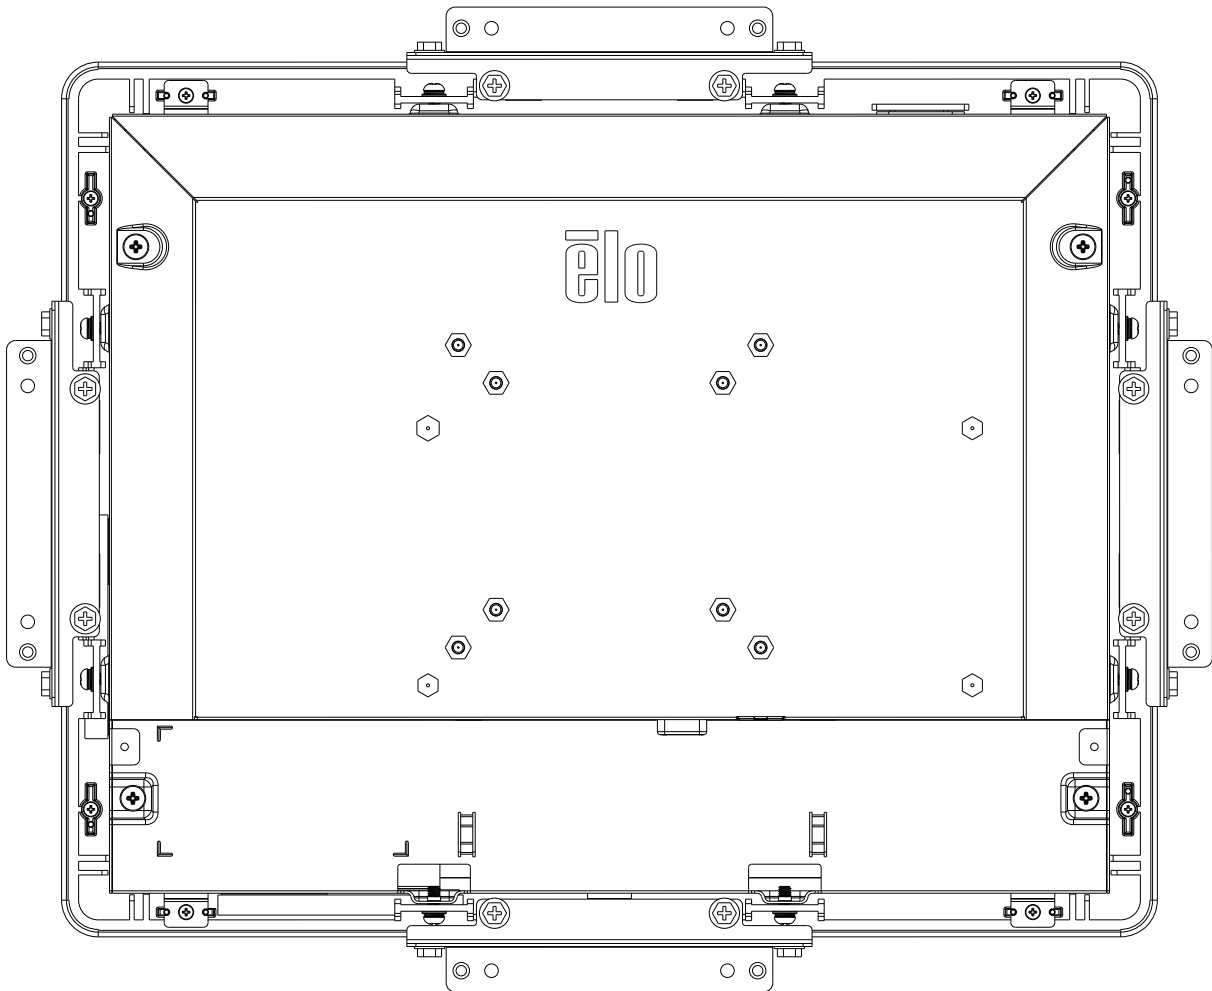


ZERO BEZEL PCAP MODEL

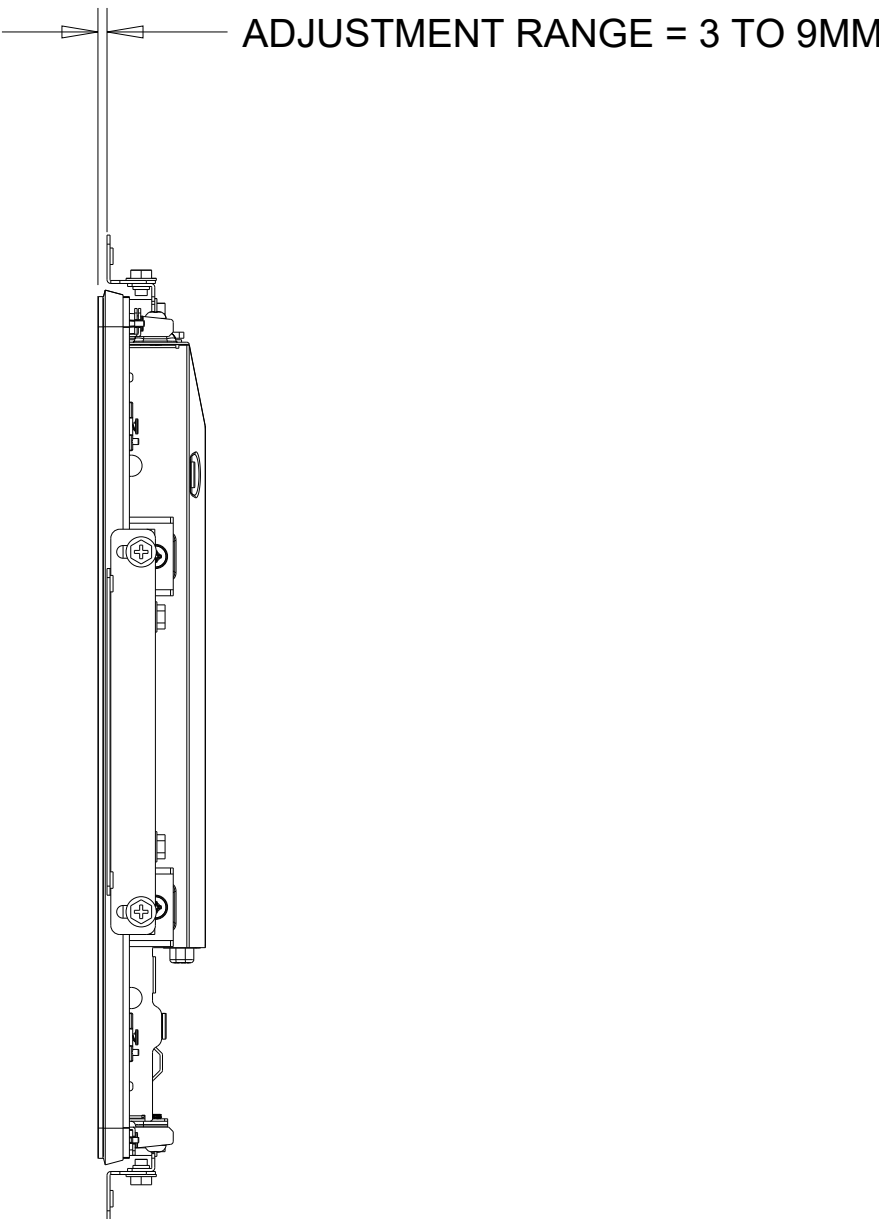

ZERO BEZEL PCAP MODEL

WITH FLUSH MOUNTING BRACKETS (4 SETS INCLUDED)
REPLACEMENT BRACKET KIT P/N E139556 AVAILABLE SEPARATELY

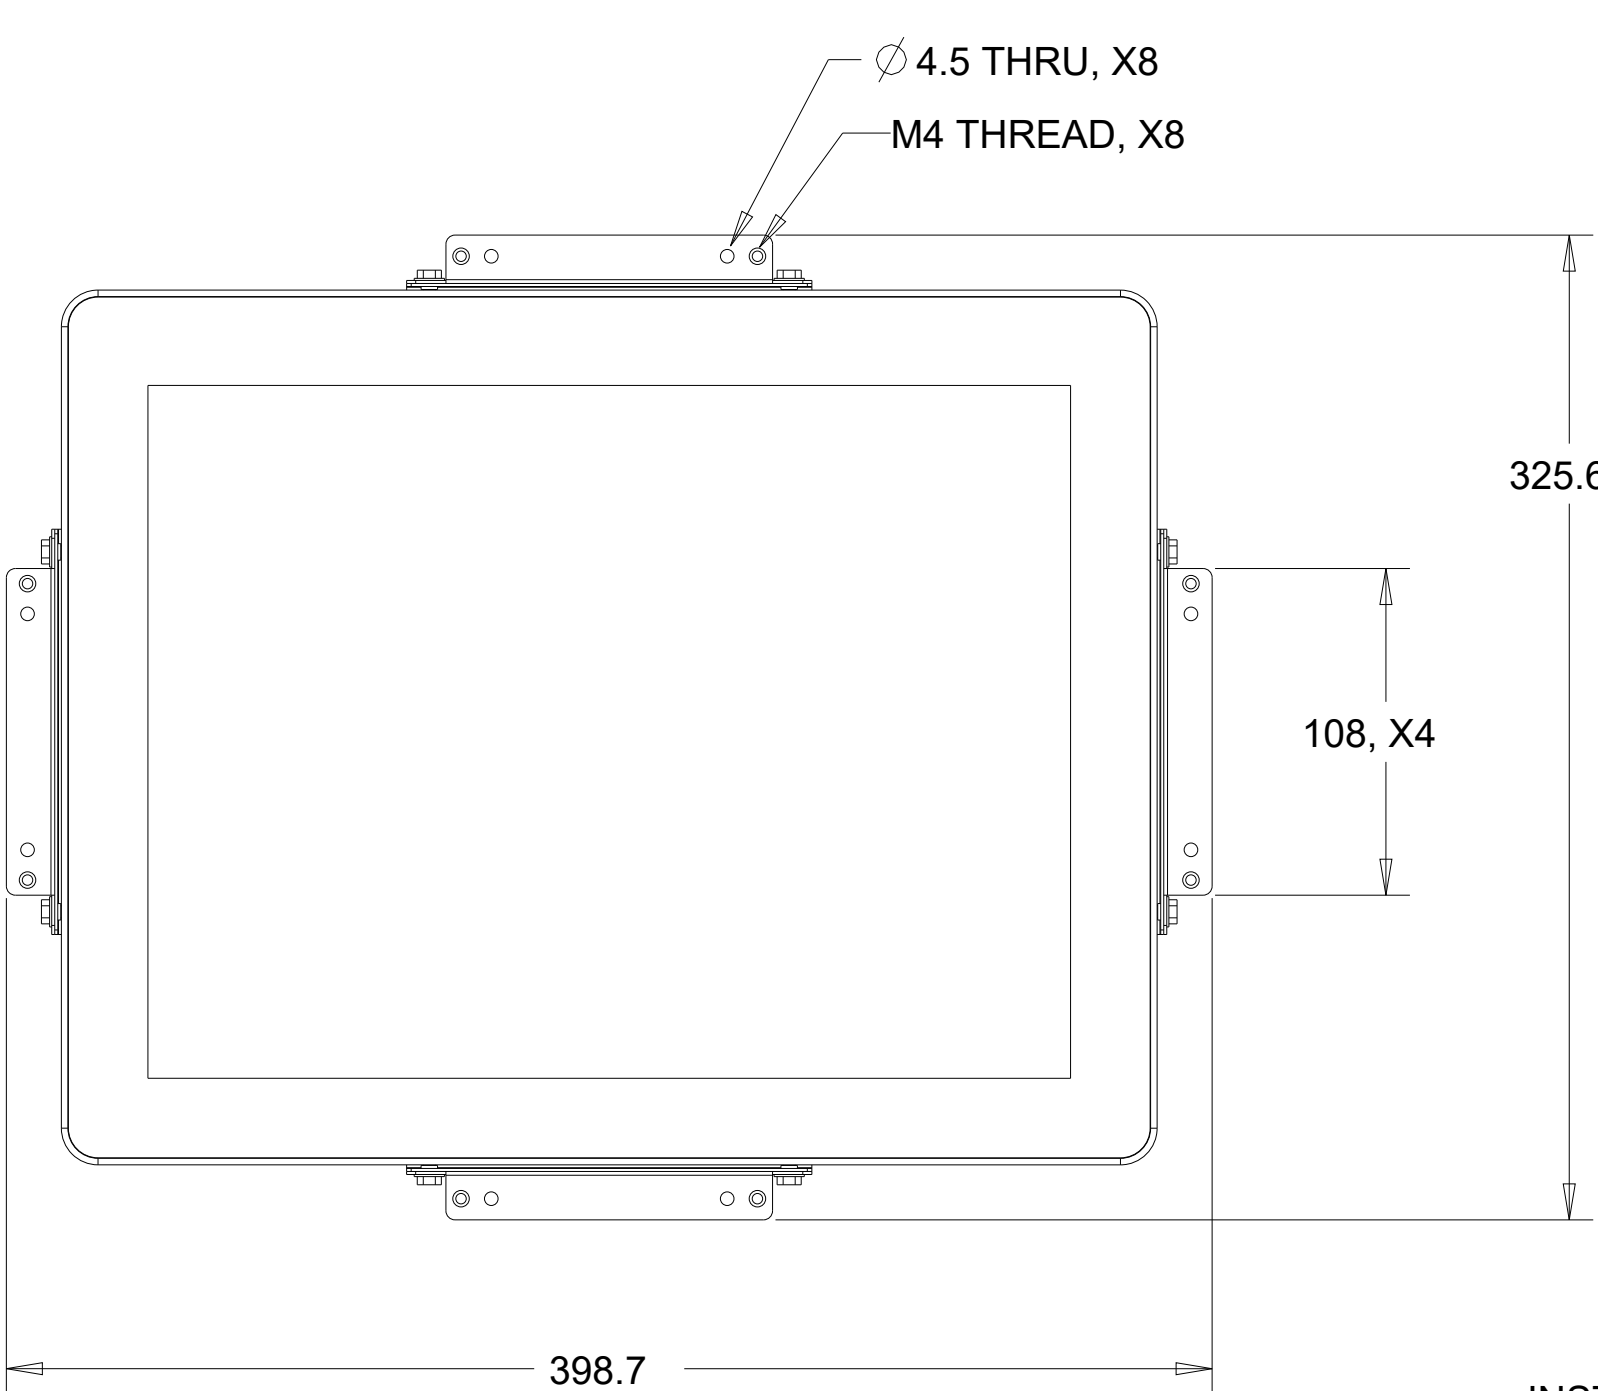



RECOMMENDED CUSTOMER PANEL CUT-OUT

CHOOSE ONE:






"A" = M4 THREADED HOLES OR M4 CONCEALED HEAD THREADED STUDS WITH NUTS

"B" = CLEARANCE HOLES FOR M4 SCREWS

- INSTALLATION NOTES:
1. ATTACH BRACKET "A" TO CUSTOMER PANEL (ALL FOUR SIDES) WITH INCLUDED SCREWS
 2. ATTACH BRACKET "B" TO TOUCHMONITOR (ALL FOUR SIDES)
 3. PLACE TOUCHMONITOR INTO CUSTOMER PANEL OPENING, TAKING CARE NOT TO DAMAGE FOAM SEAL
 4. ADJUST DEPTH OF BRACKETS "B" SO THE MONITOR IS FLUSH WITH CUSTOMER PANEL
 5. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND WITH INCLUDED SCREWS

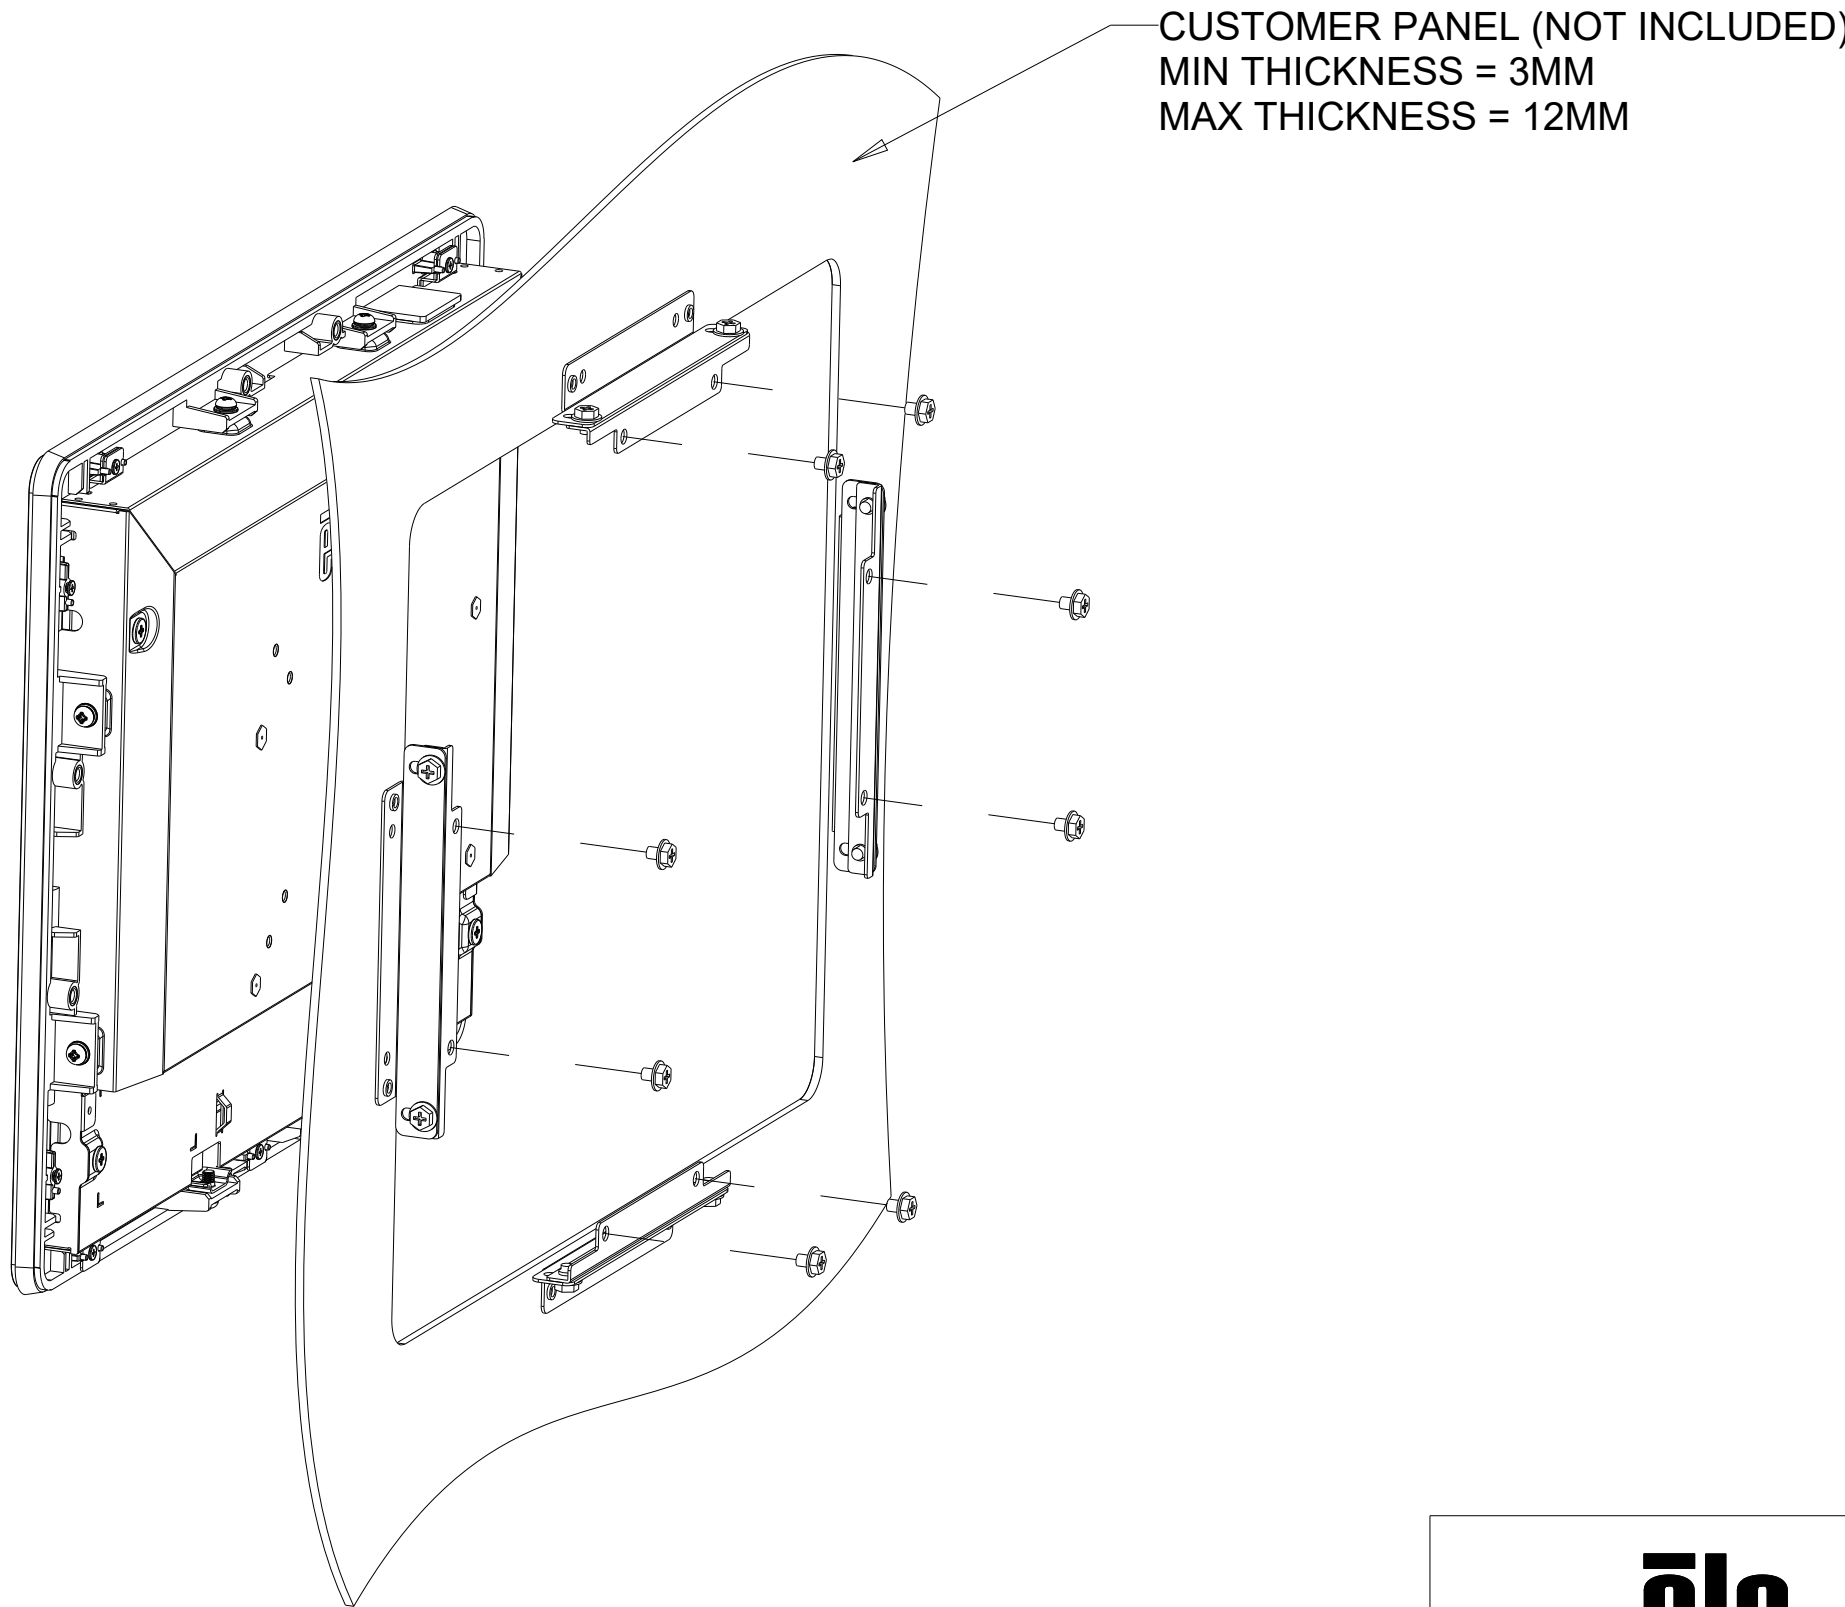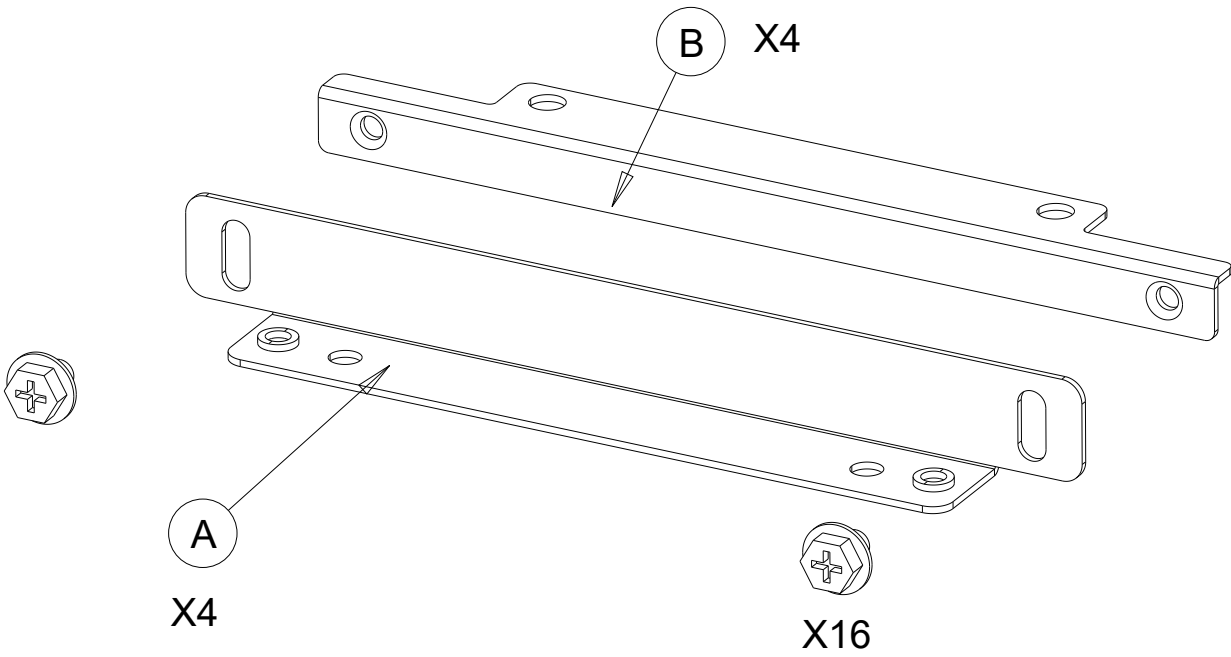




BEZELED PCAP,INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

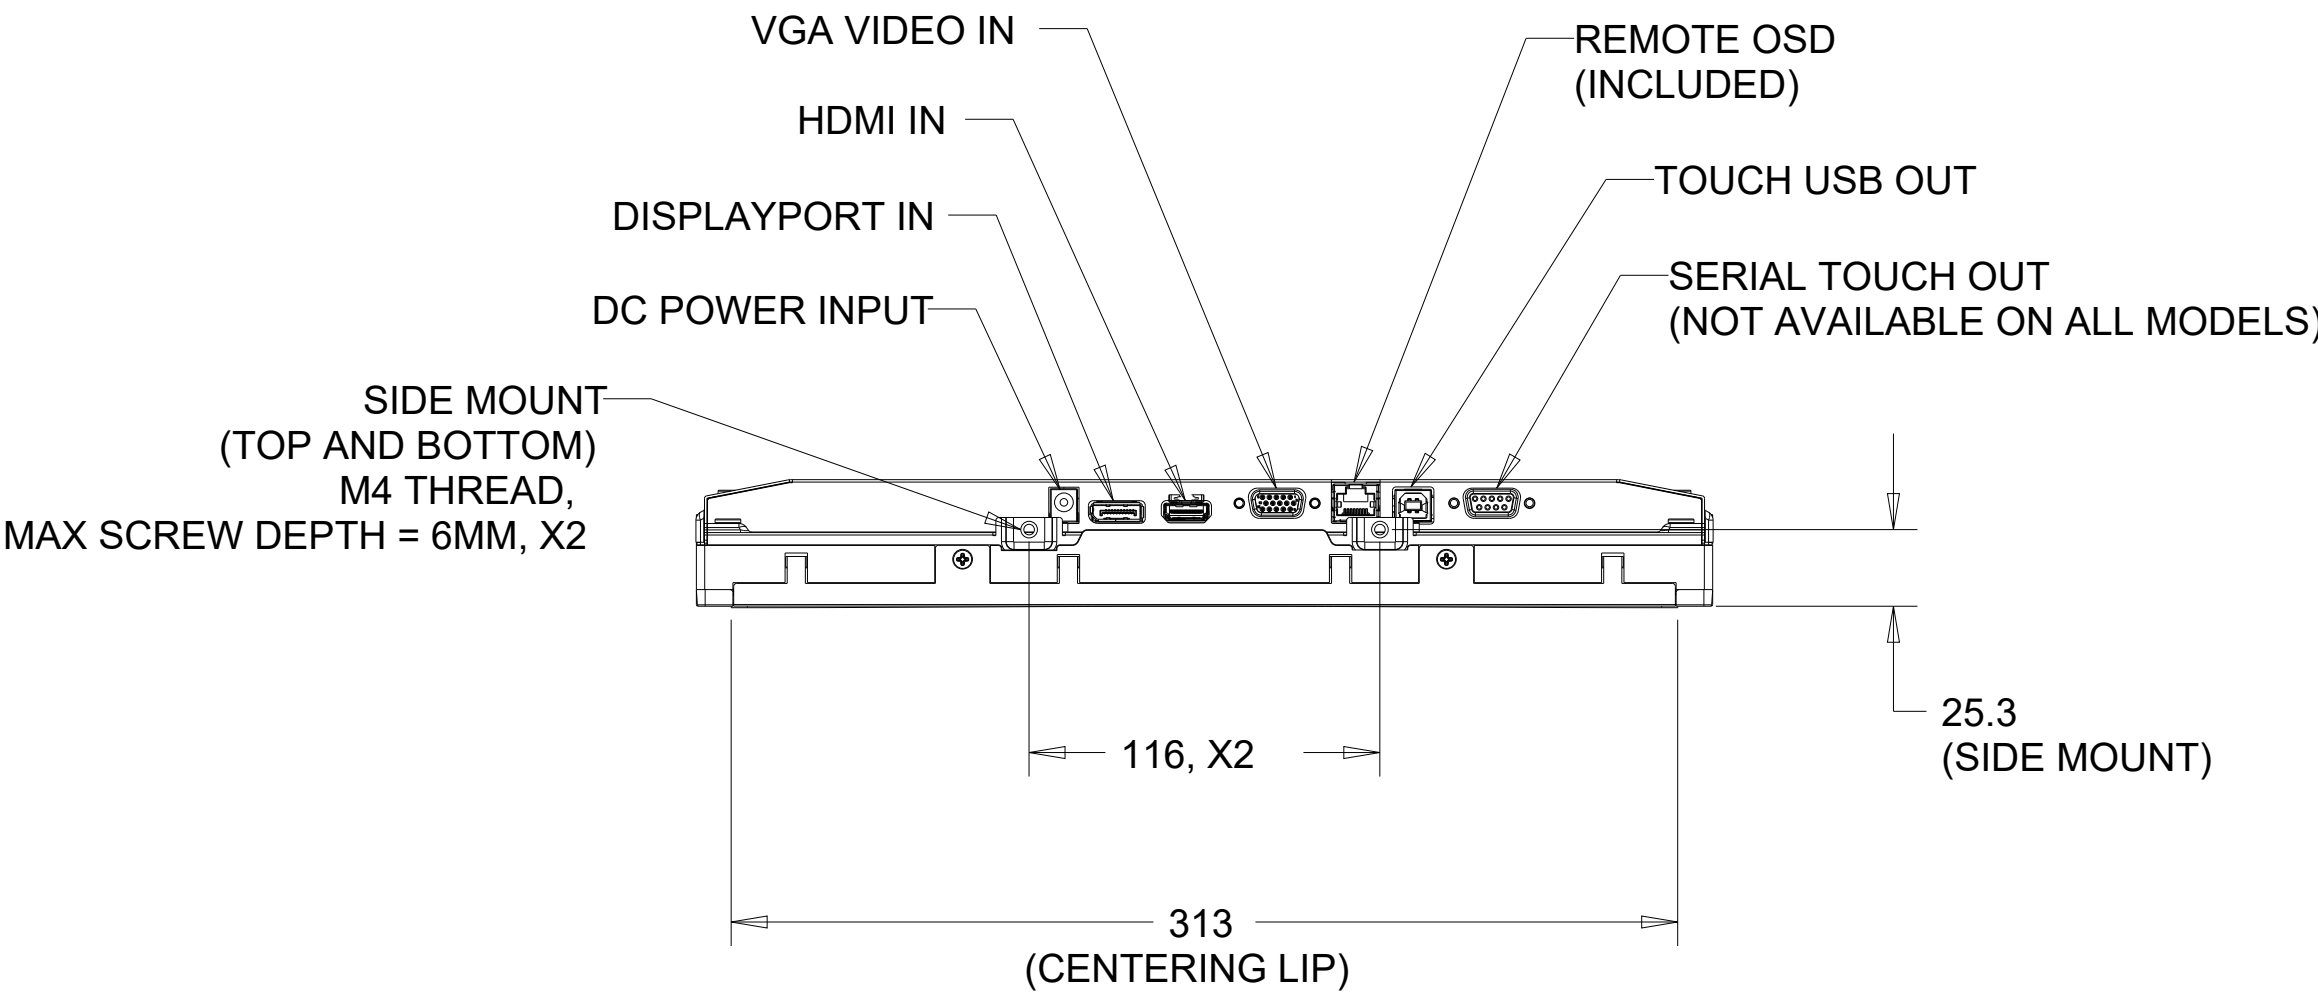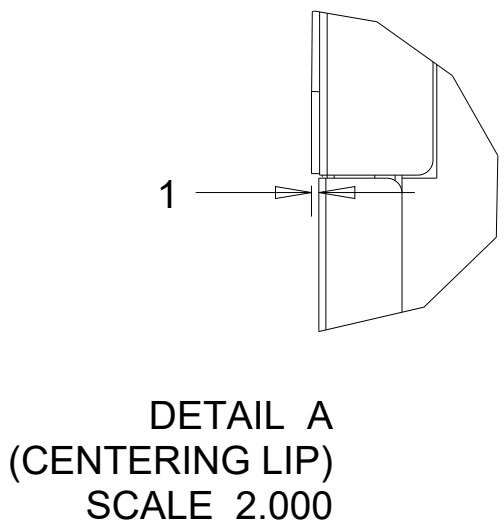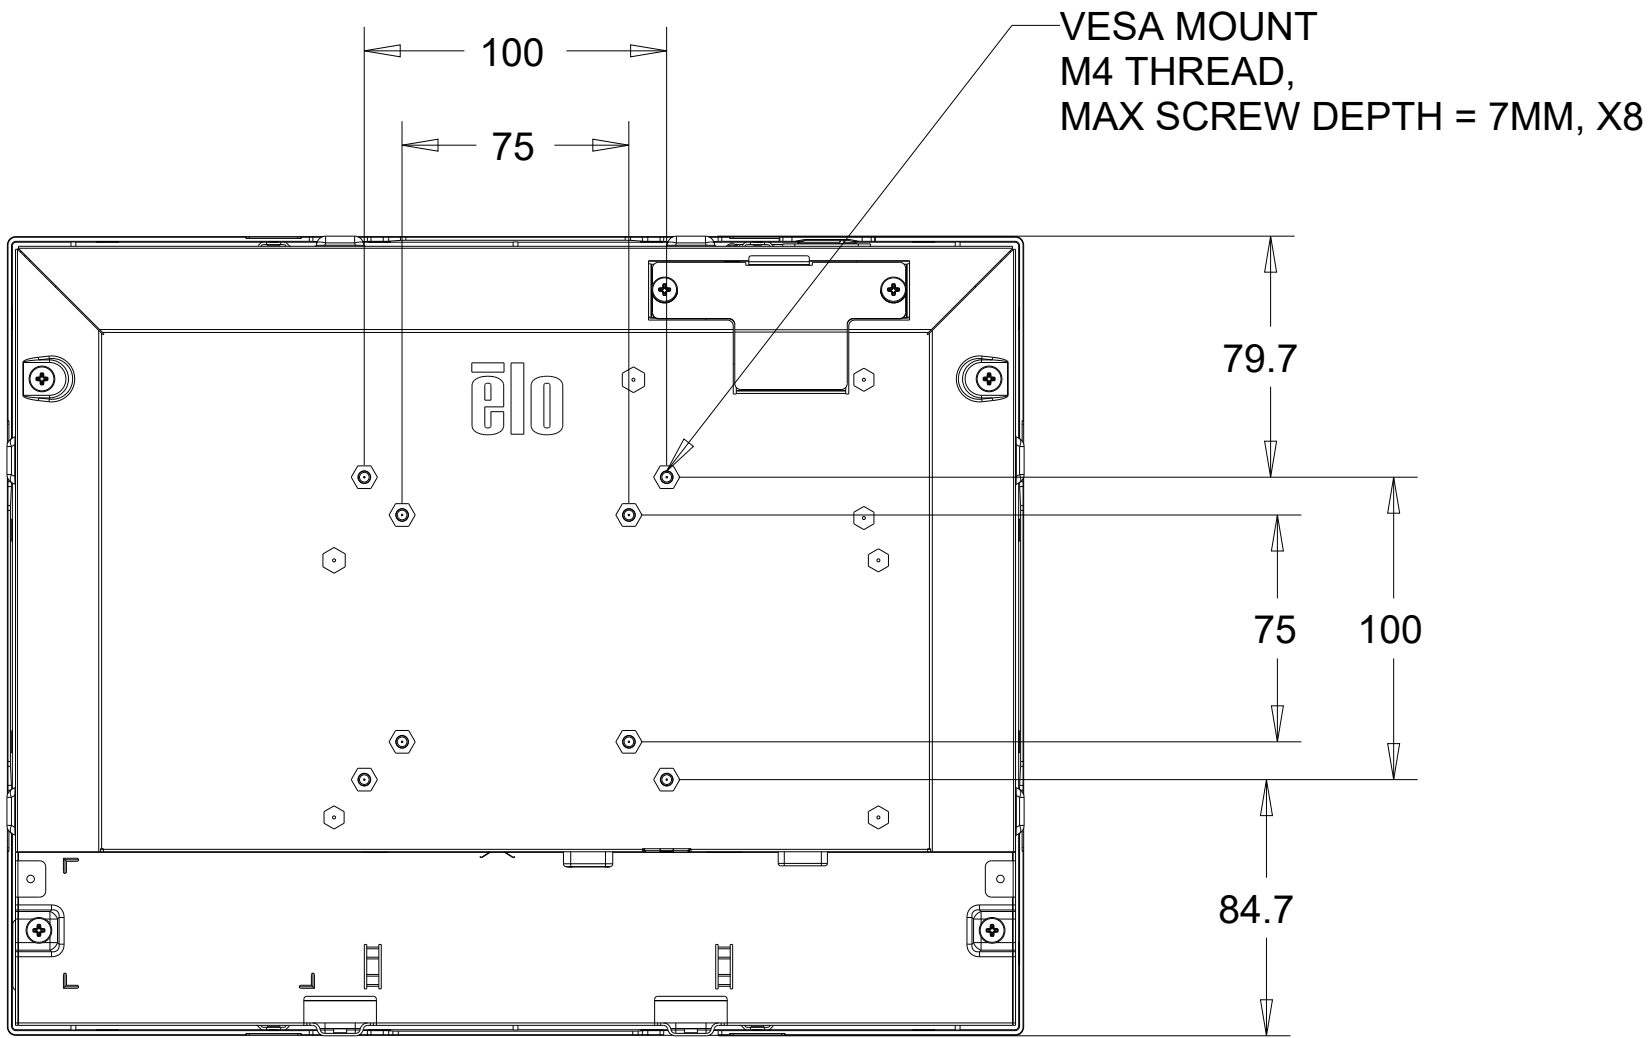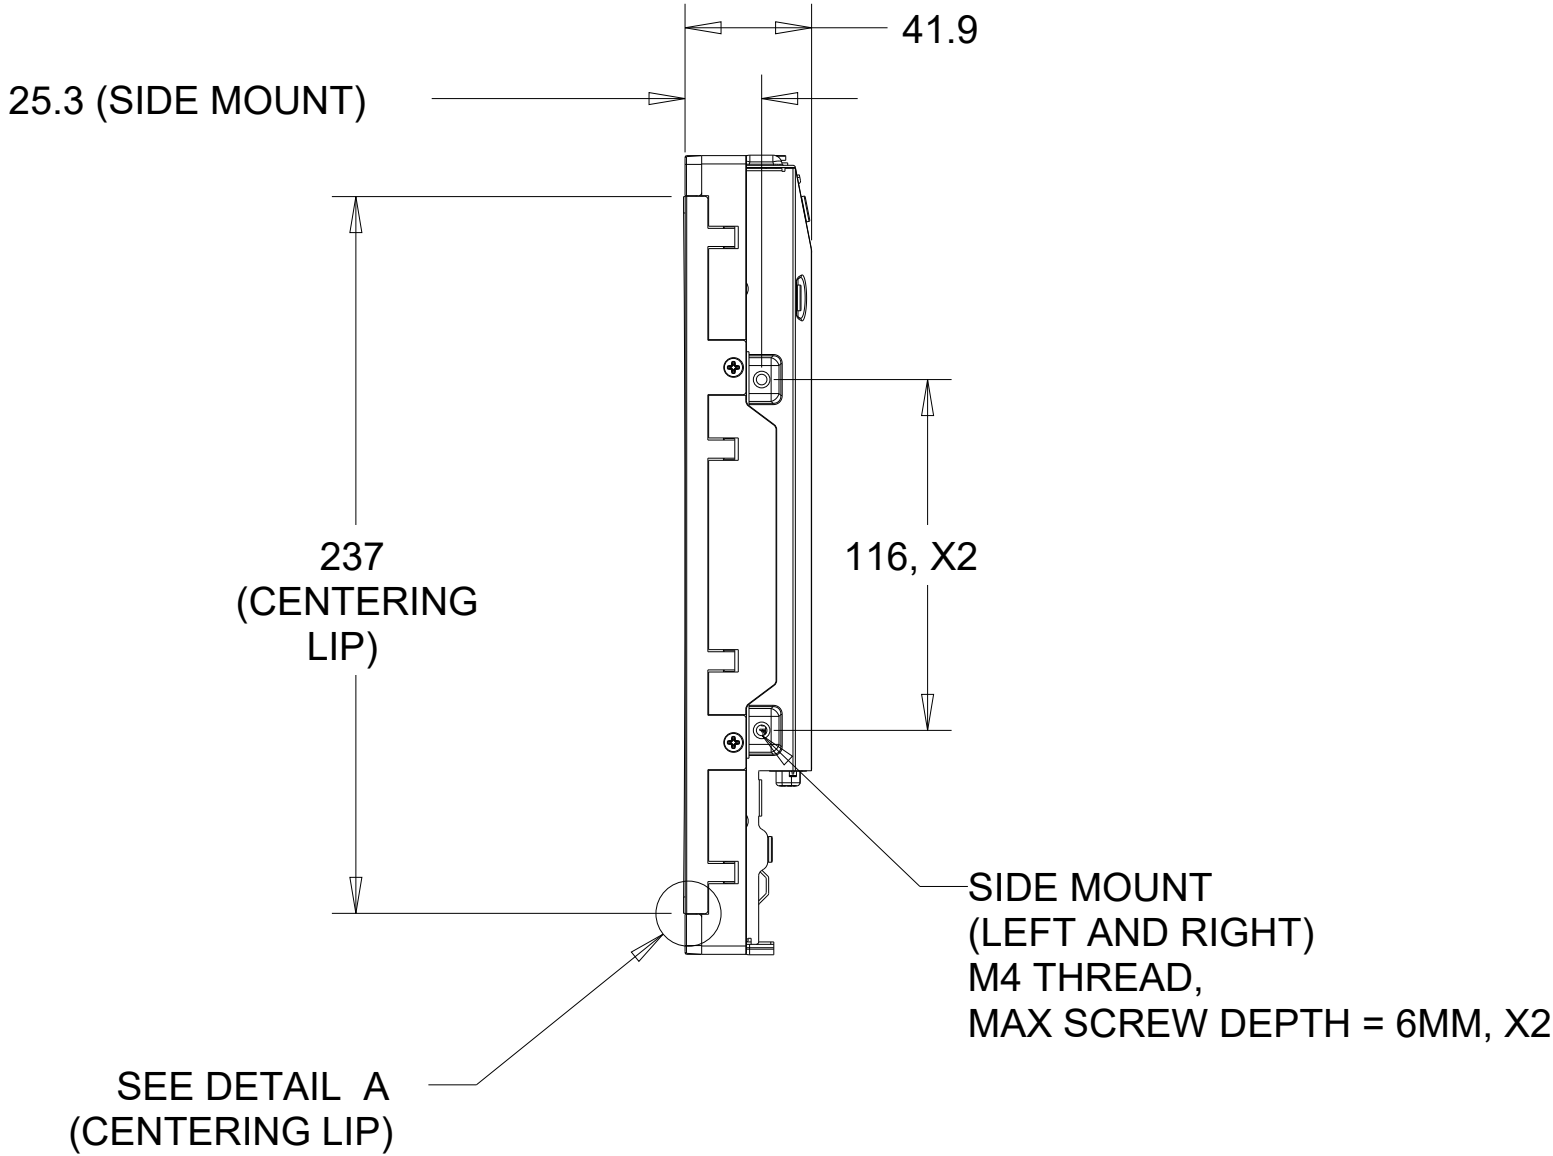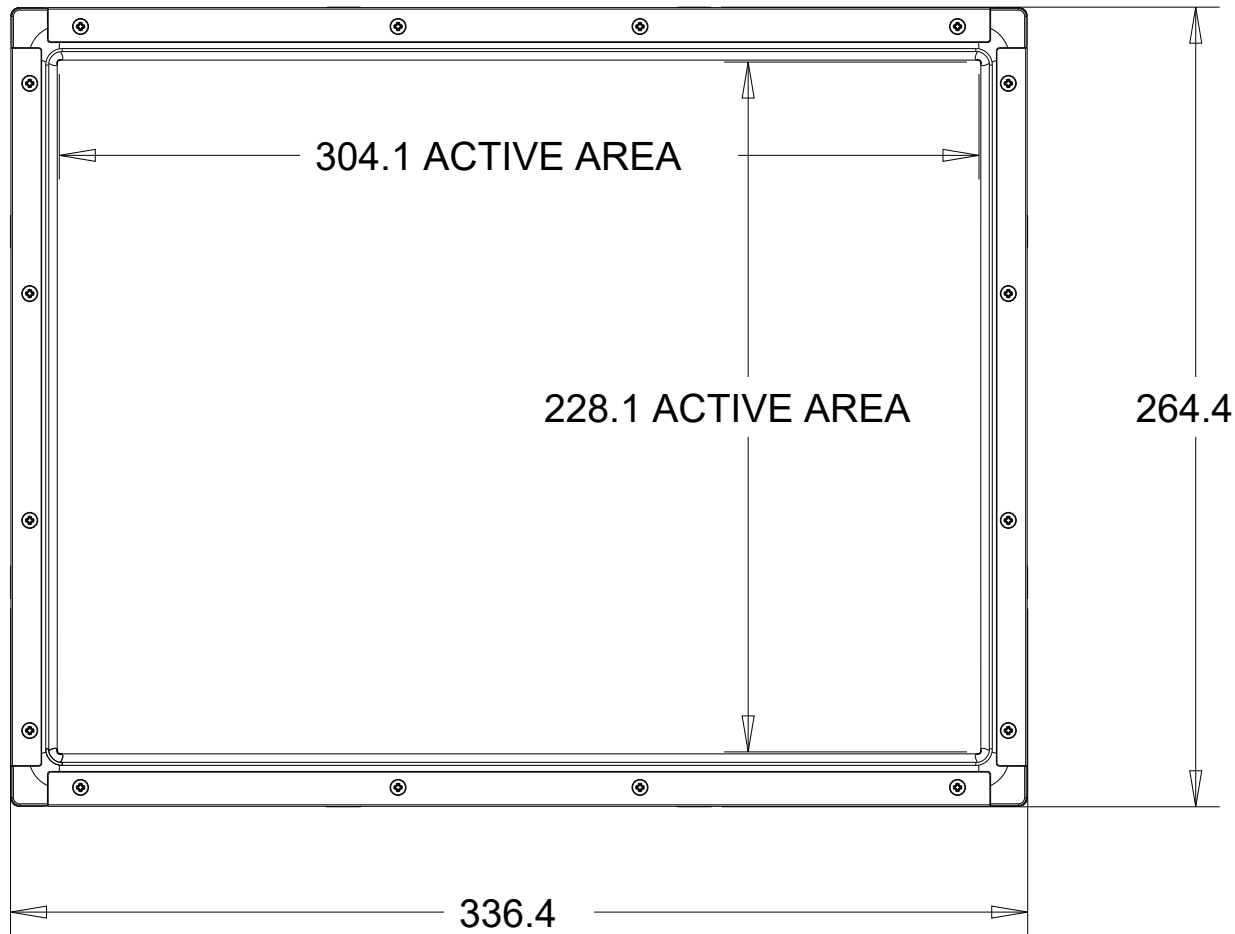

BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

WITH SIDE MOUNTING BRACKETS (2 INCLUDED)

REPLACEMENT BRACKET KIT P/N E203787 AVAILABLE SEPARATELY

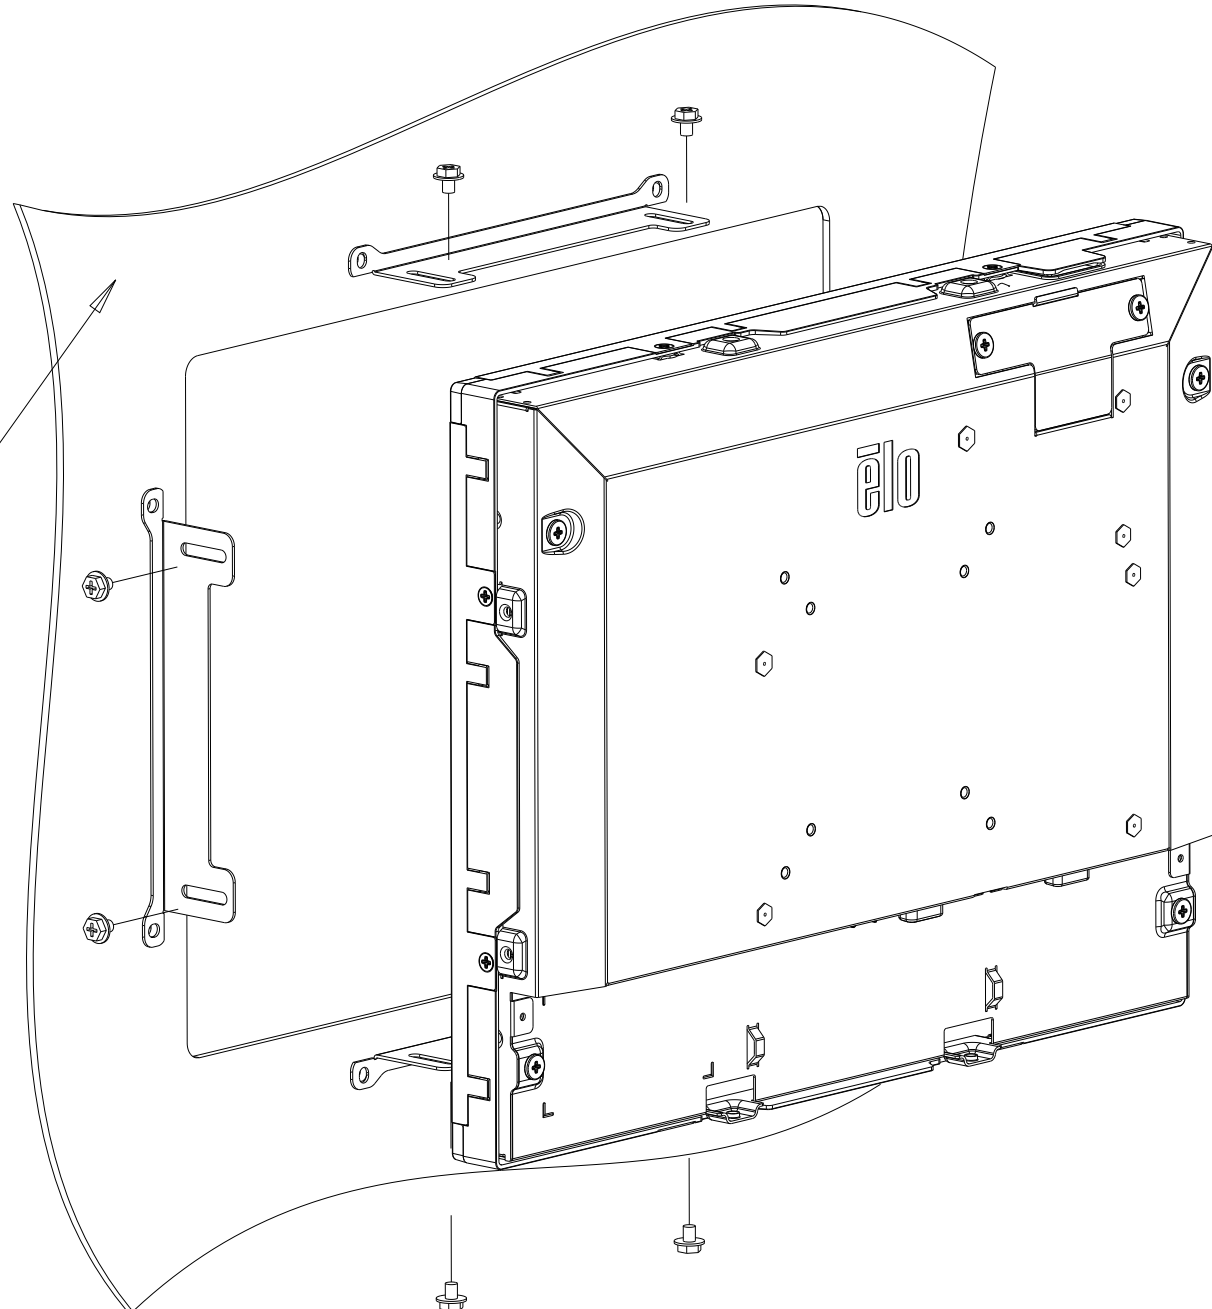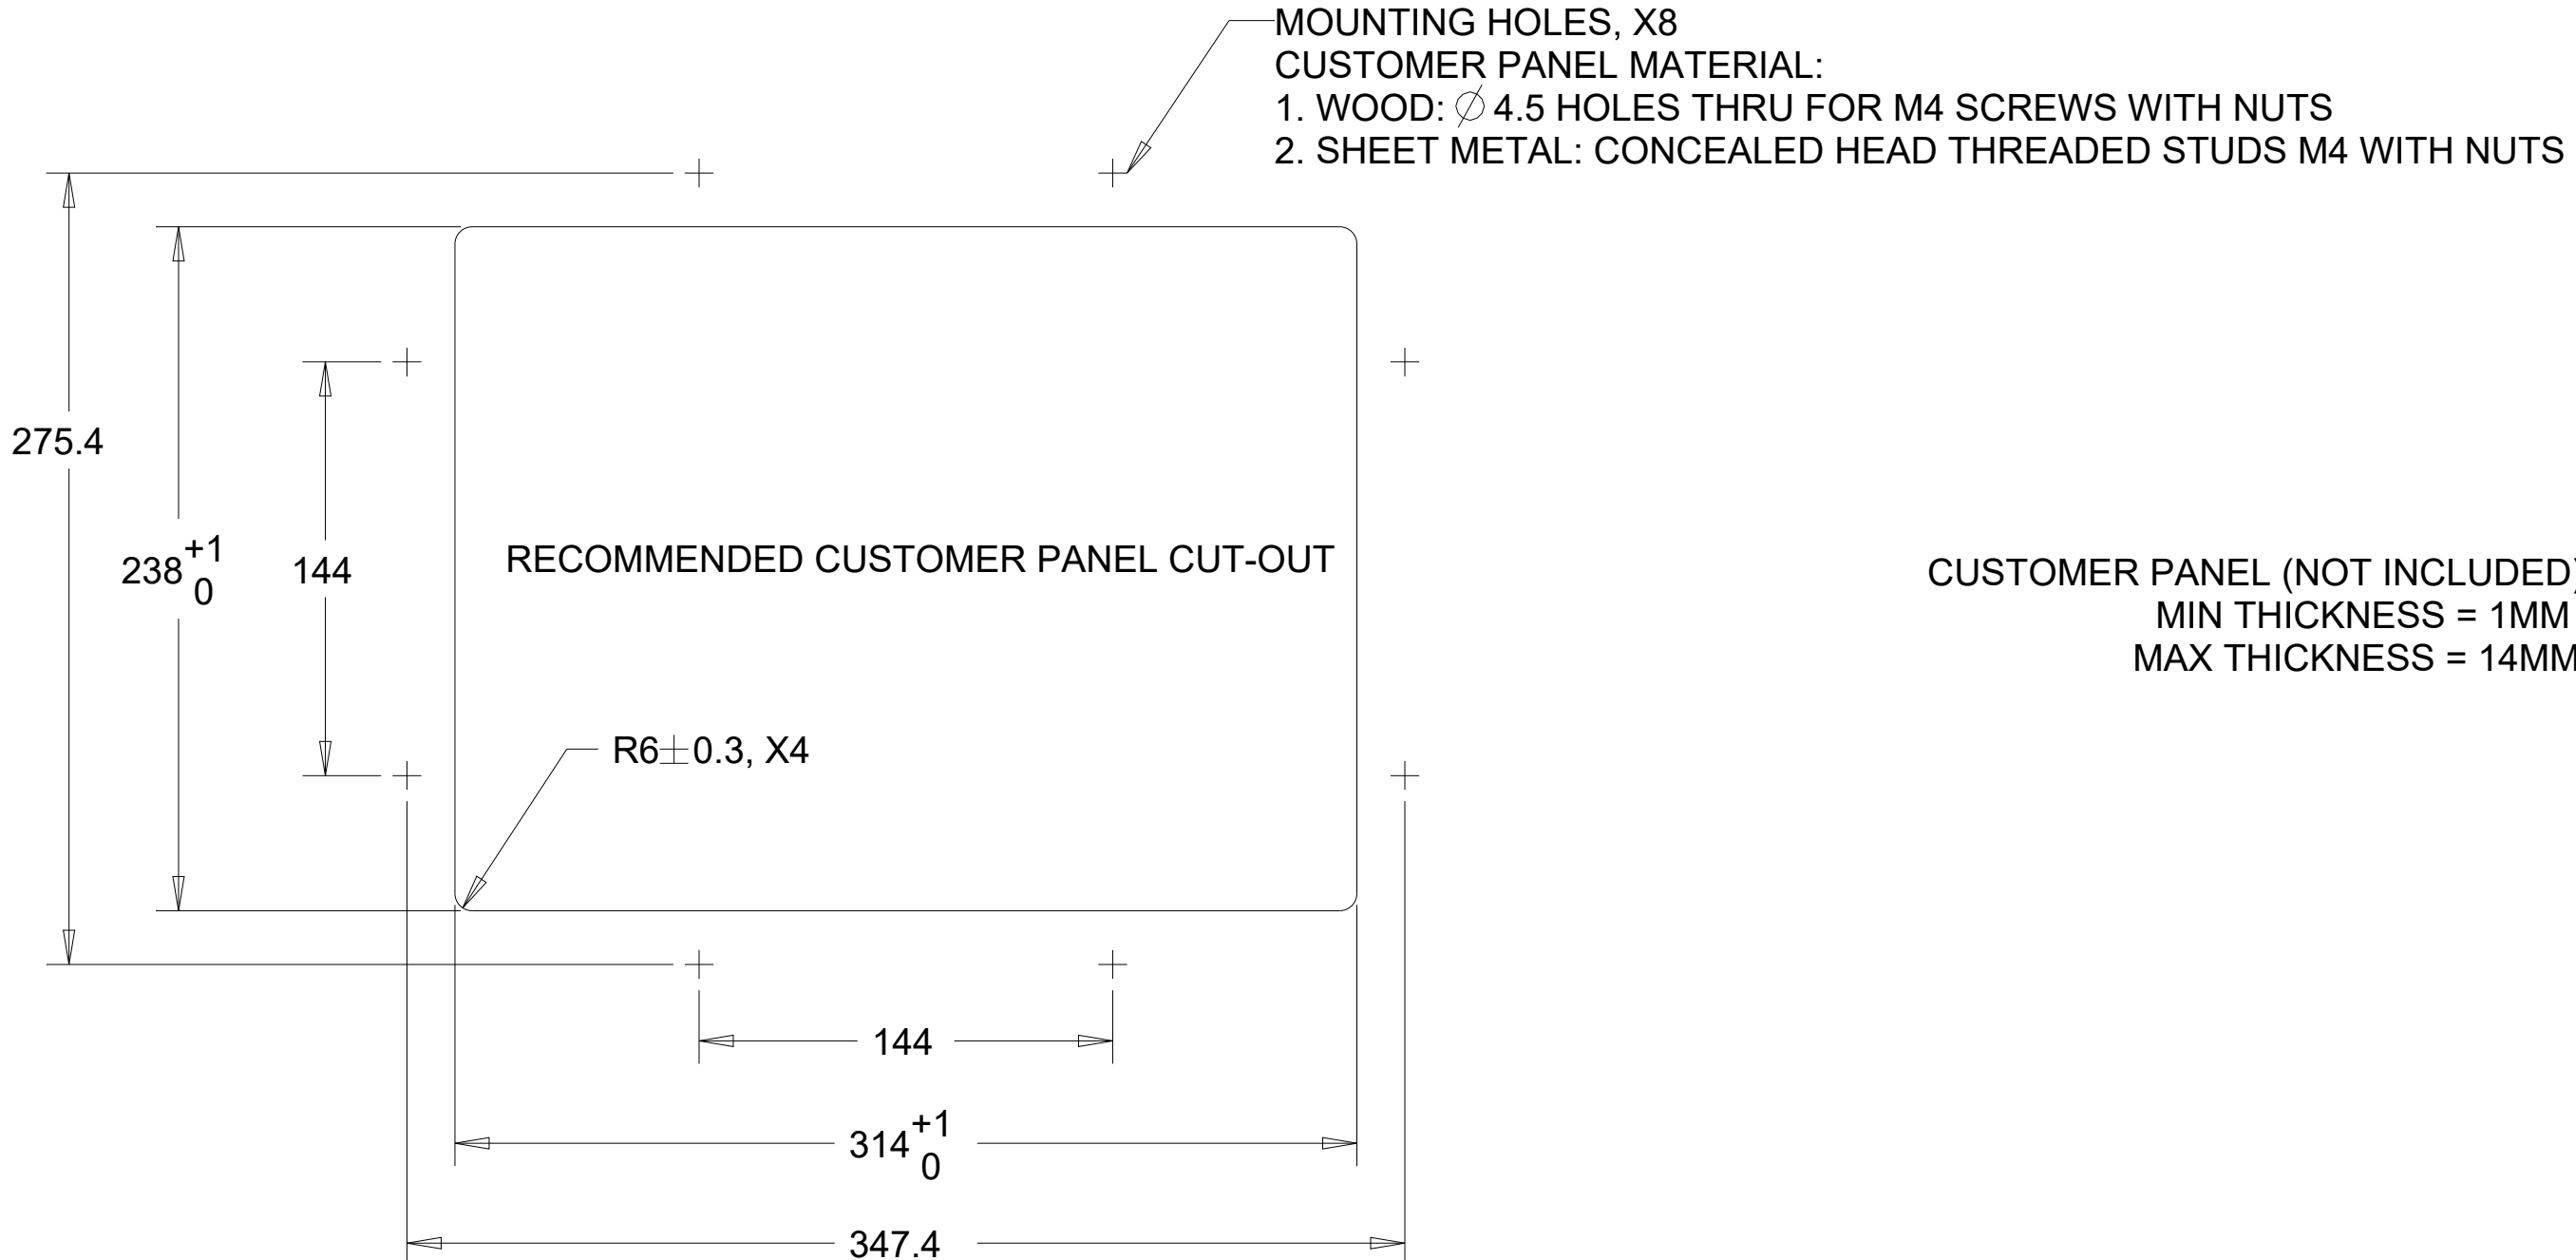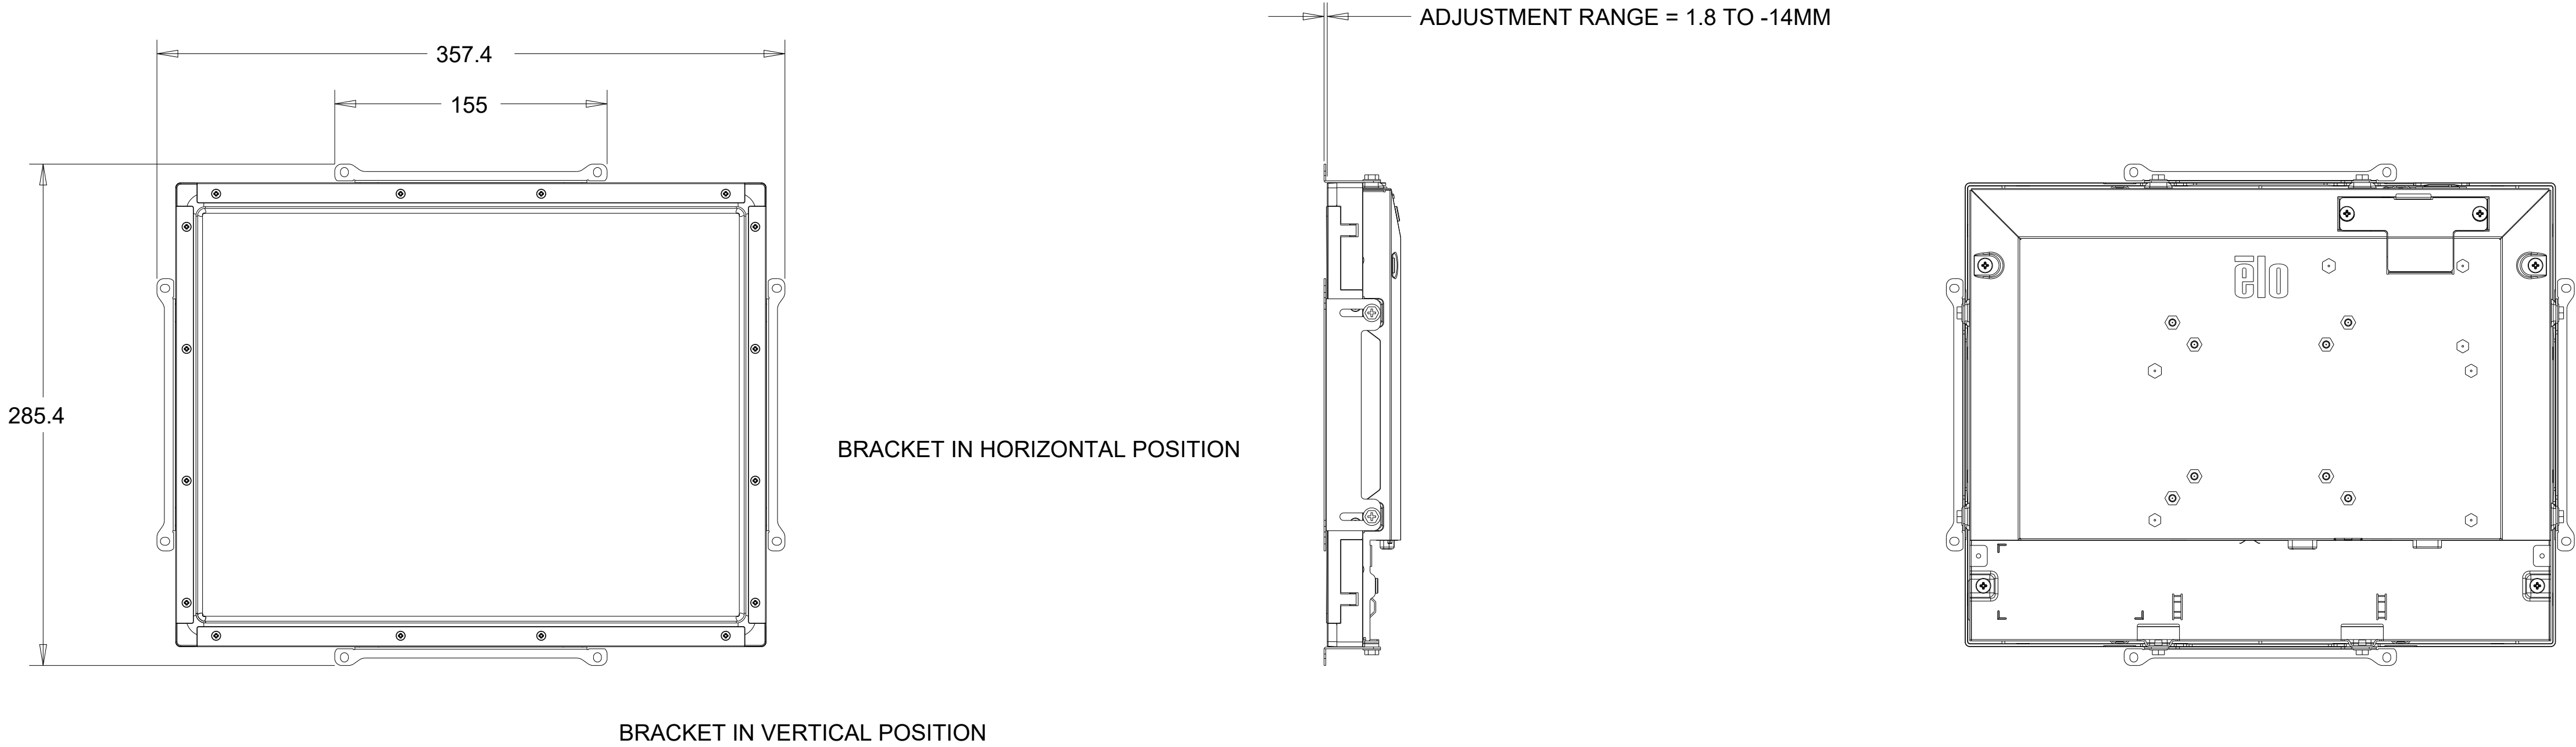

DIMENSIONS ARE IN MILLIMETERS

SHEET 4 OF 6

elo




MS601689

DATE: 12/28/2022

REV: D

BEZELED PCAP,INTELLITOUCH, ACCCUTOUCH, AND SECURETOUCH MODEL




FRONT MOUNT OPTION
P/N E323425 ORDERED SEPARATELY, CUSTOMER ASSEMBLED

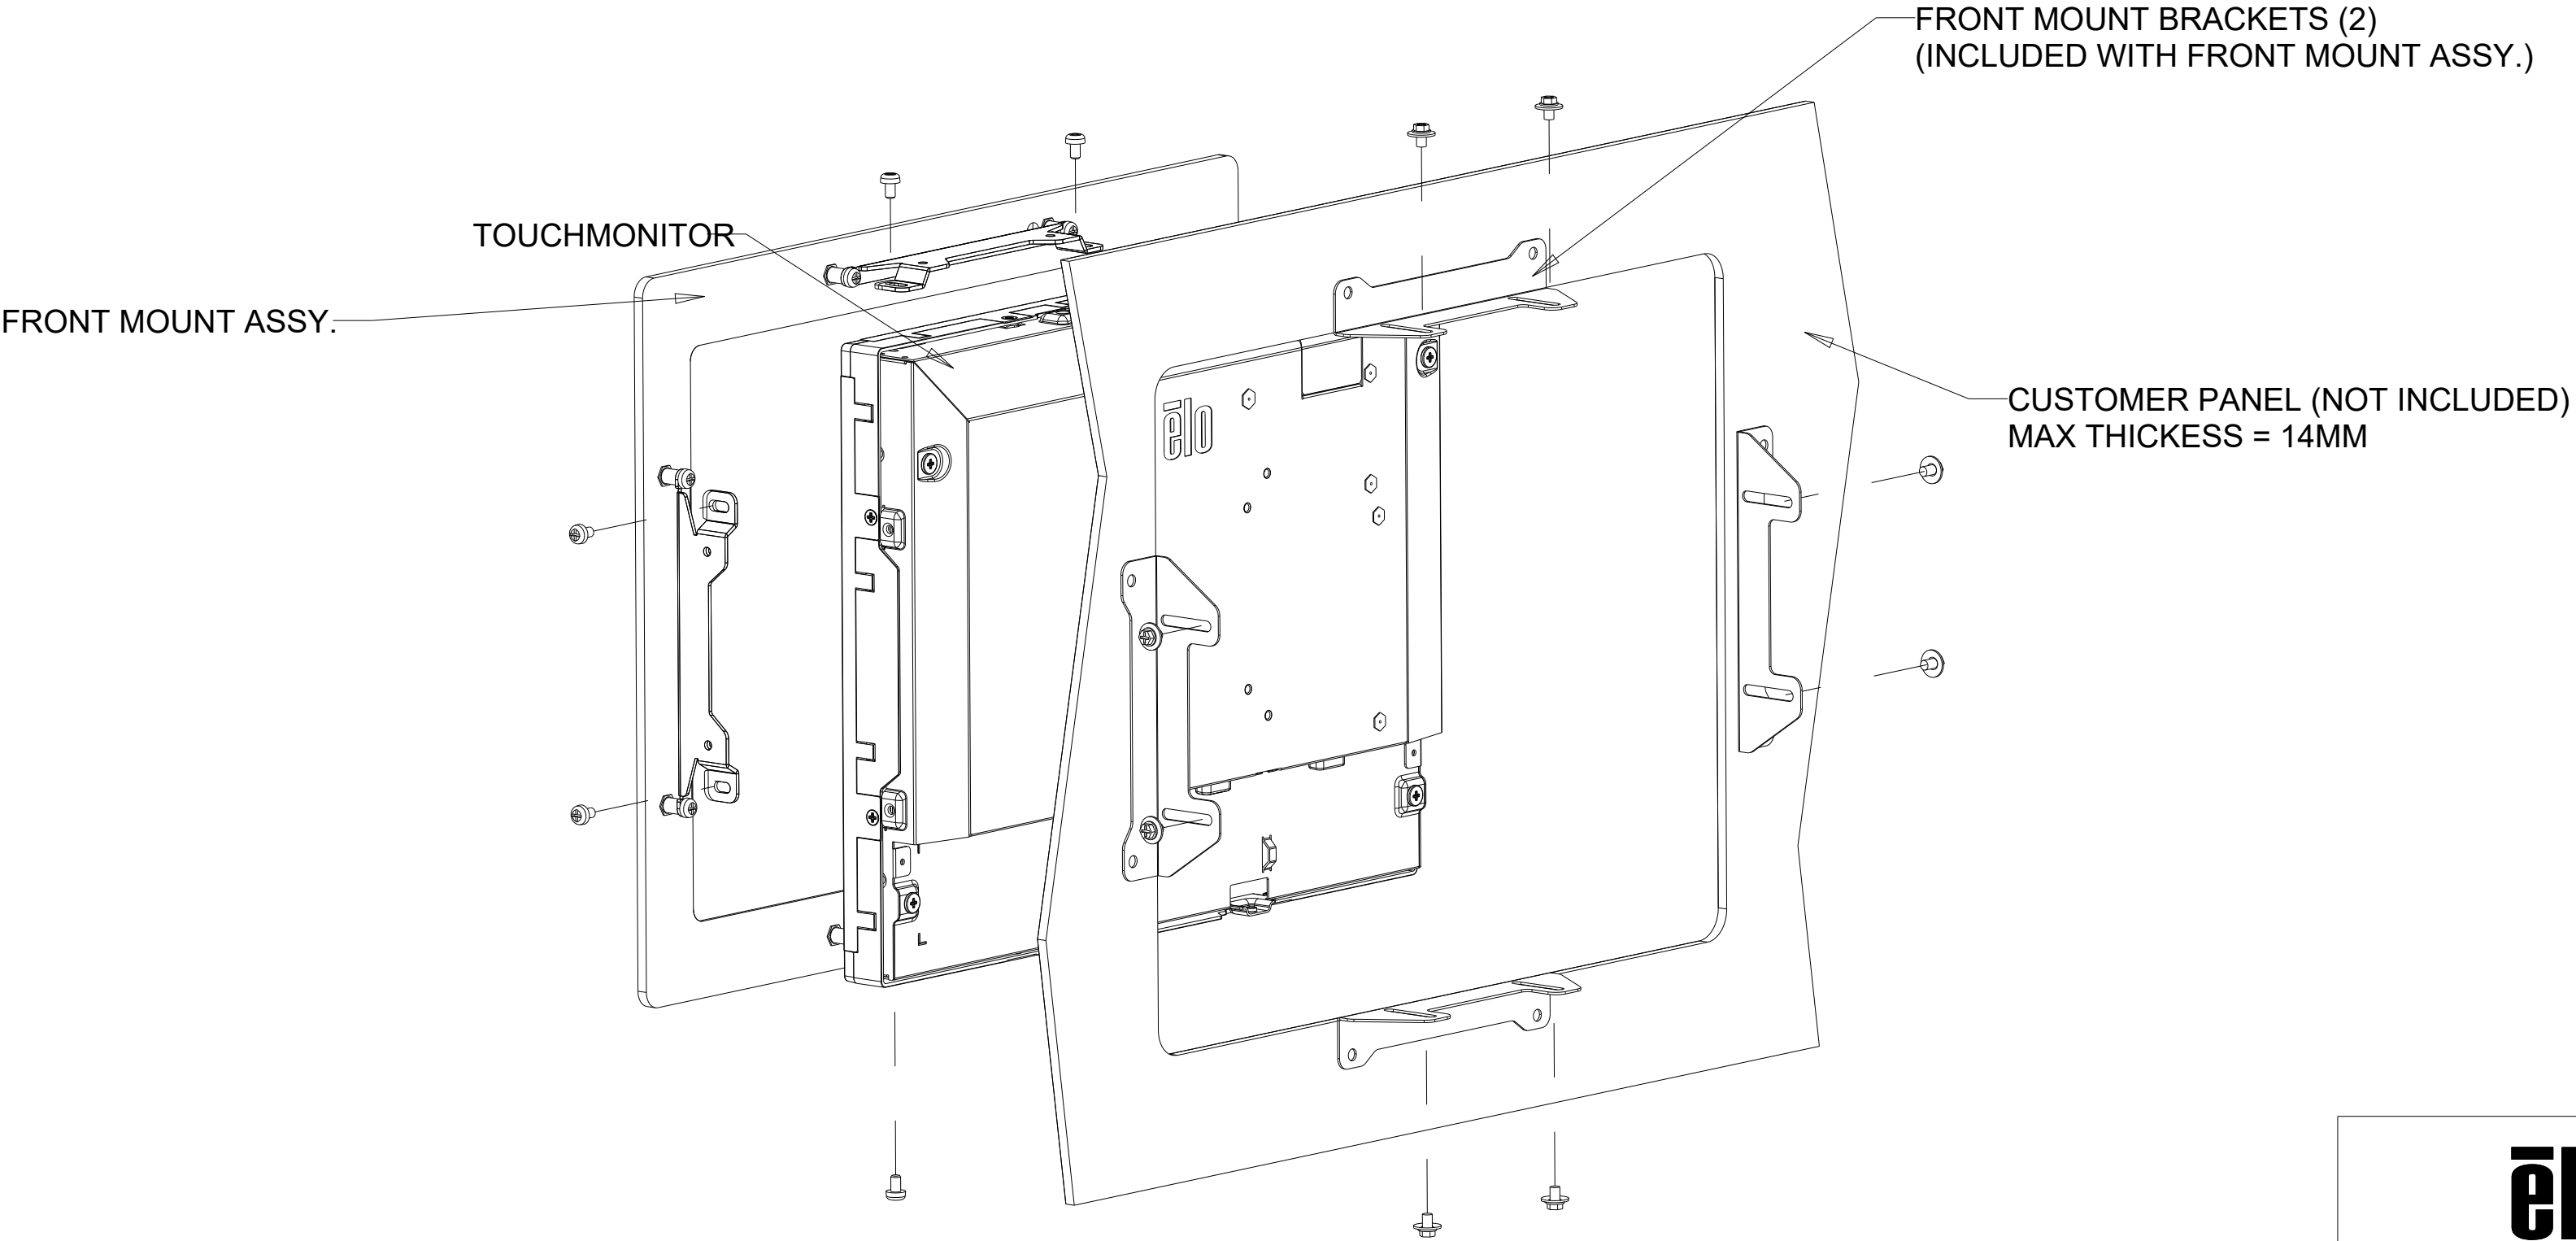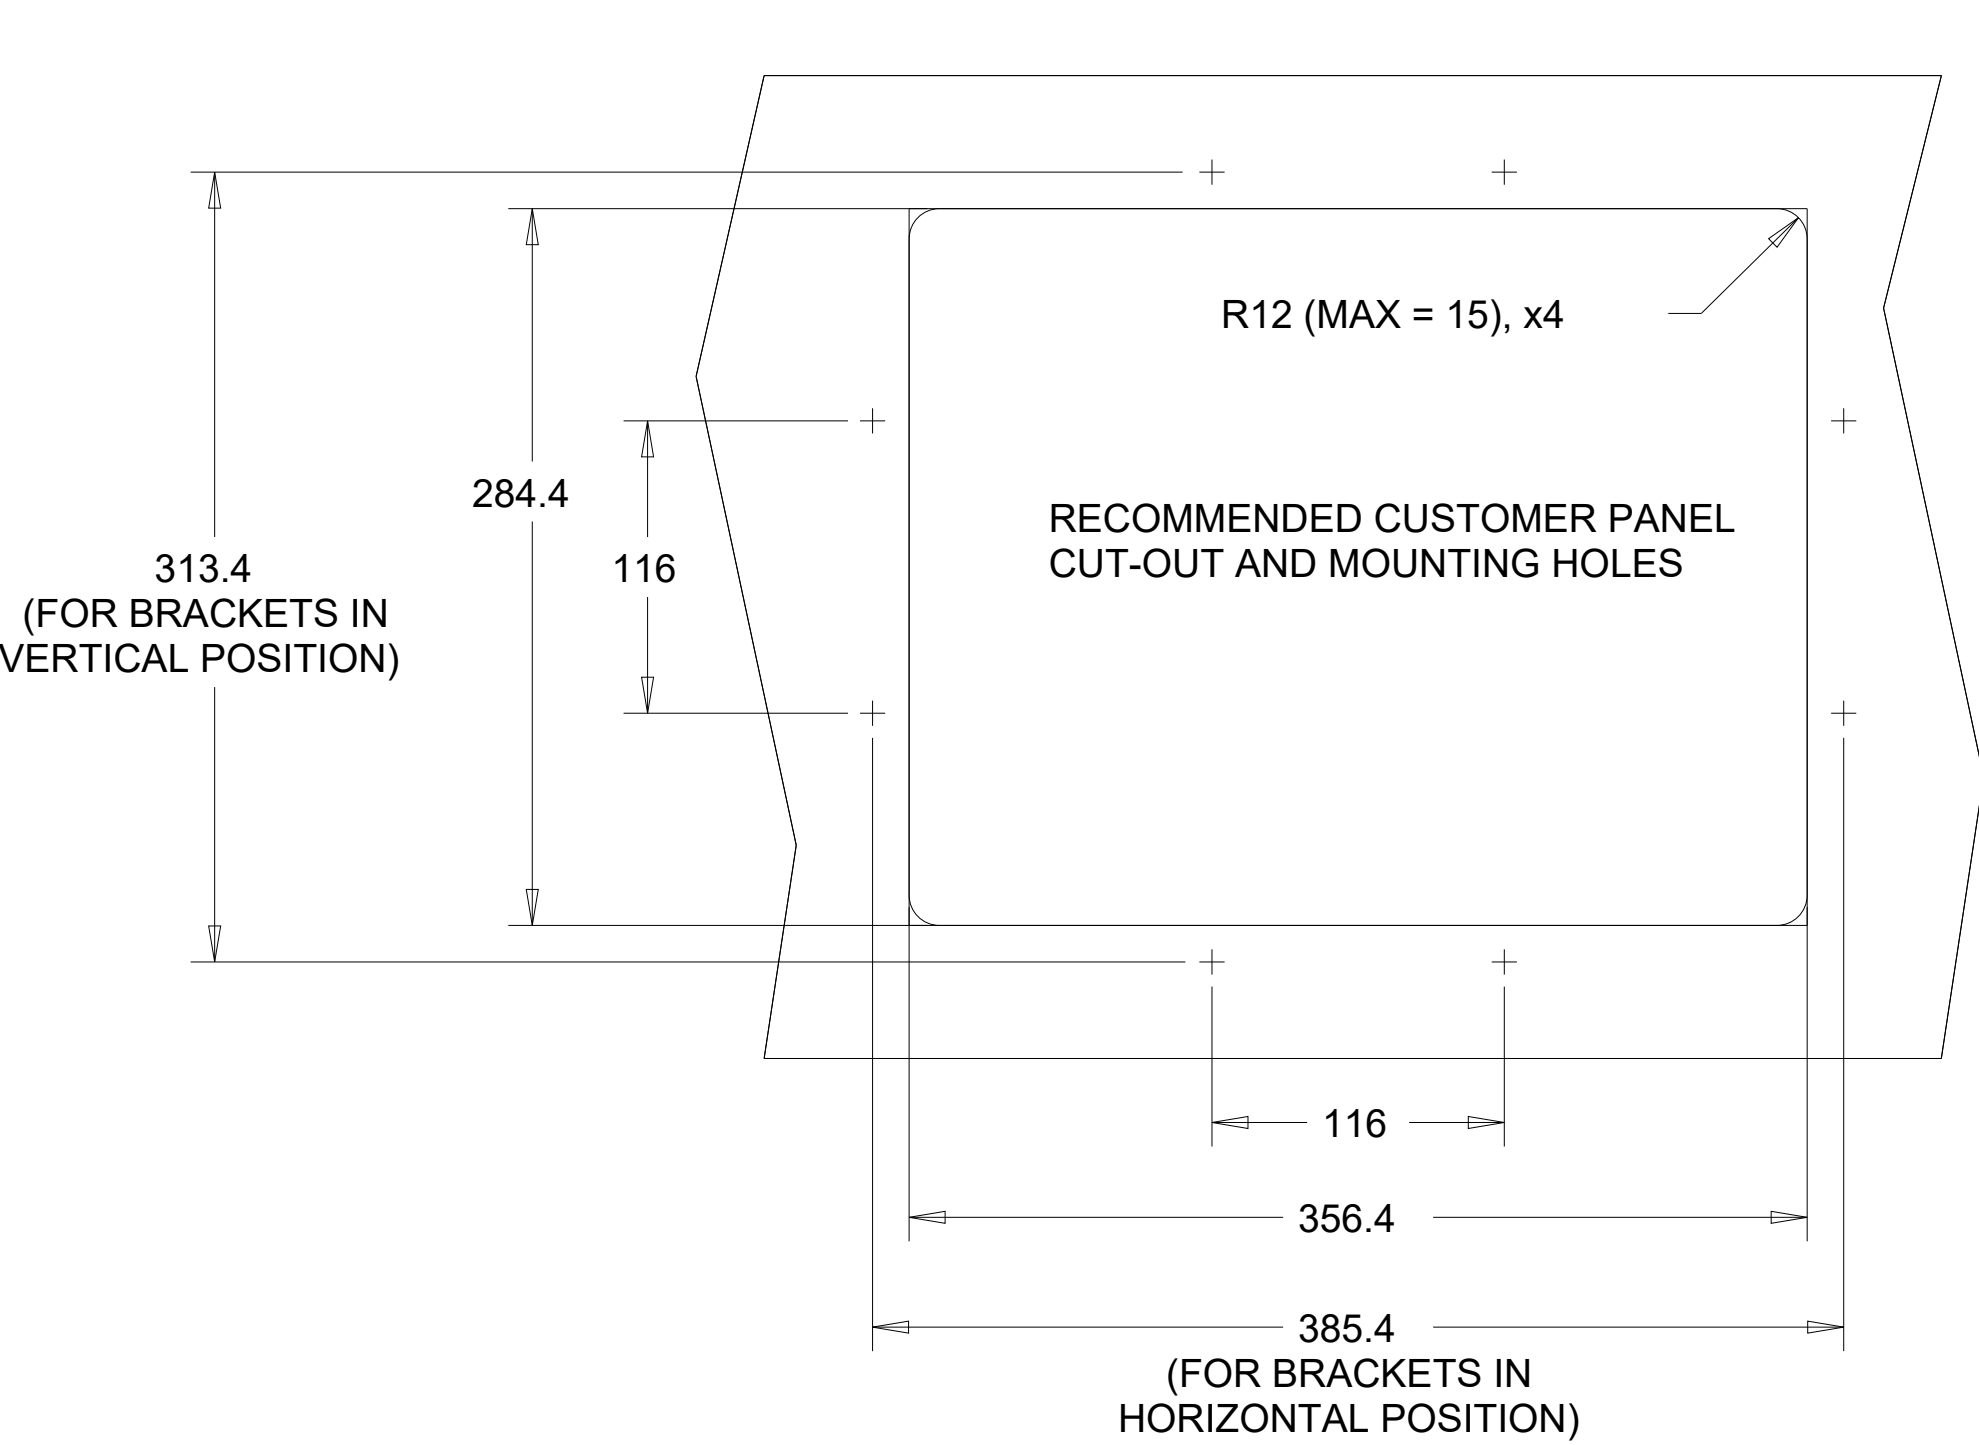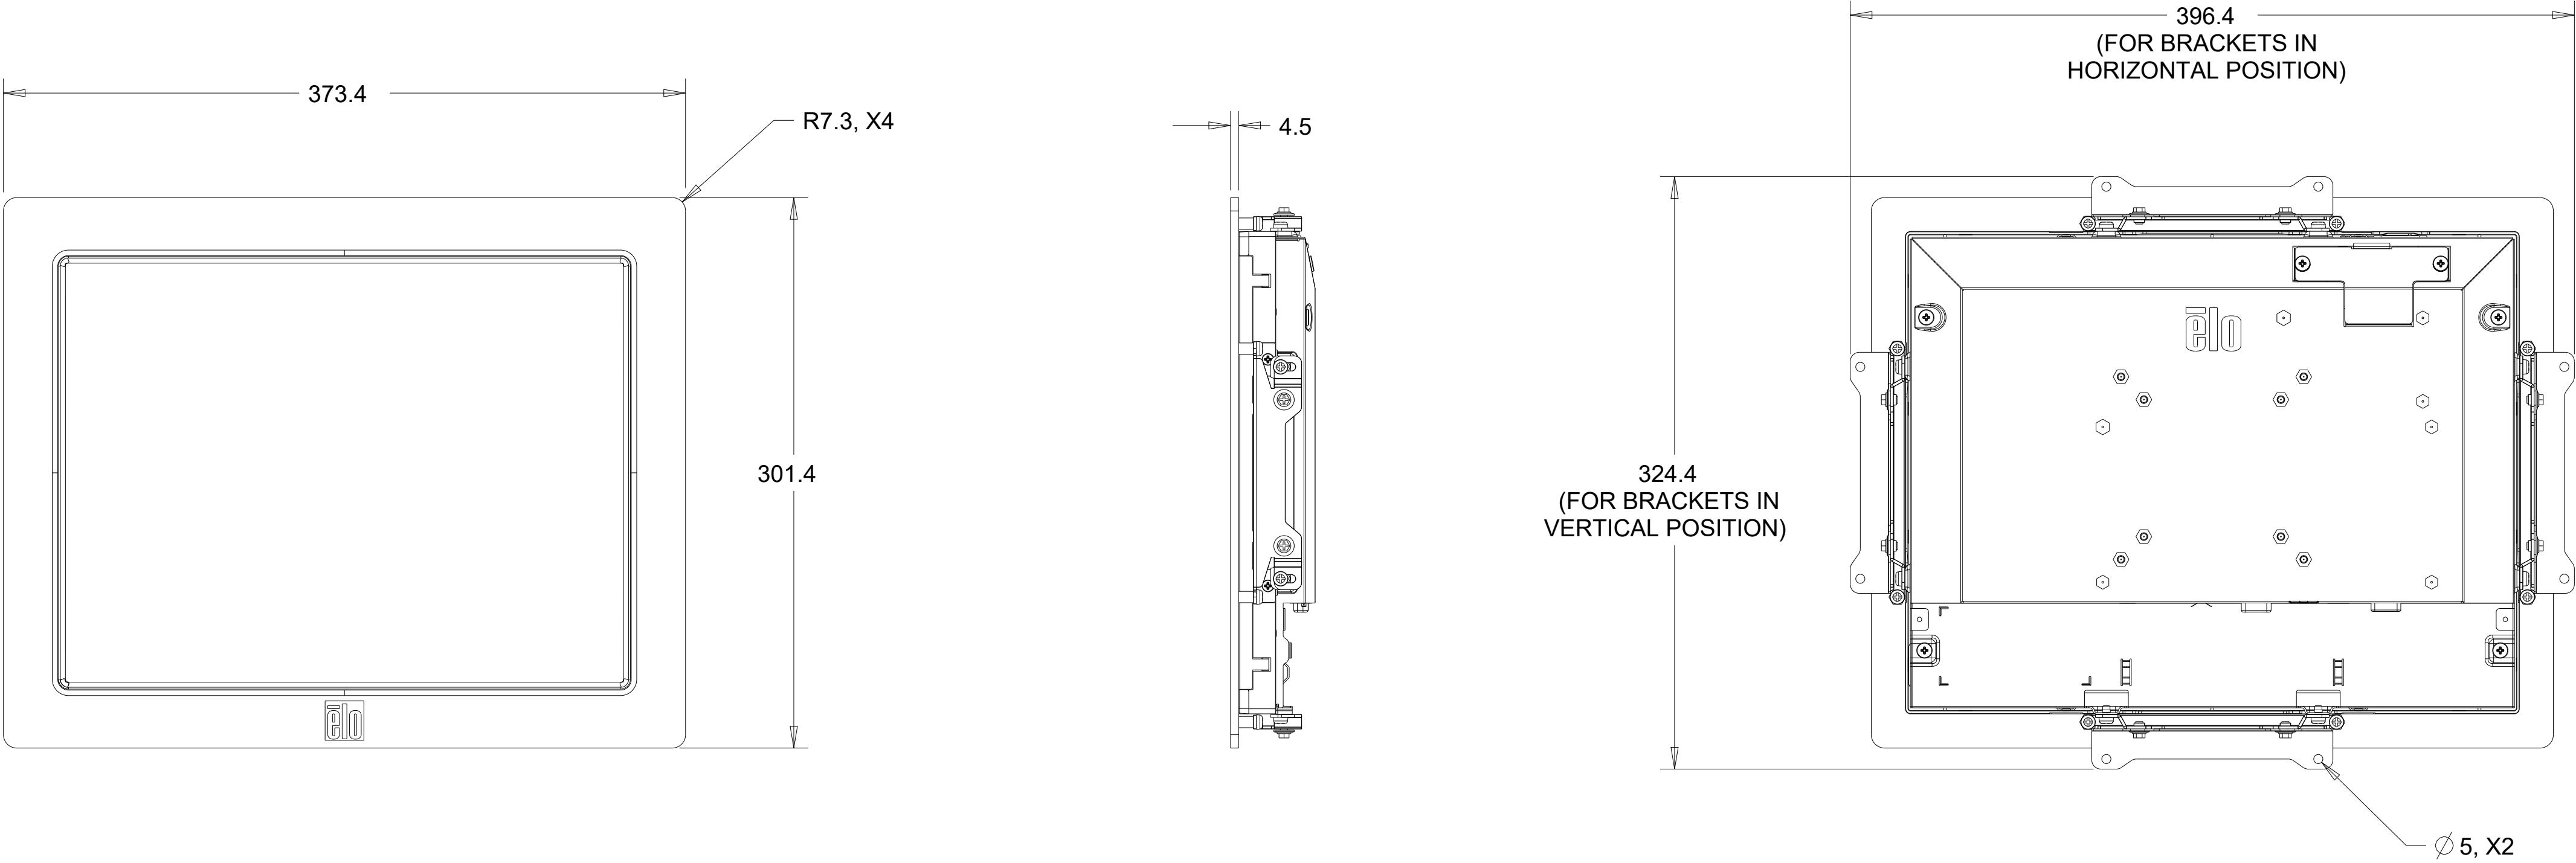

BEZELED PCAP,INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

RACK MOUNT OPTION

P/N E295006 ORDERED SEPARATELY, CUSTOMER ASSEMBLED

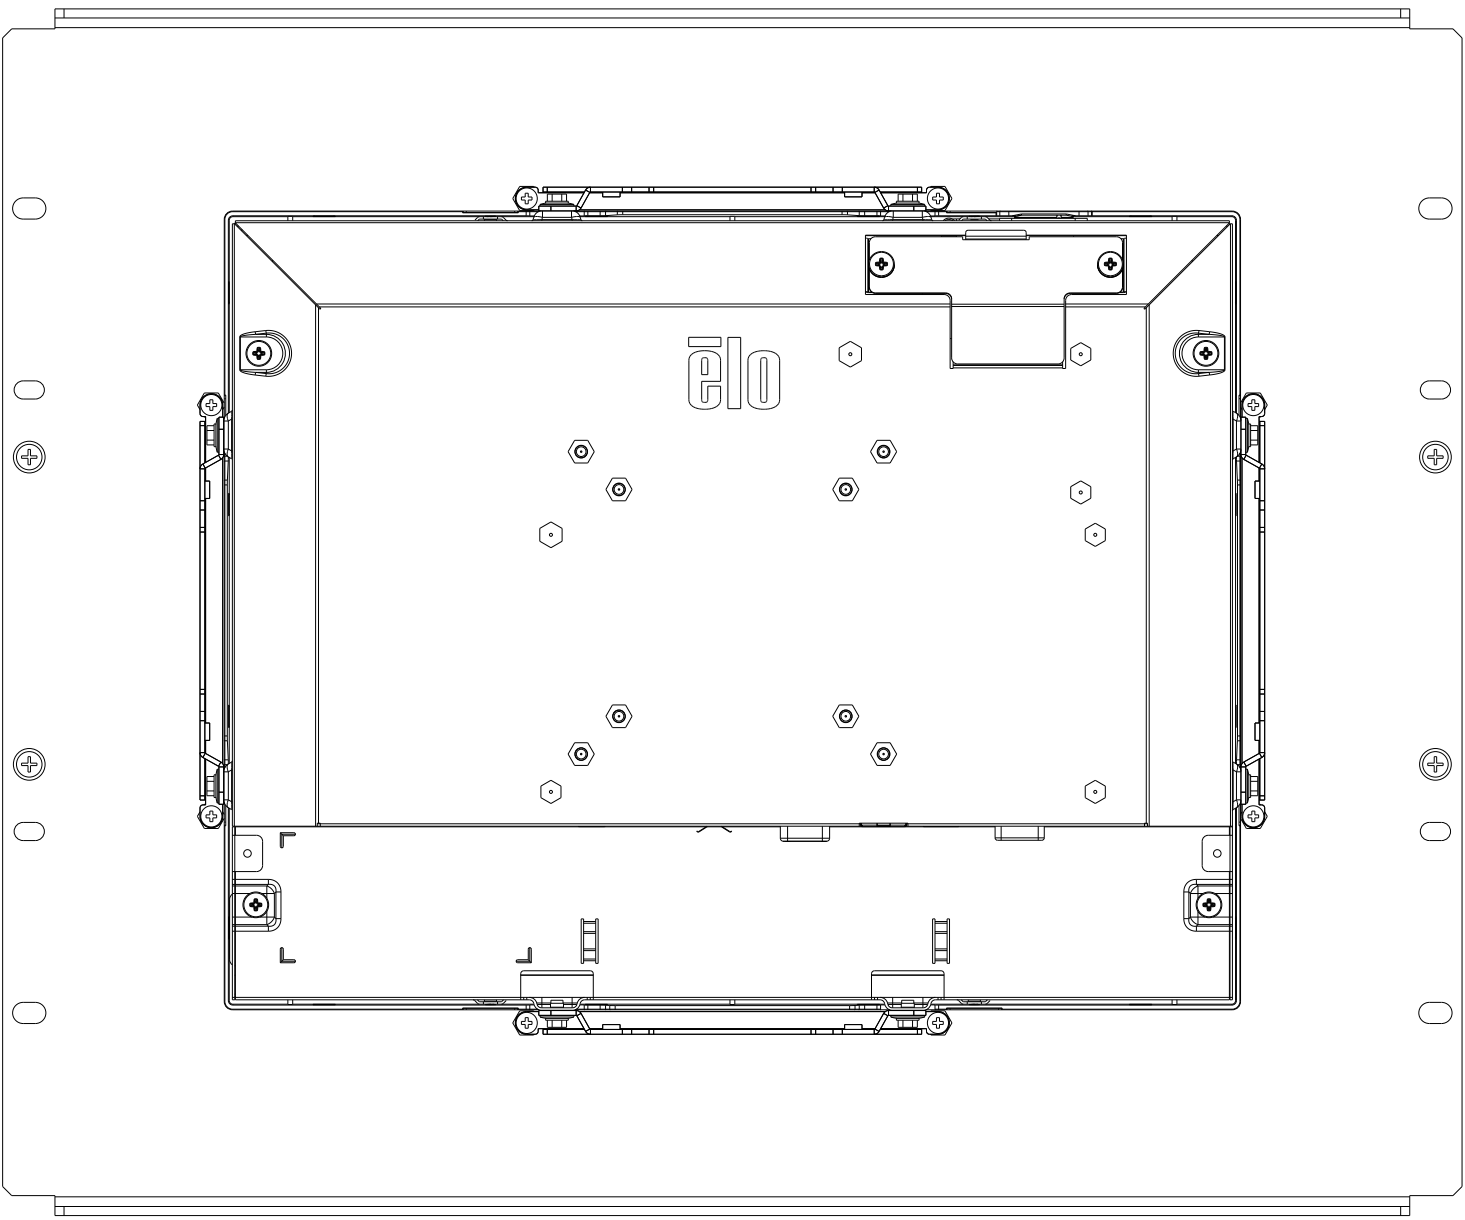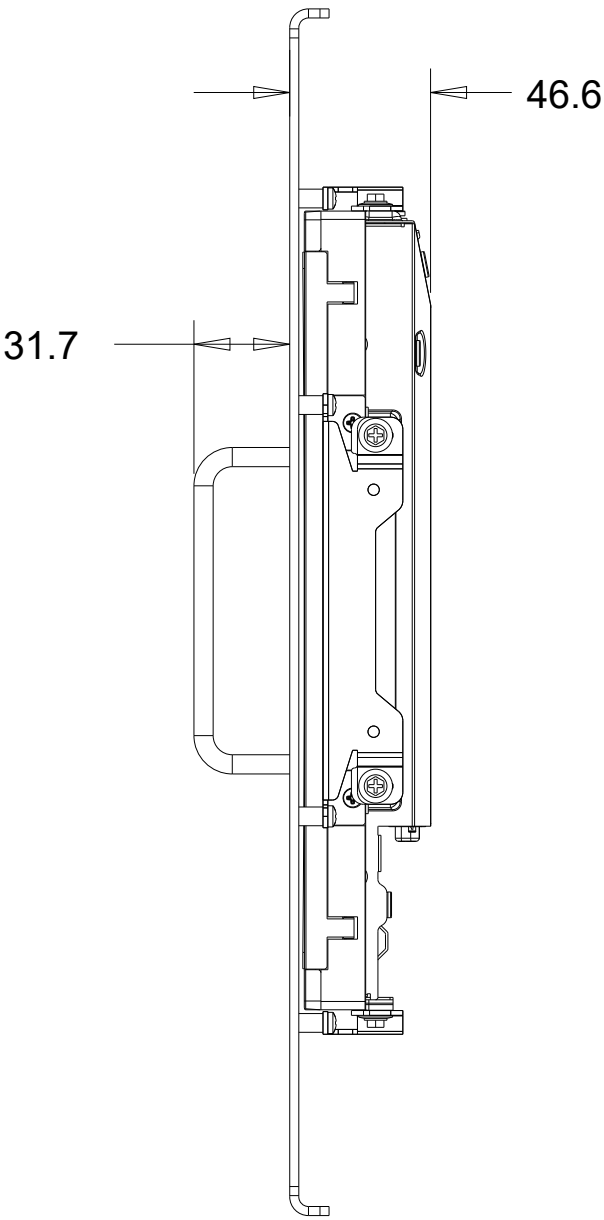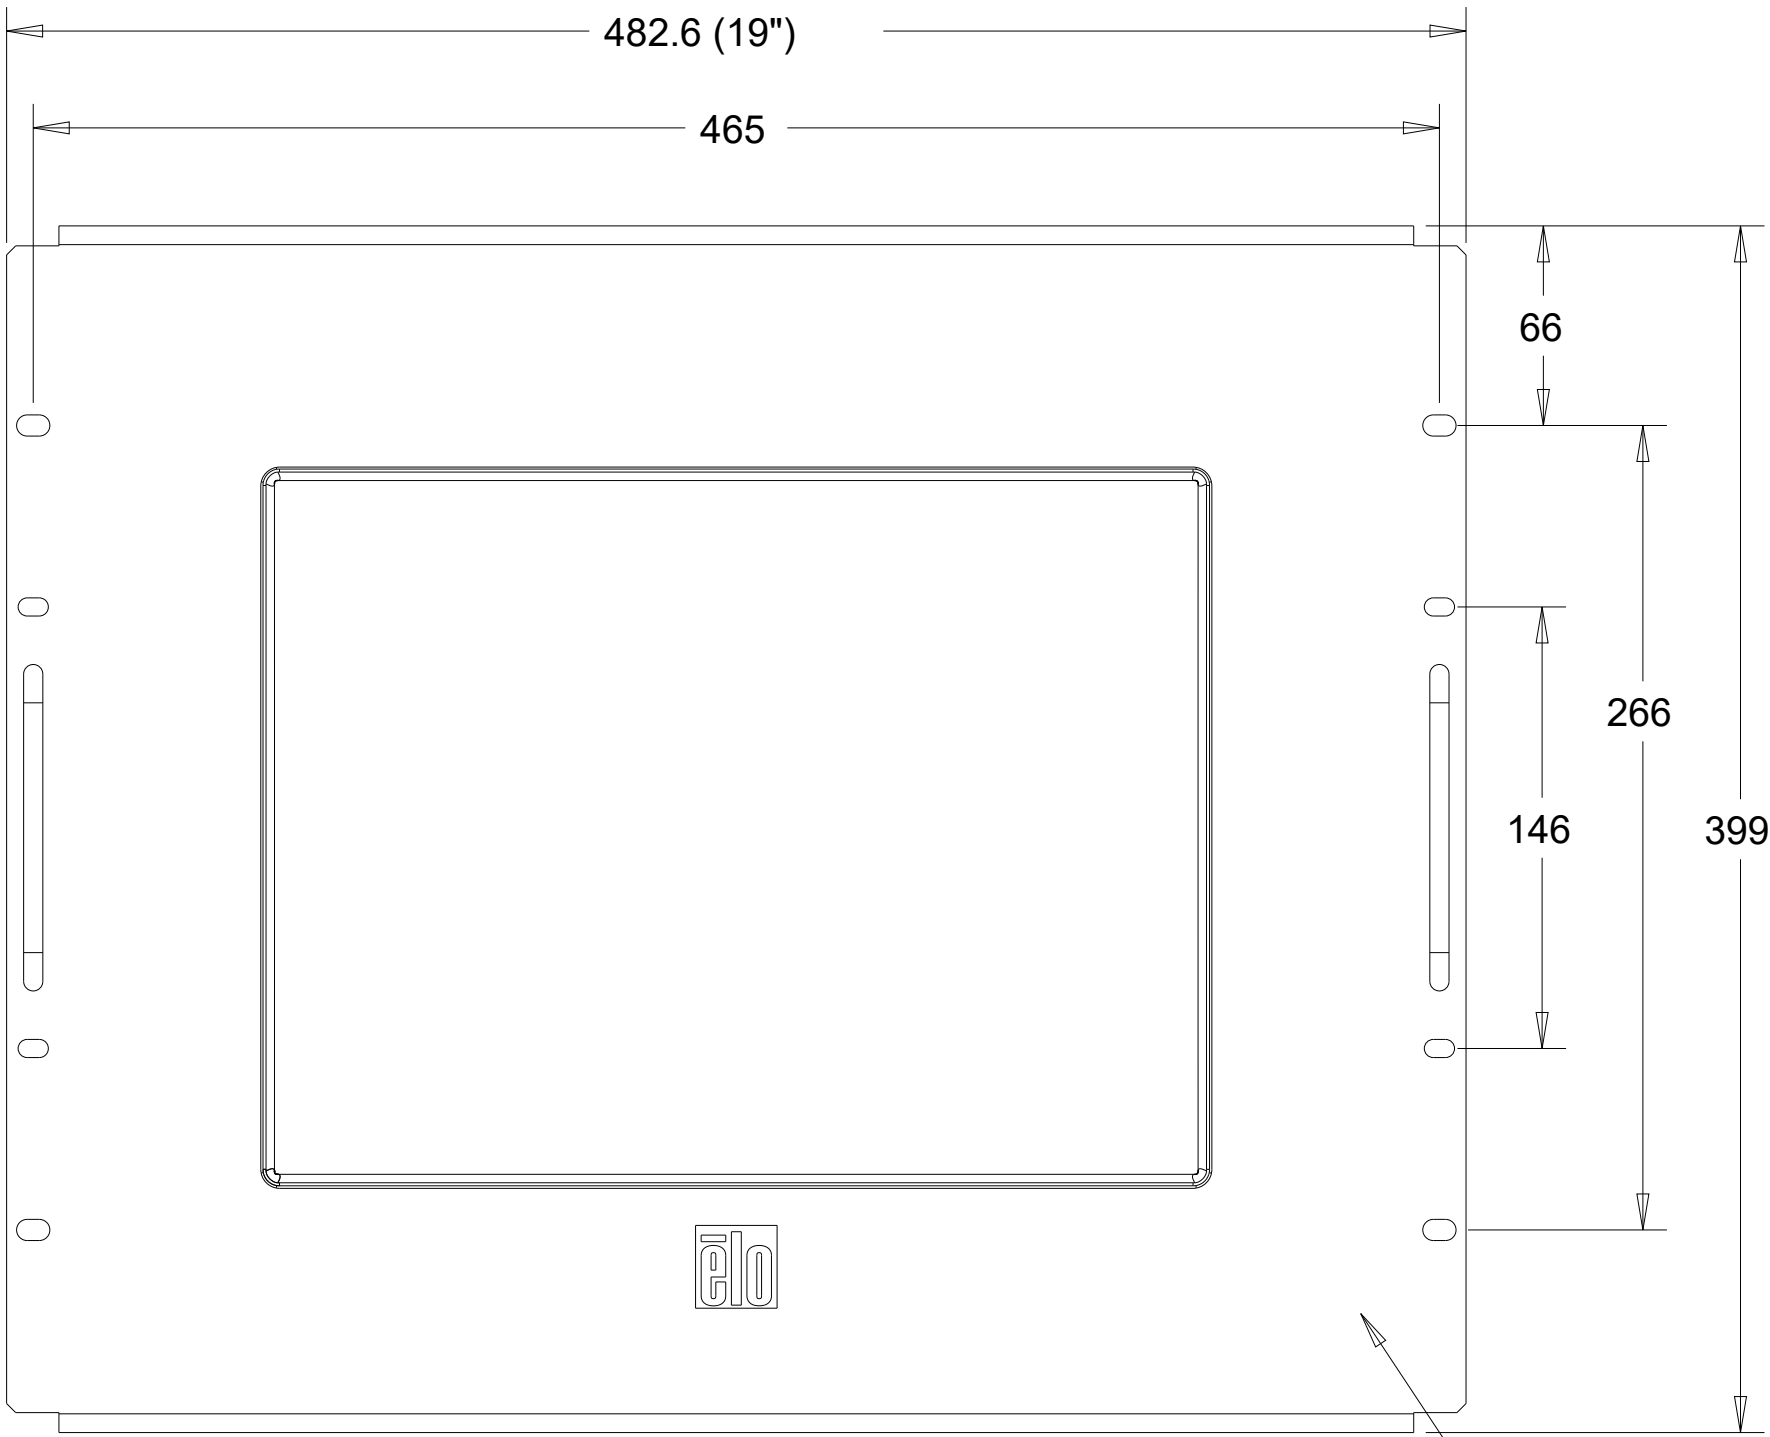

BLACK ANODIZE

