

#### ZERO BEZEL PCAP MODEL

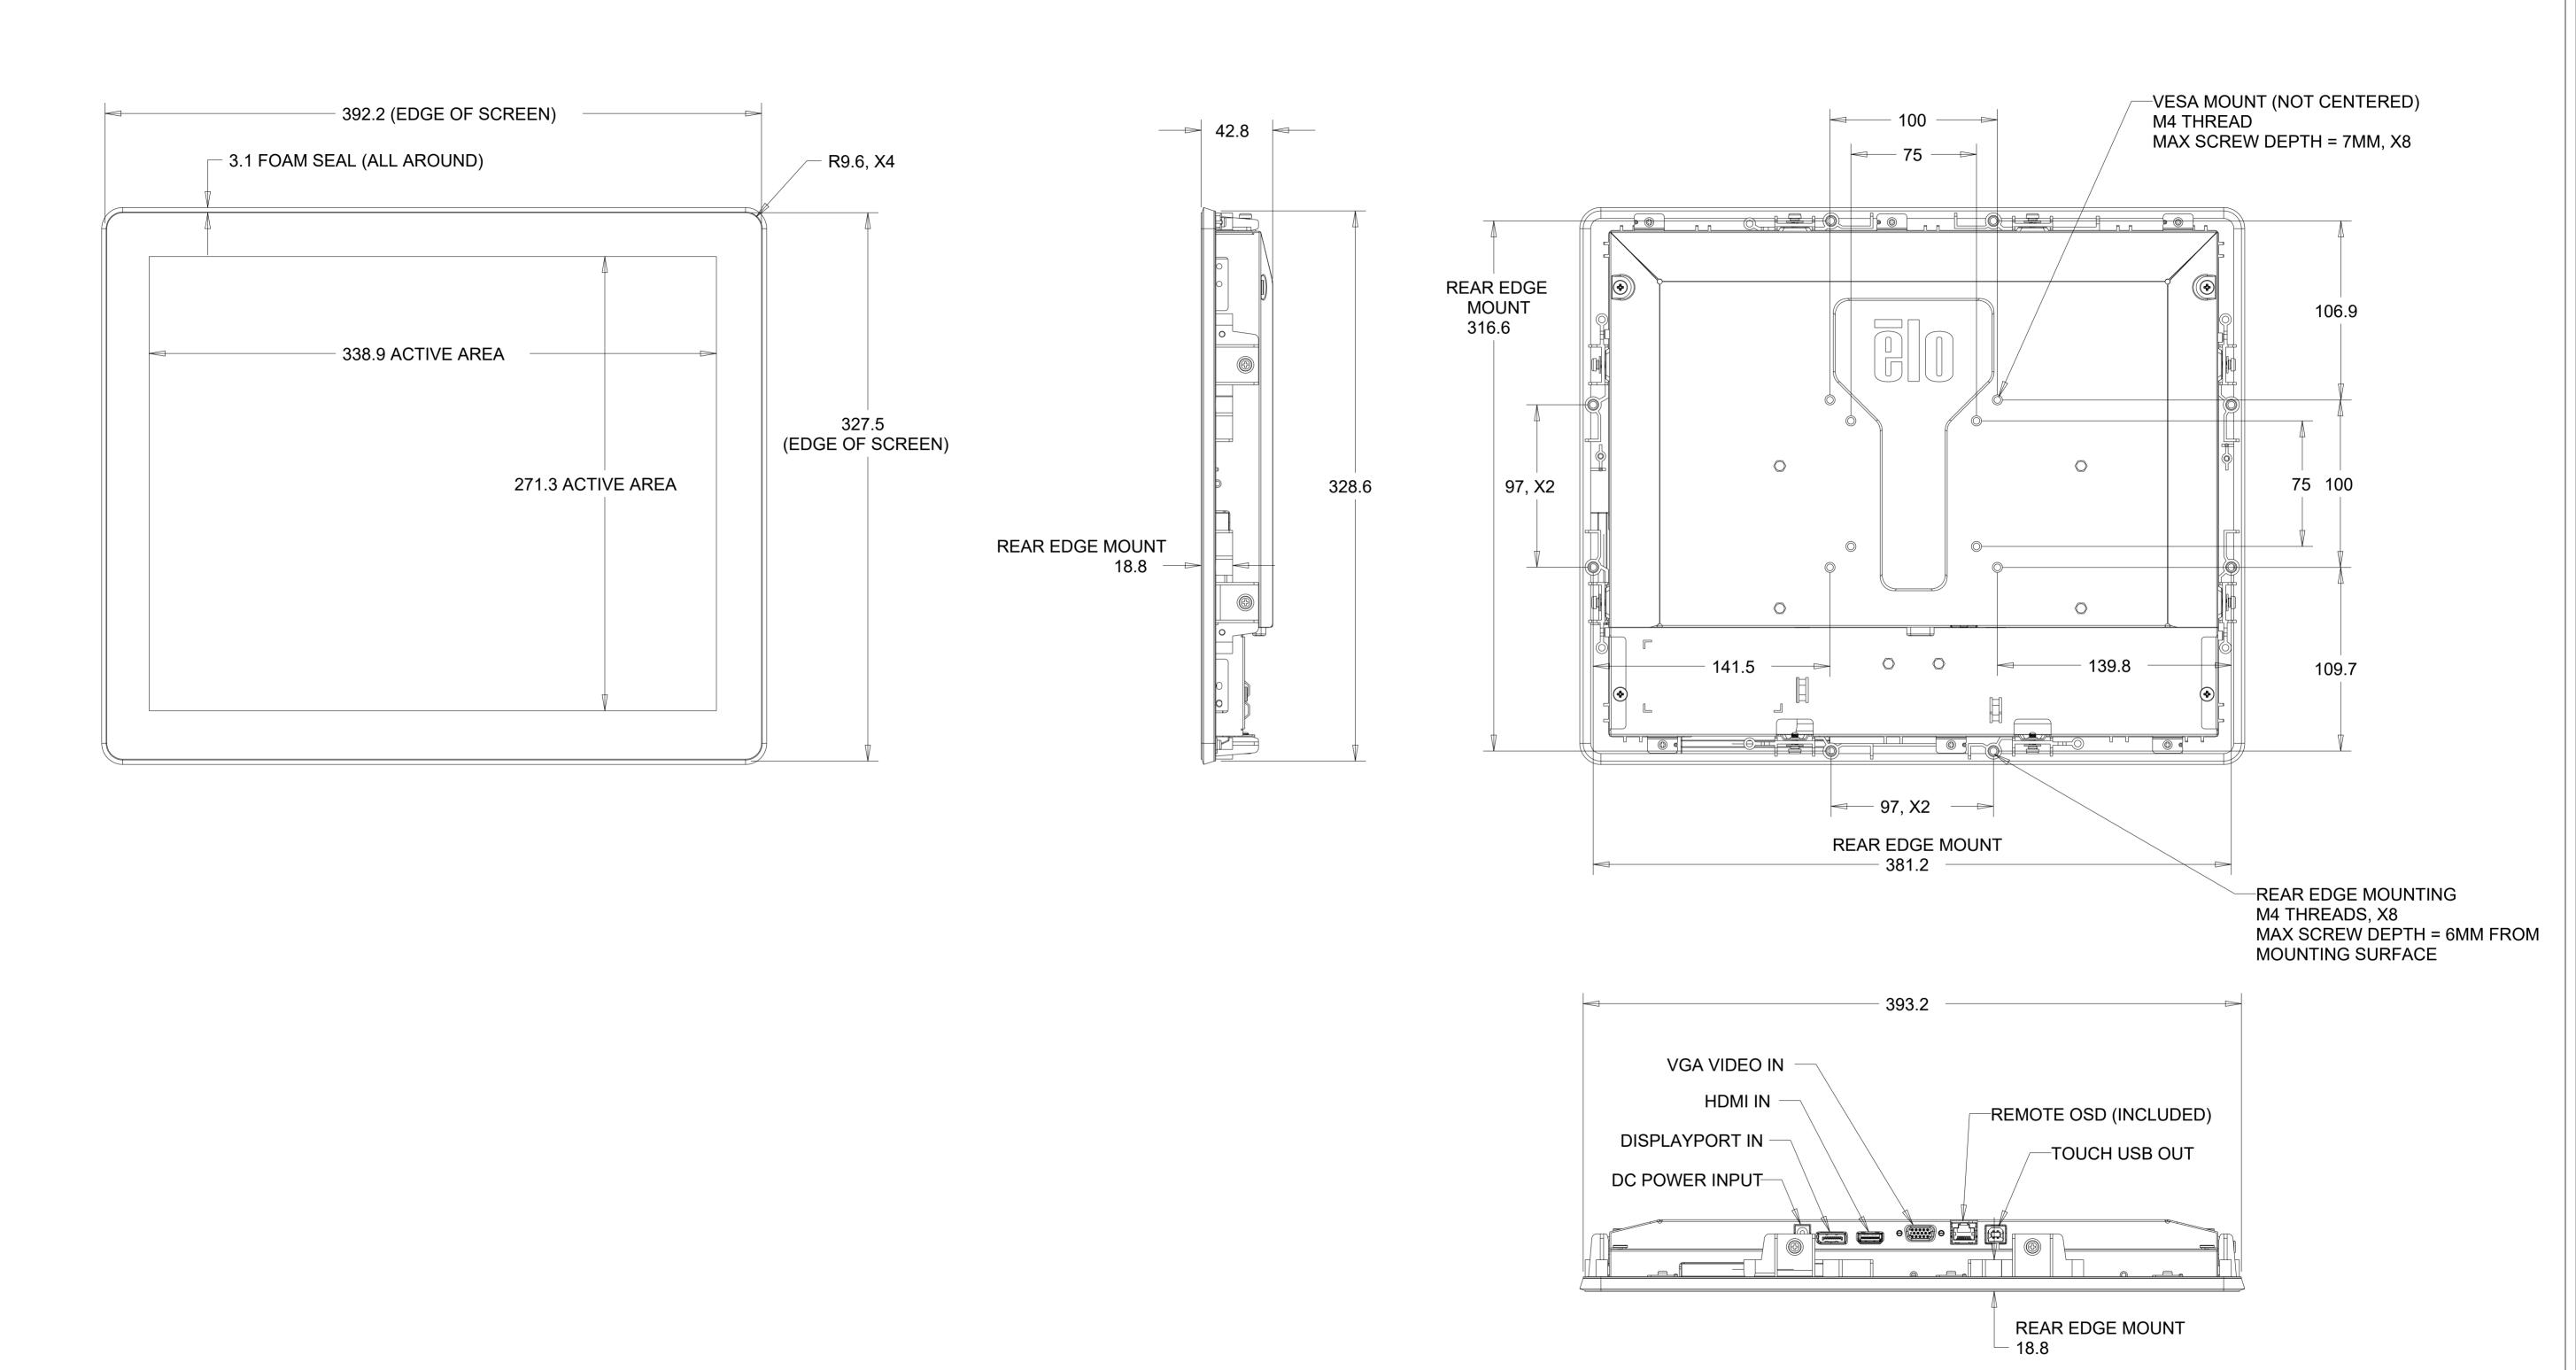



SHEET 1 OF 6


#### ZERO BEZEL PCAP MODEL

#### WITH FLUSH MOUNTING BRACKETS (4 INCLUDED) REPLACEMENT BRACKET KIT P/N E129564 AVAILABLE SEPARATELY

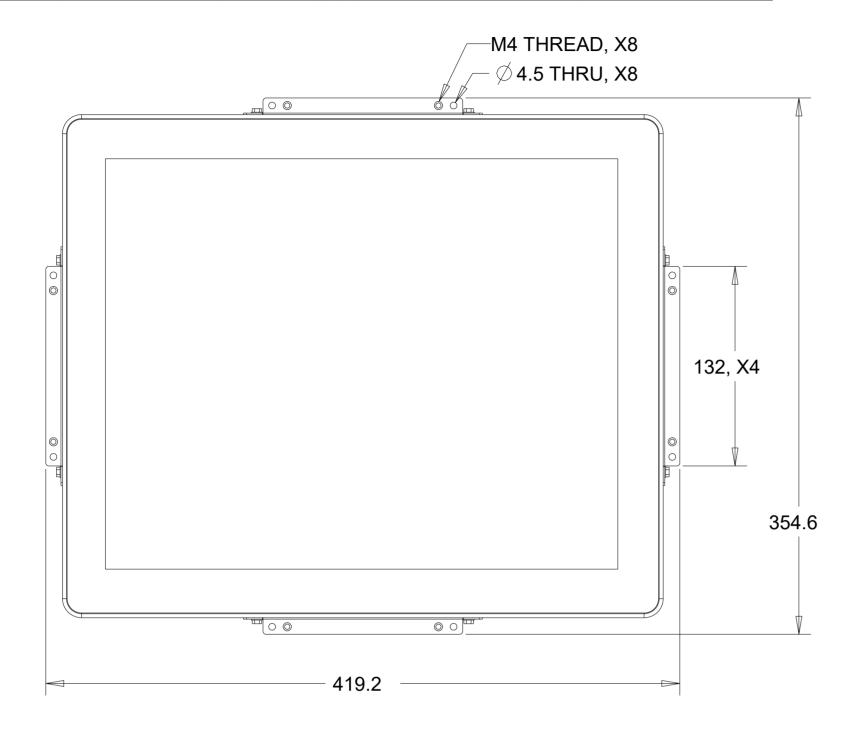

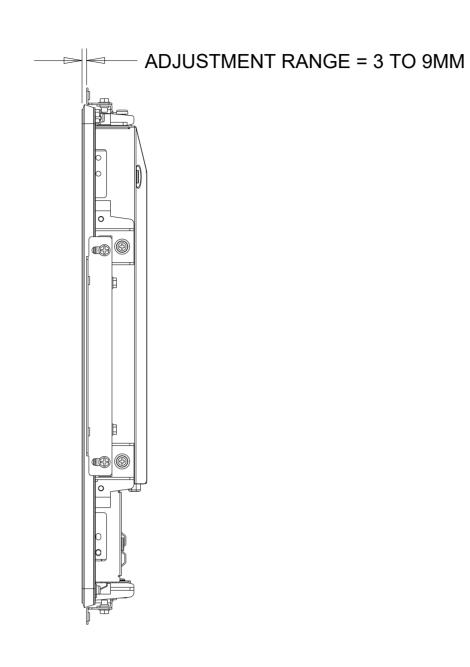


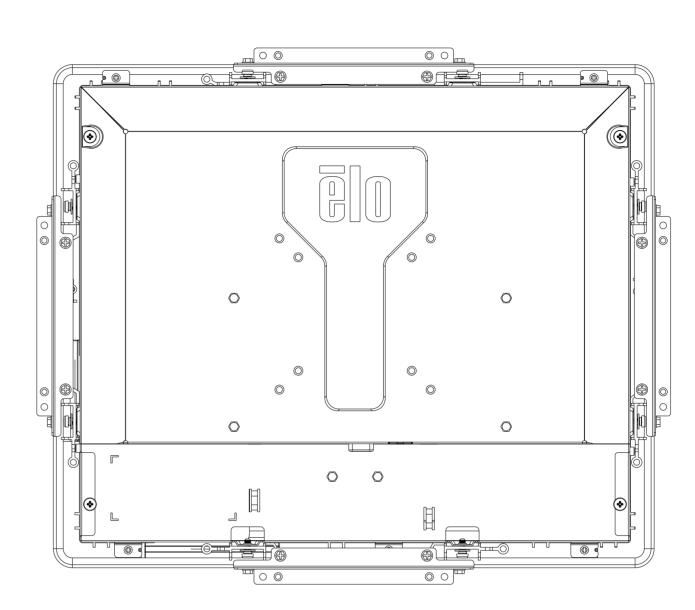


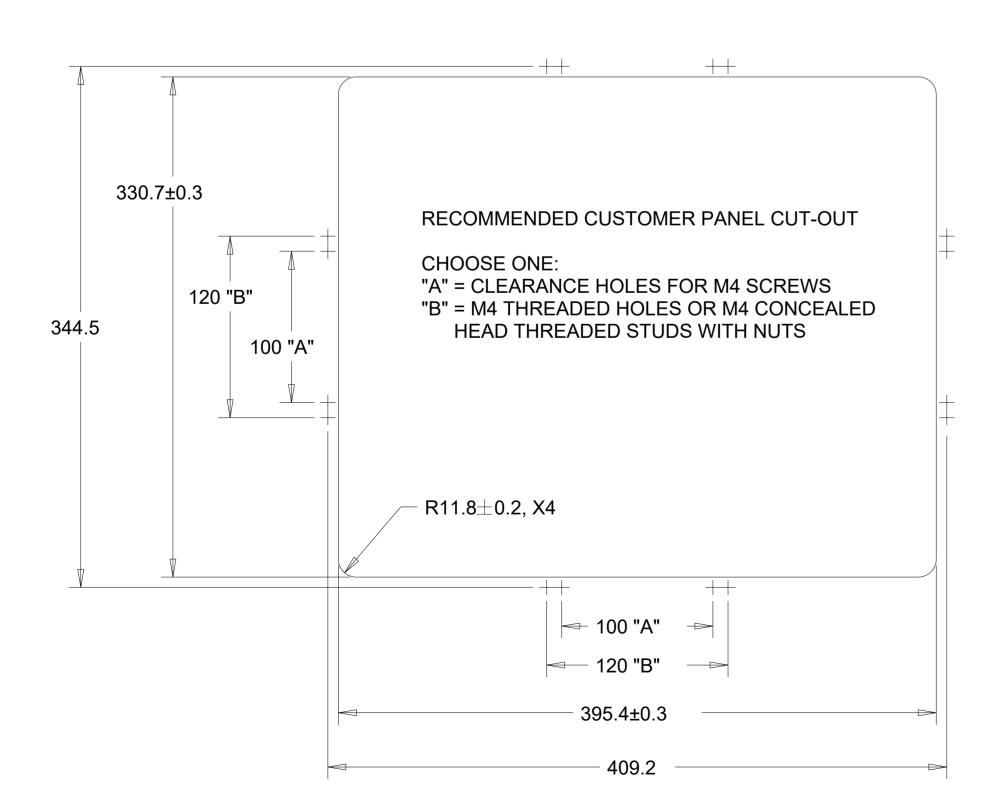

#### **INSTALLATION NOTES:**

- 1. ATTACH BRACKET "A" TO CUSTOMER PANEL (ALL FOUR SIDES) WITH INCLUDED SCREWS
- 2. ATTACH BRACKET "B' TO TOUCHMONITOR (ALL FOUR SIDES)
- 3. PLACE TOUCHMONITOR INTO CUSTOMER PANEL OPENING, TAKING CARE NOT TO DAMAGE FOAM SEAL
- 4. ADJUST DEPTH OF BRACKETS "B" SO THE MONITOR IS FLUSH WITH CUSTOMER PANEL
- 5. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND WITH INCLUDED SCREWS

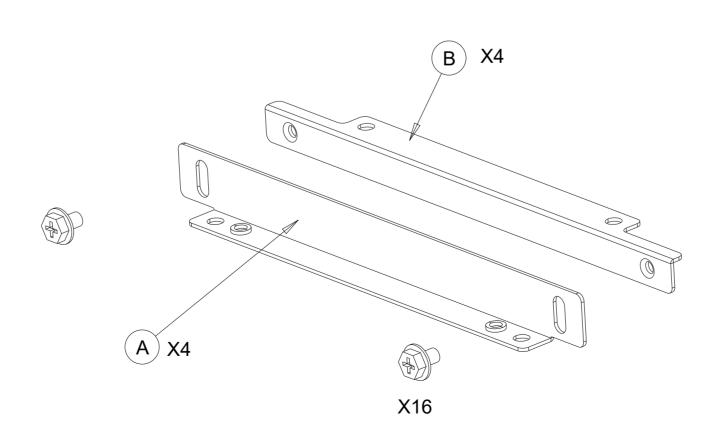

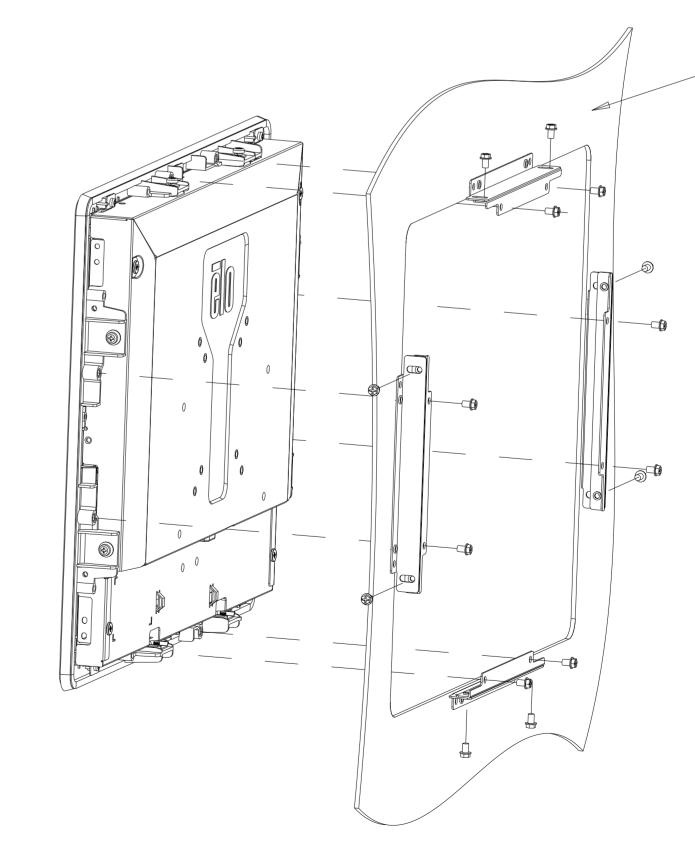


CUSTOMER PANEL (NOT INCLUDED) MIN THICKNESS = 3MM MAX THICKNESS = 12MM


MS601691


DATE: 12/28/2022


REV: D


### BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

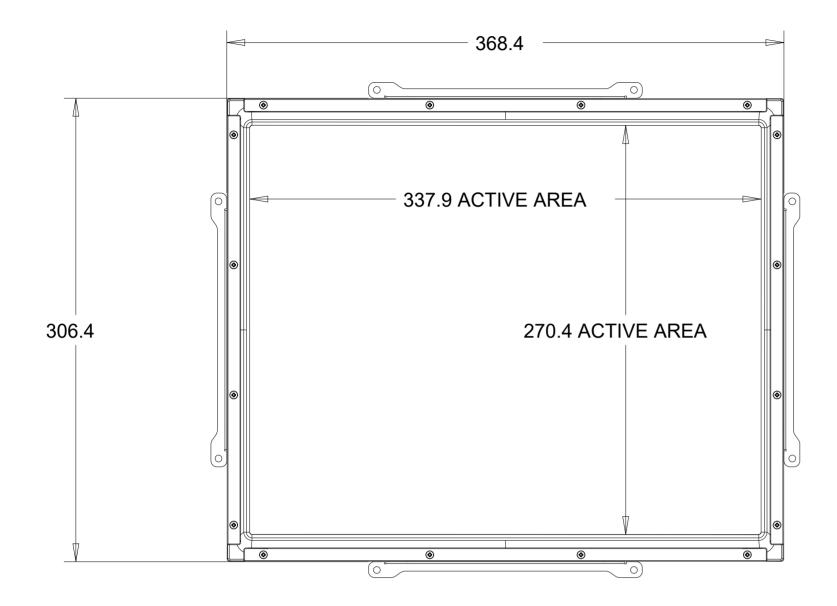

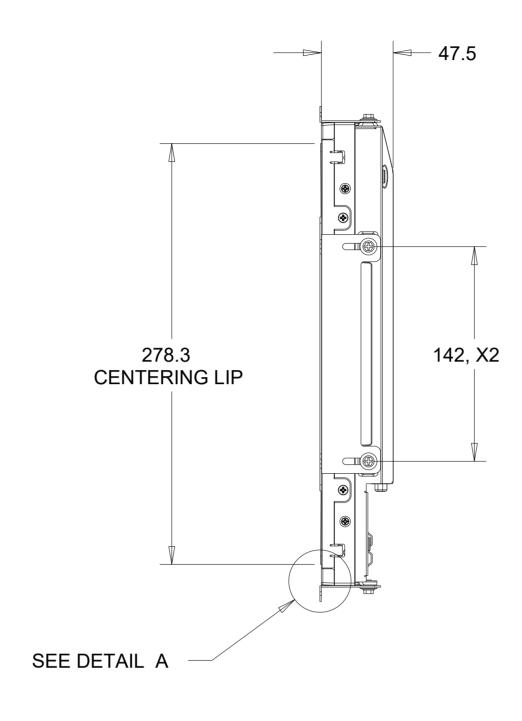

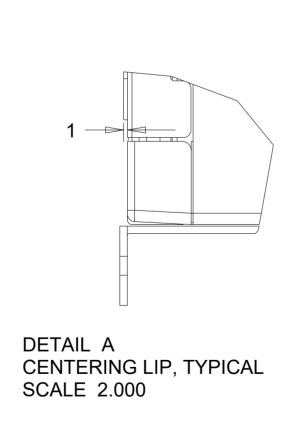


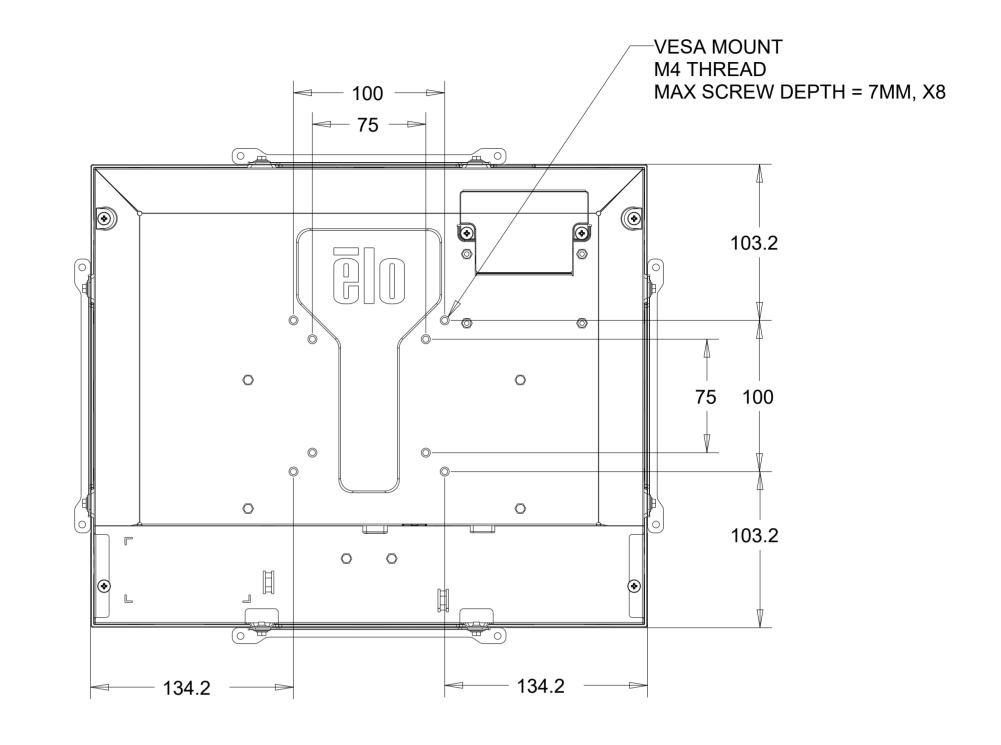


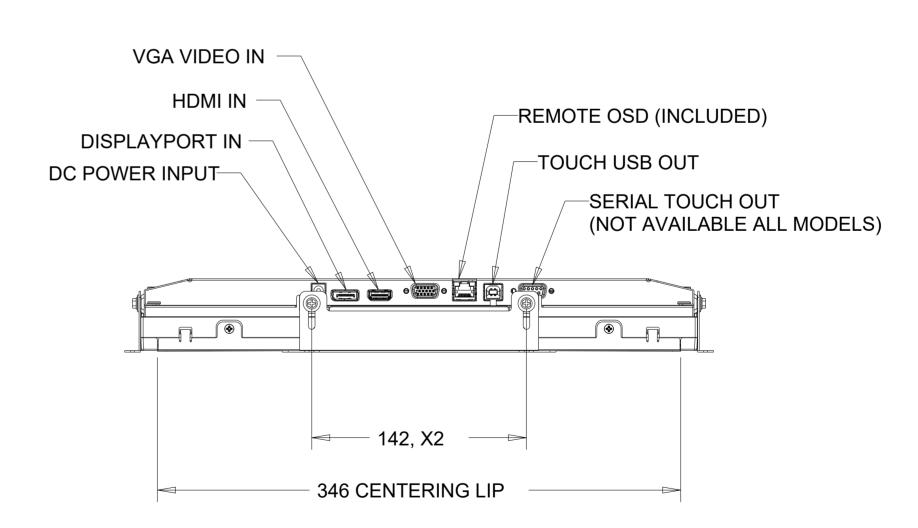


#### BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL


## WITH SIDE MOUNTING BRACKETS (2 INCLUDED) REPLACEMENT BRACKET KIT P/N E147211 AVAILABLE SEPARATELY

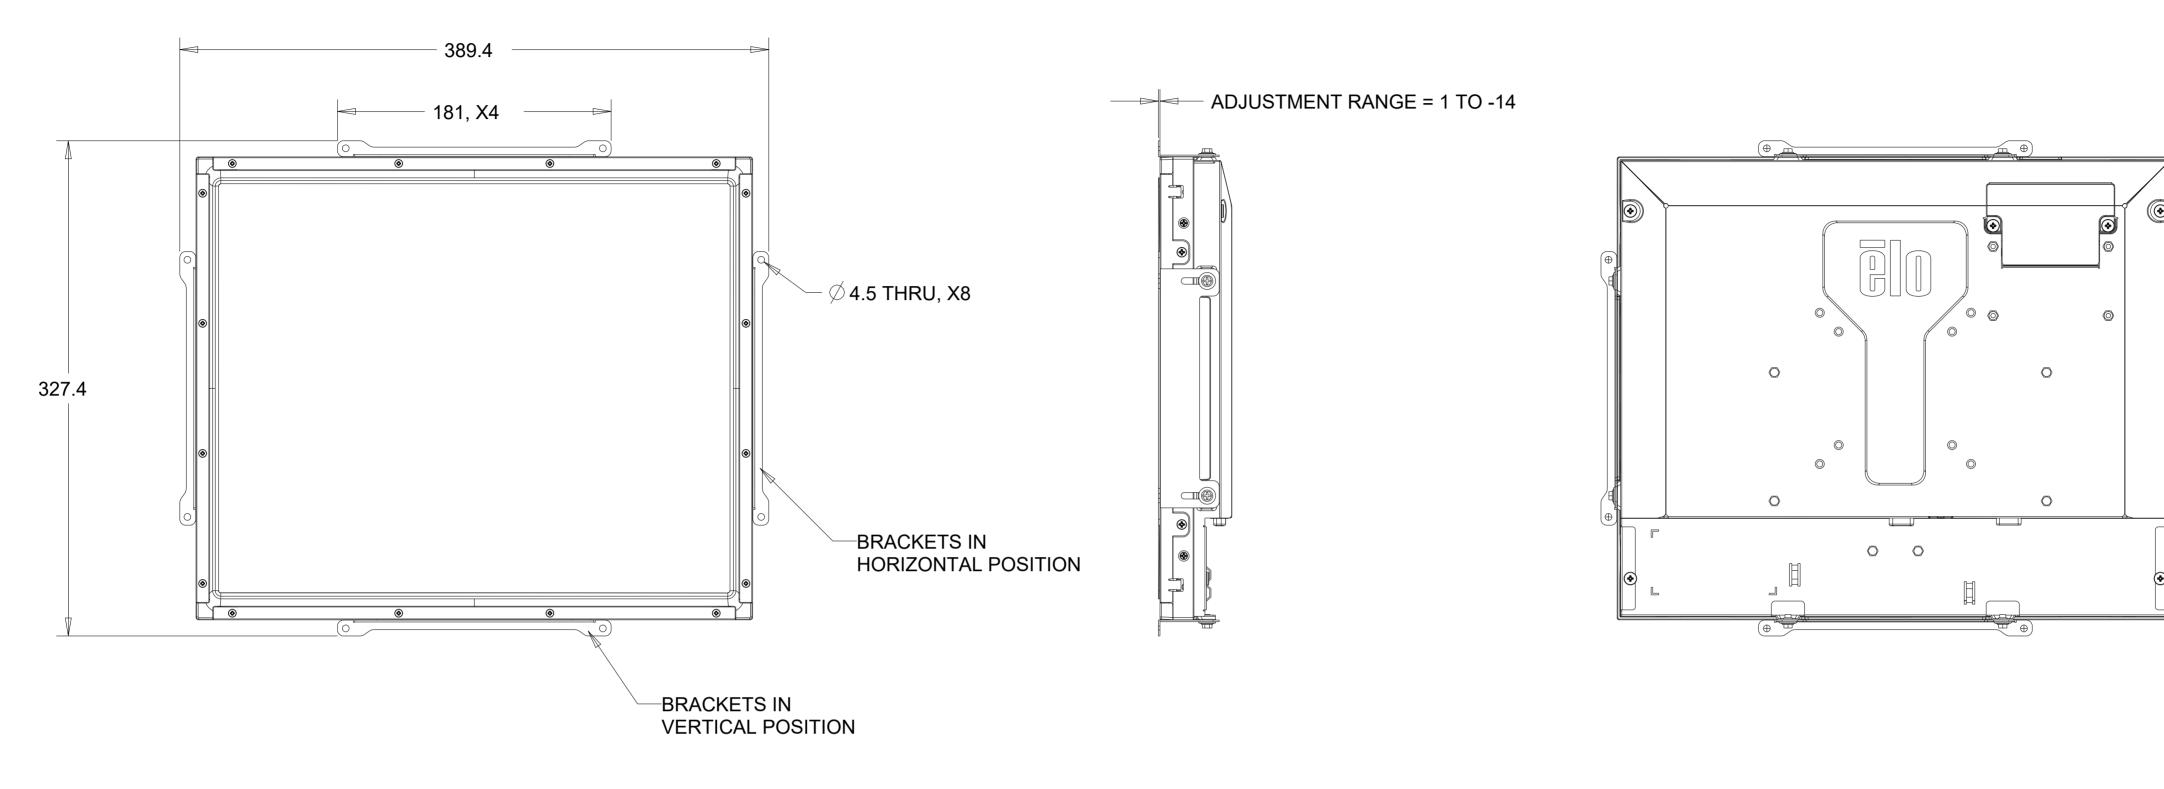


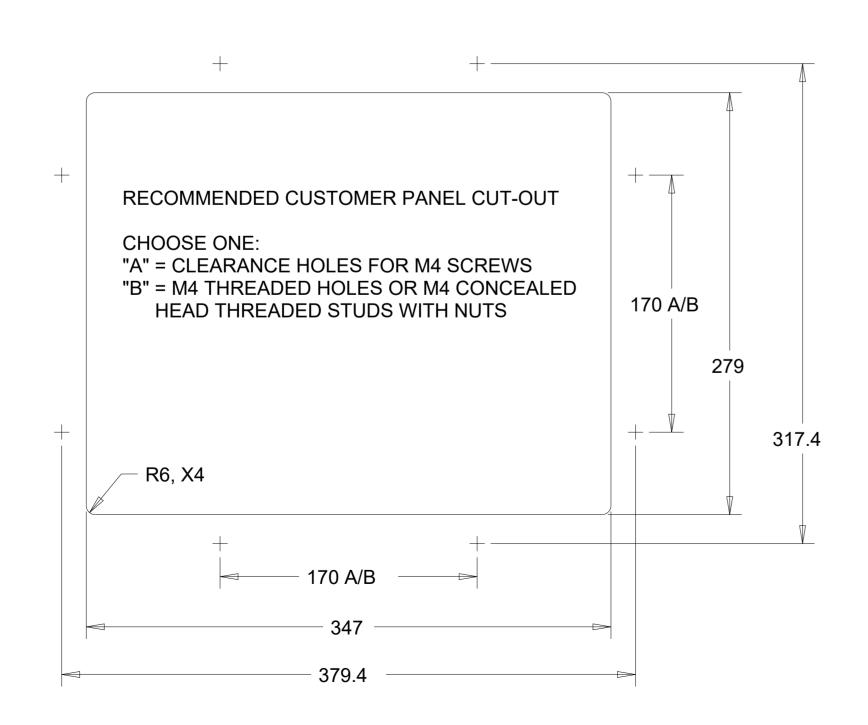


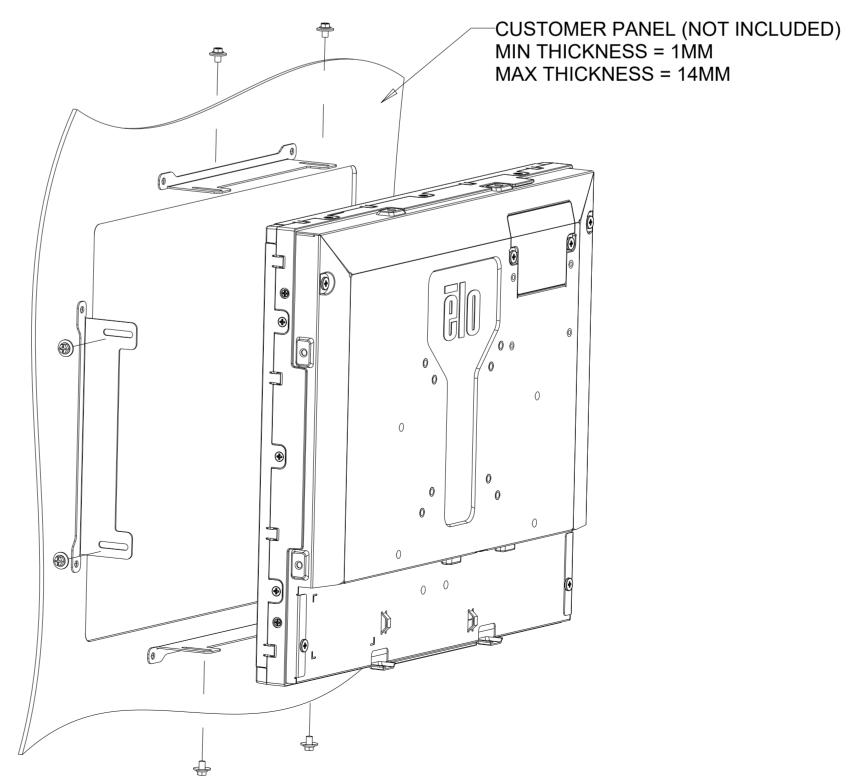



# FRONT MOUNT KIT P/N E860319 FOR BEZELED PCAP,INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY (ORDERED SEPARATELY, CUSTOMER ASSEMBLED)

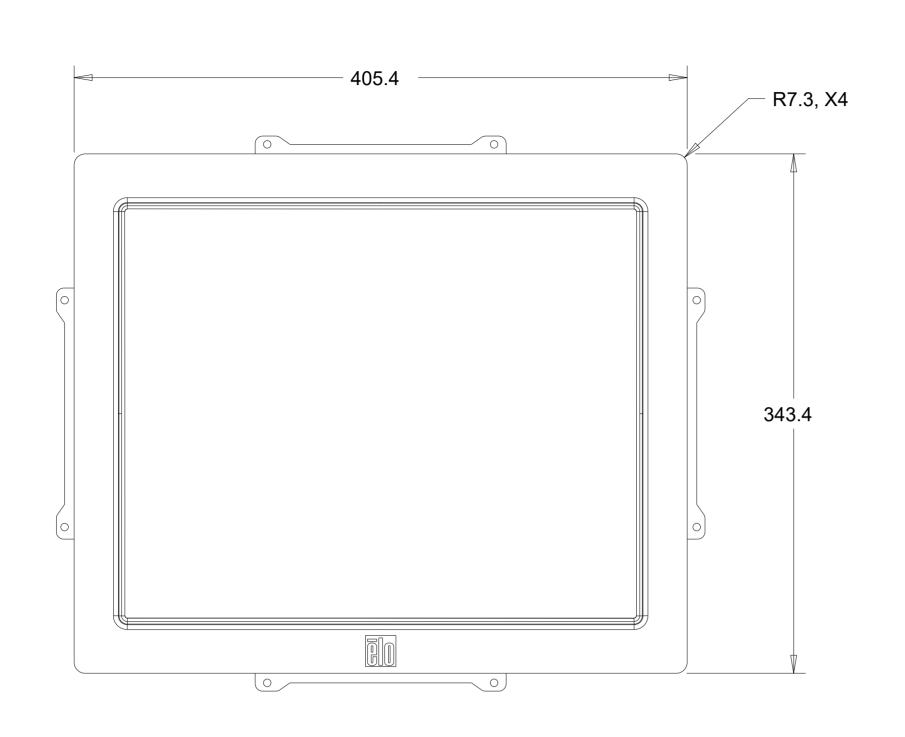

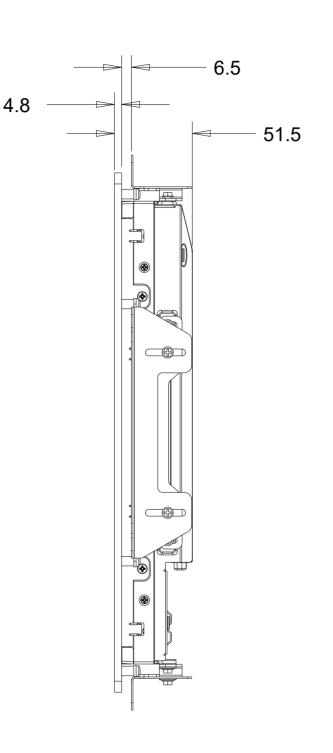

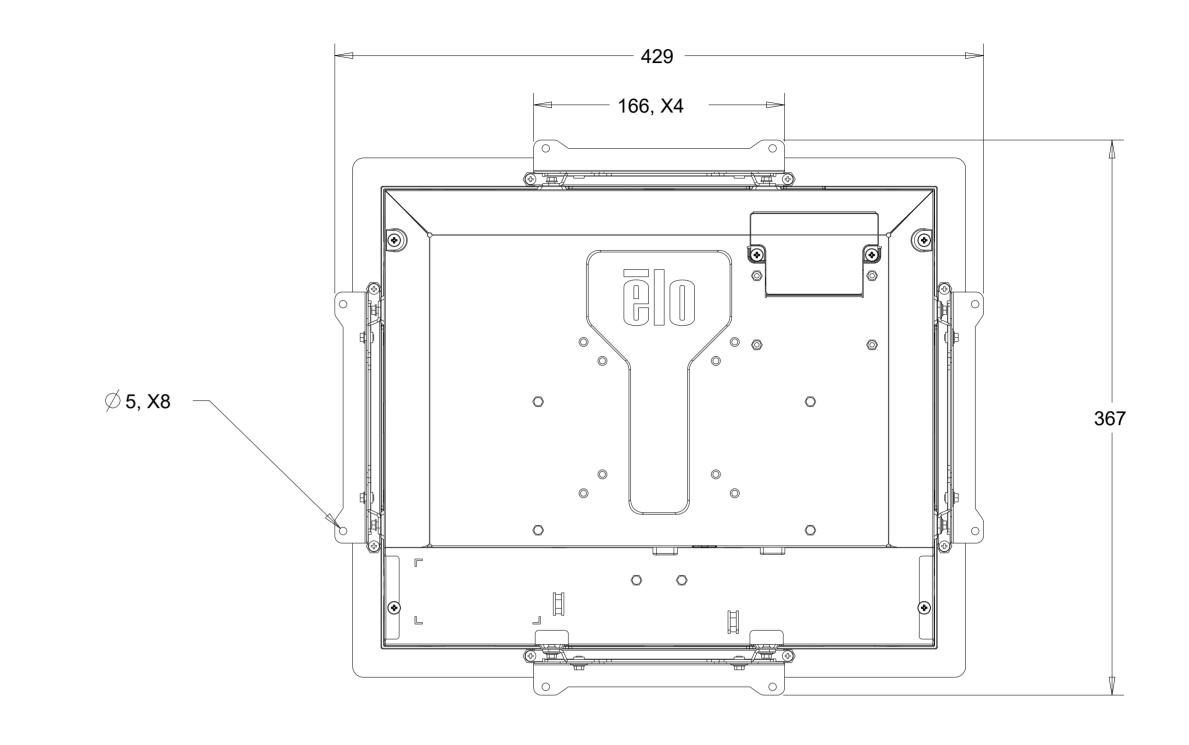

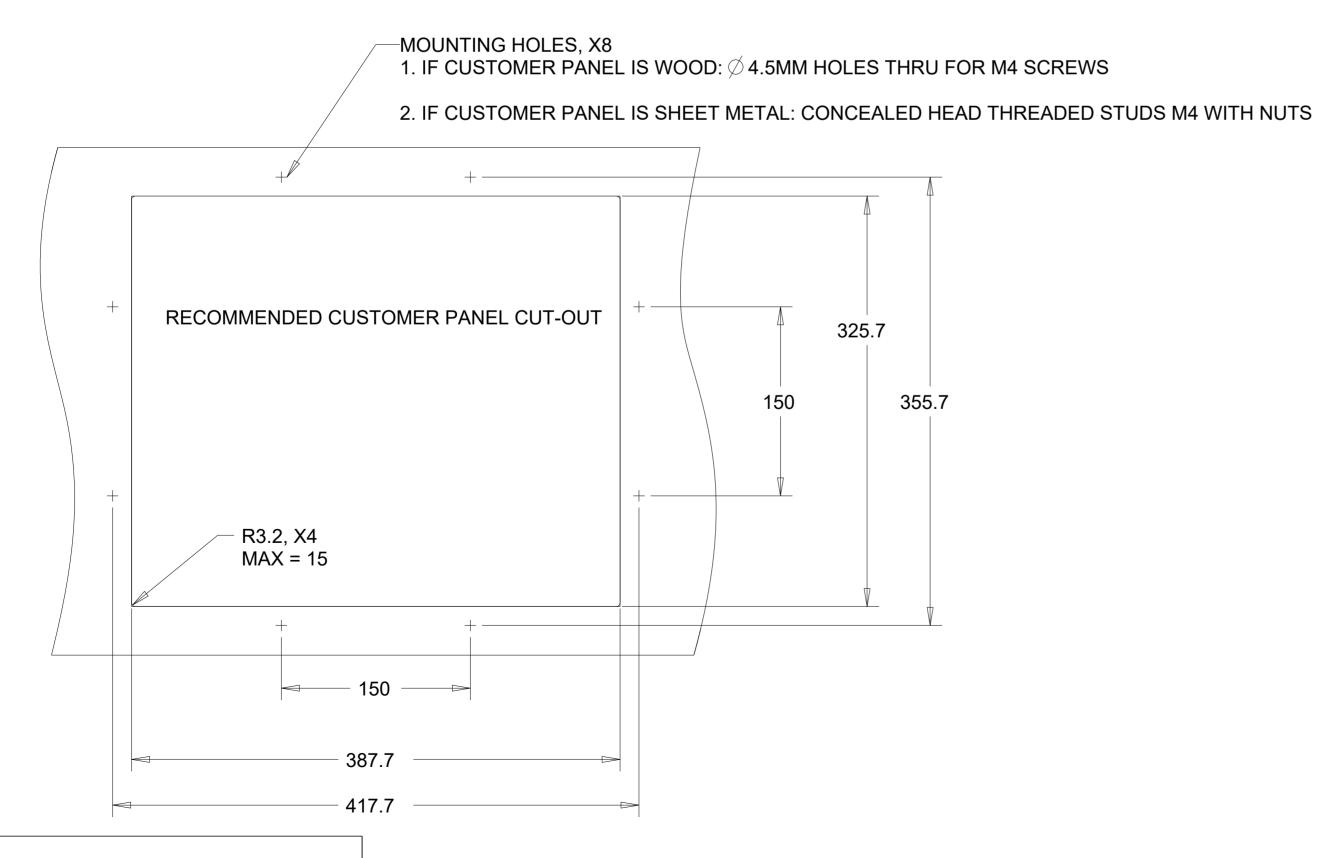

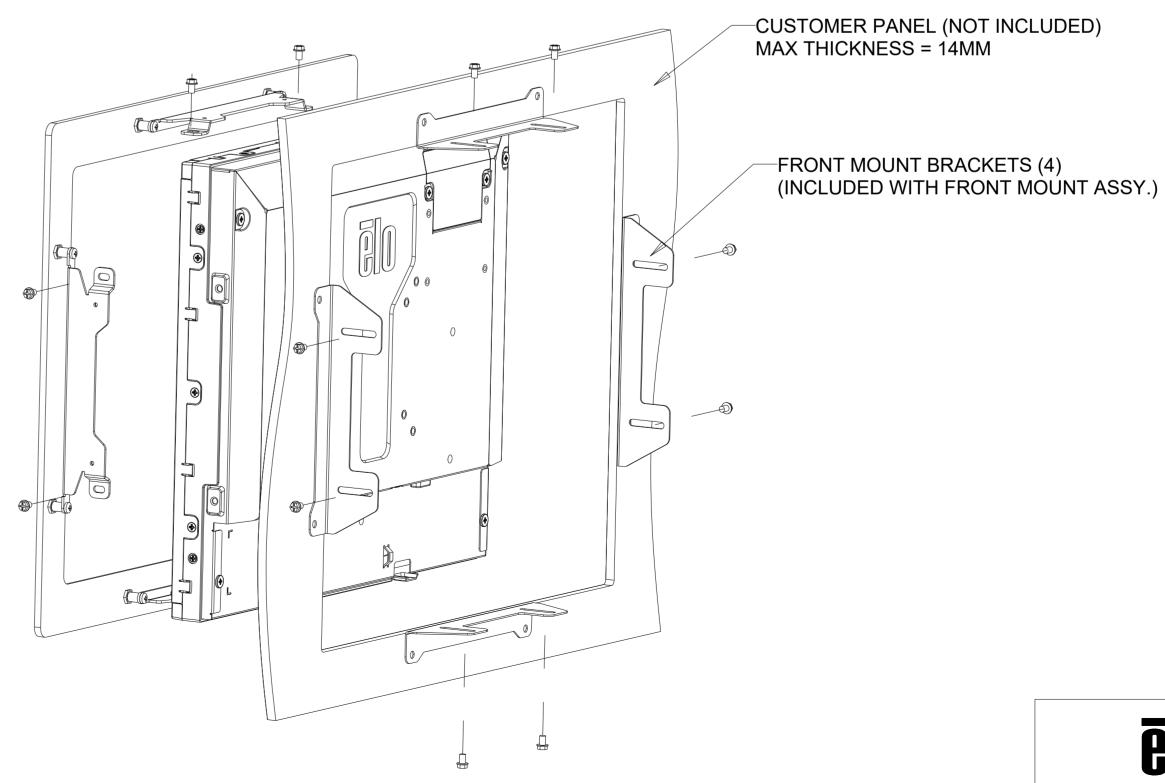



ēlo


SHEET 5 OF 6

MS601691 DATE: 12/28/2022 REV: D

### RACK MOUNT KIT P/N E939253 FOR BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY (ORDERED SEPARATELY, CUSTOMER ASSEMBLED)

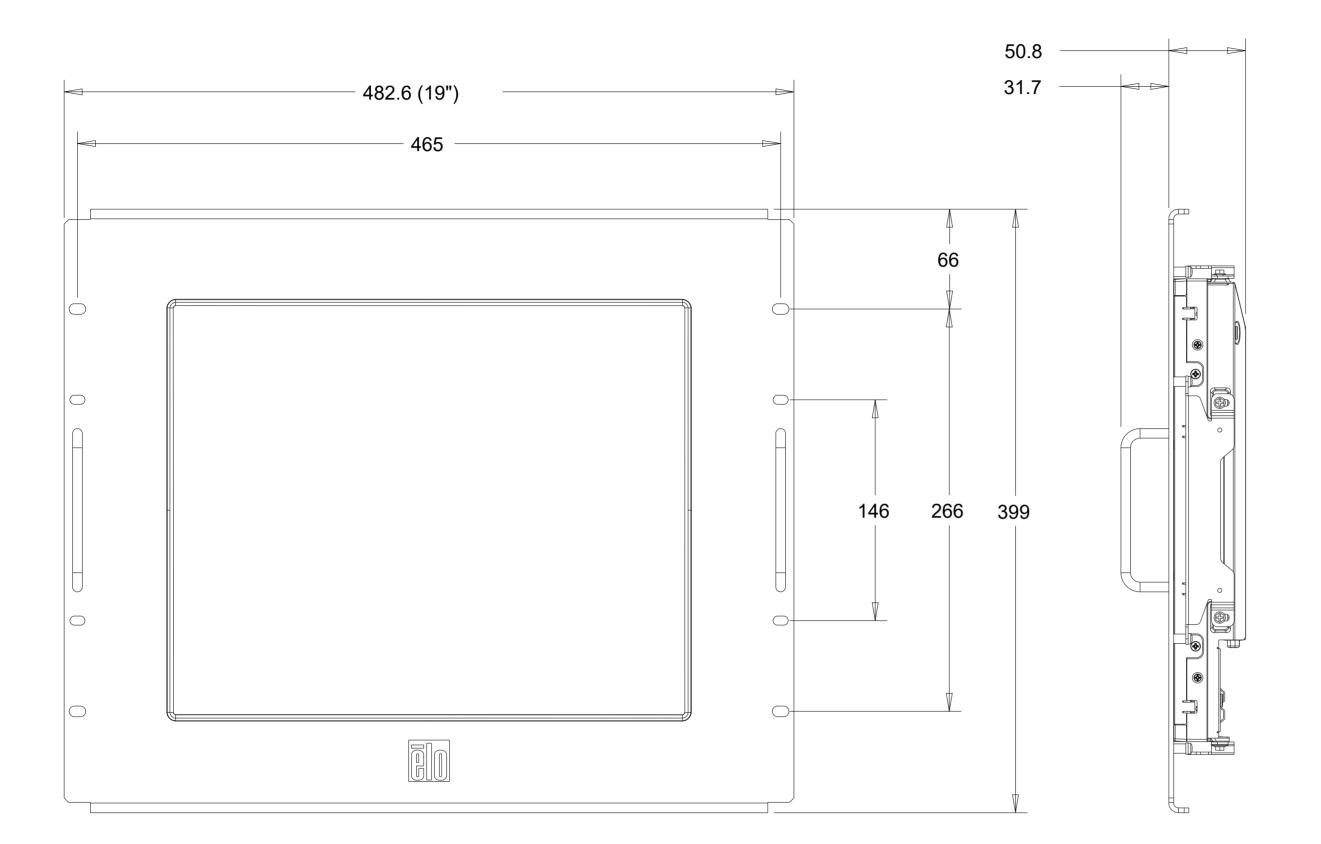

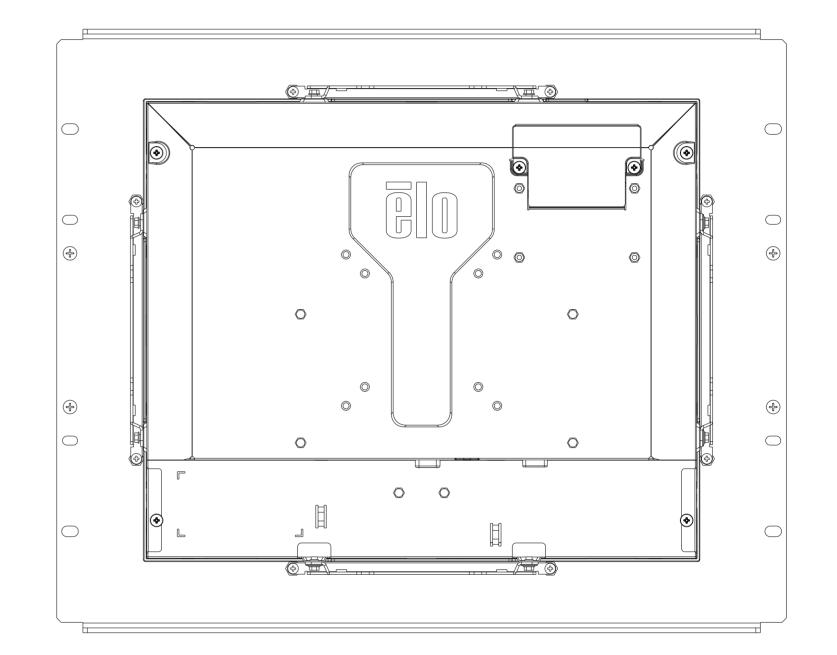

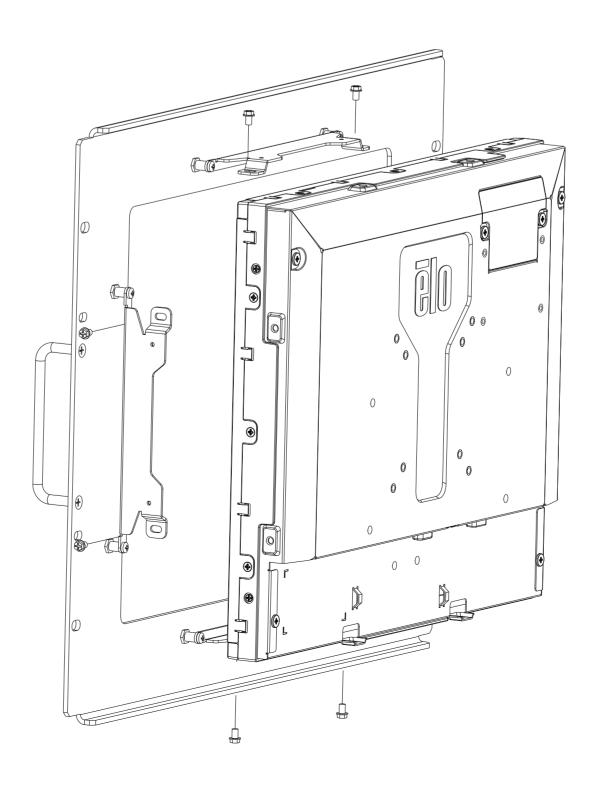

REV: D