

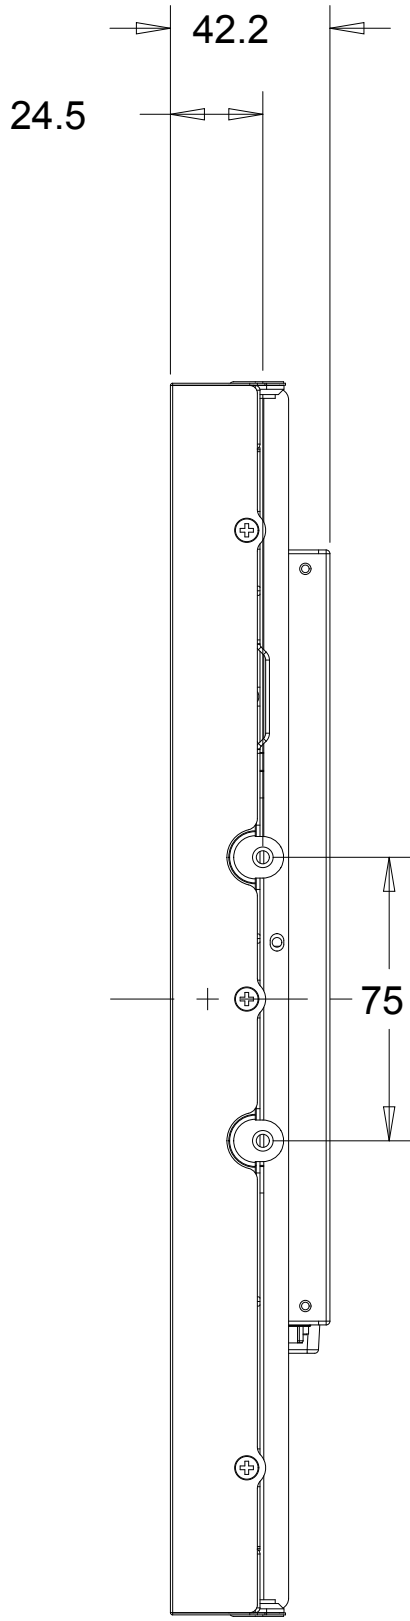



INTELLITOUCH/ NO TOUCH MODEL

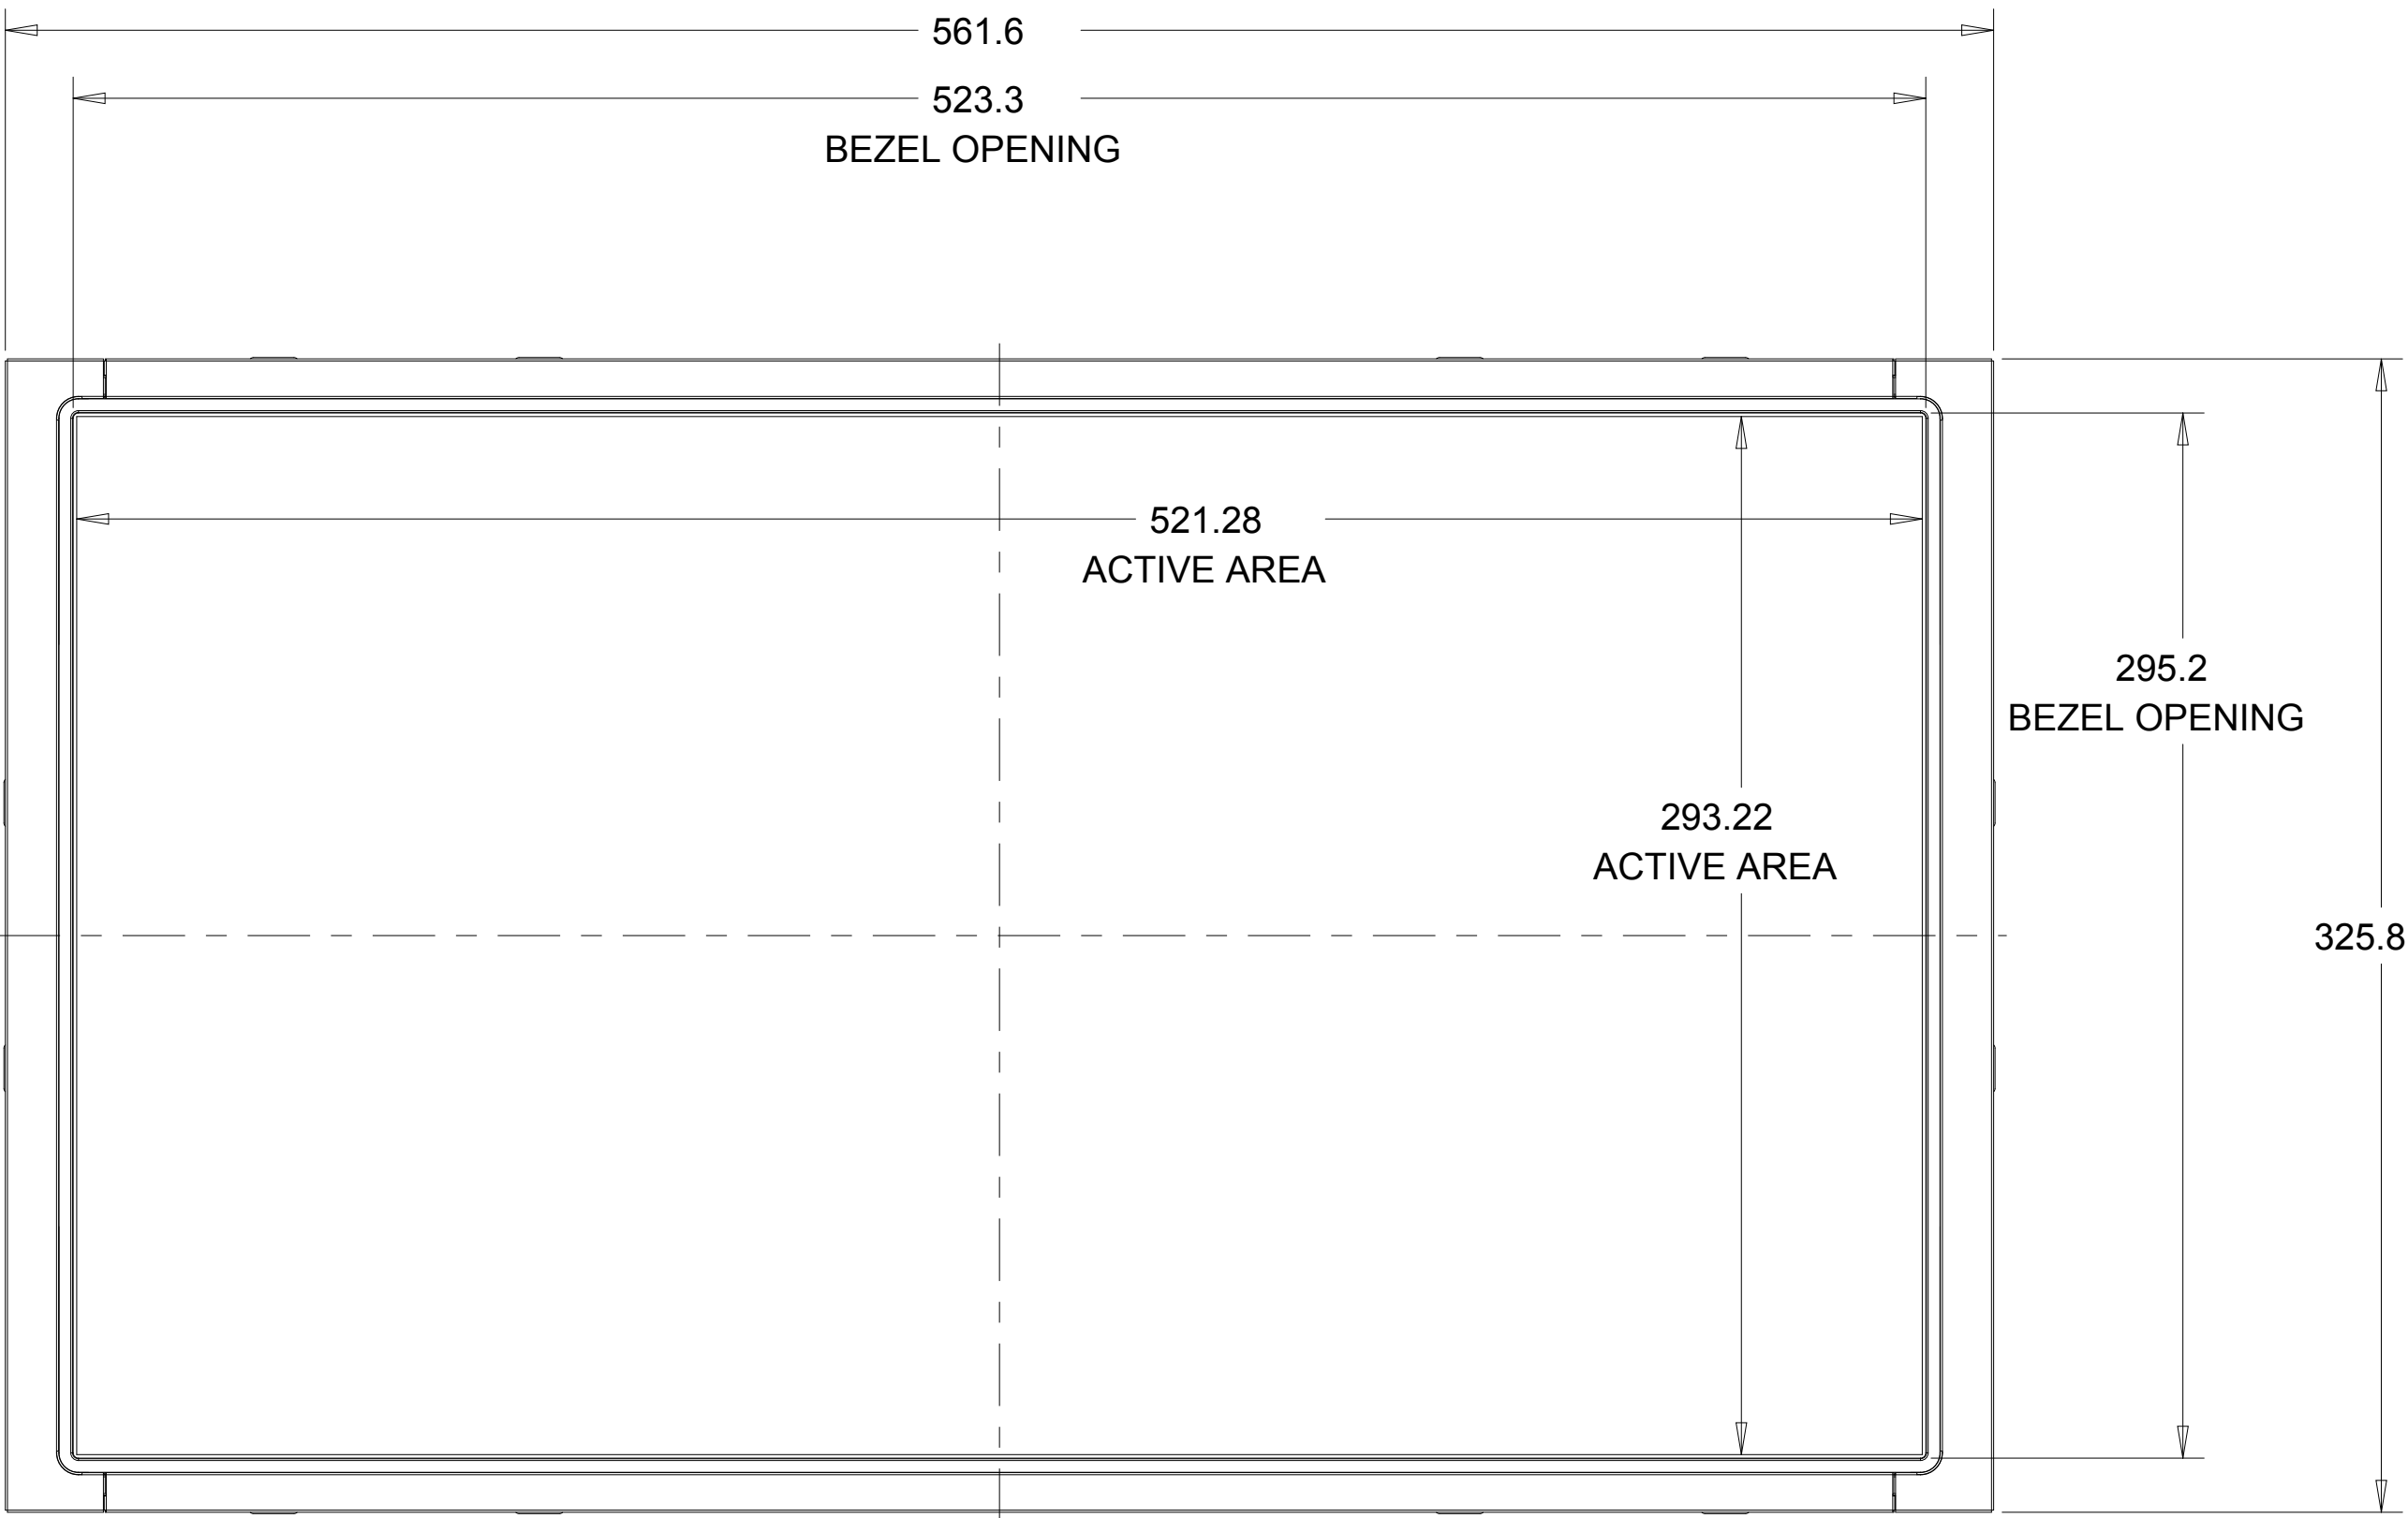


SIDE MOUNT,  
VERTICAL  
RIGHT/LEFT

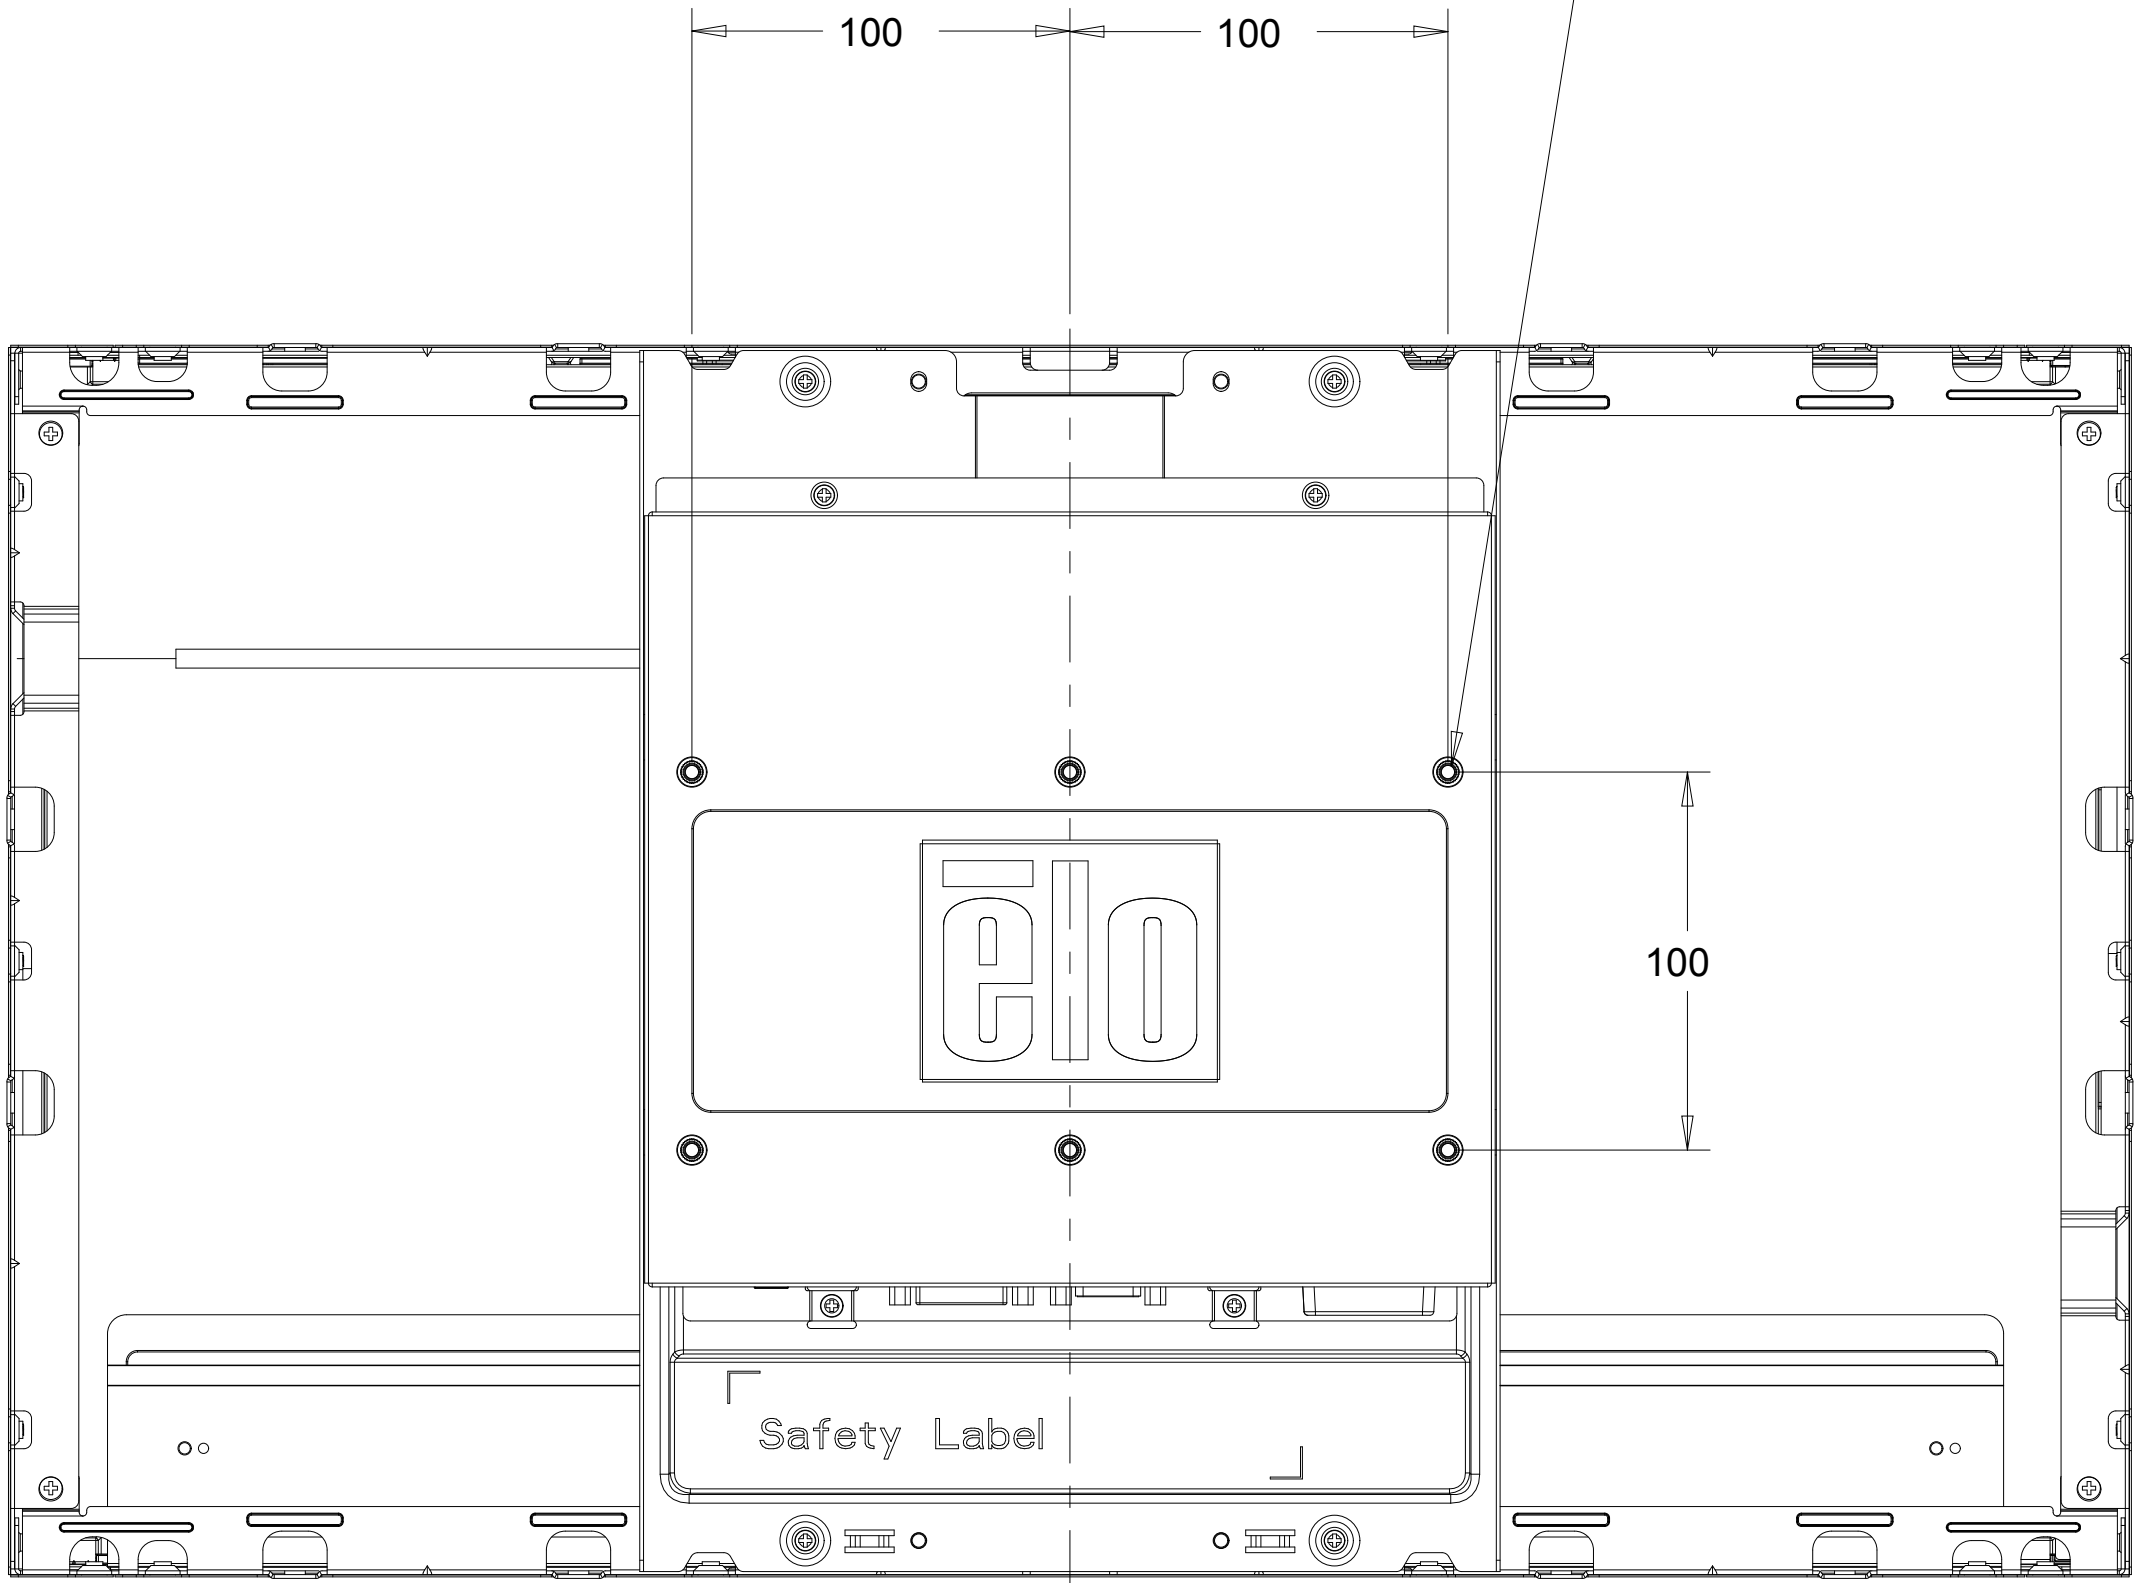


VESA MOUNT

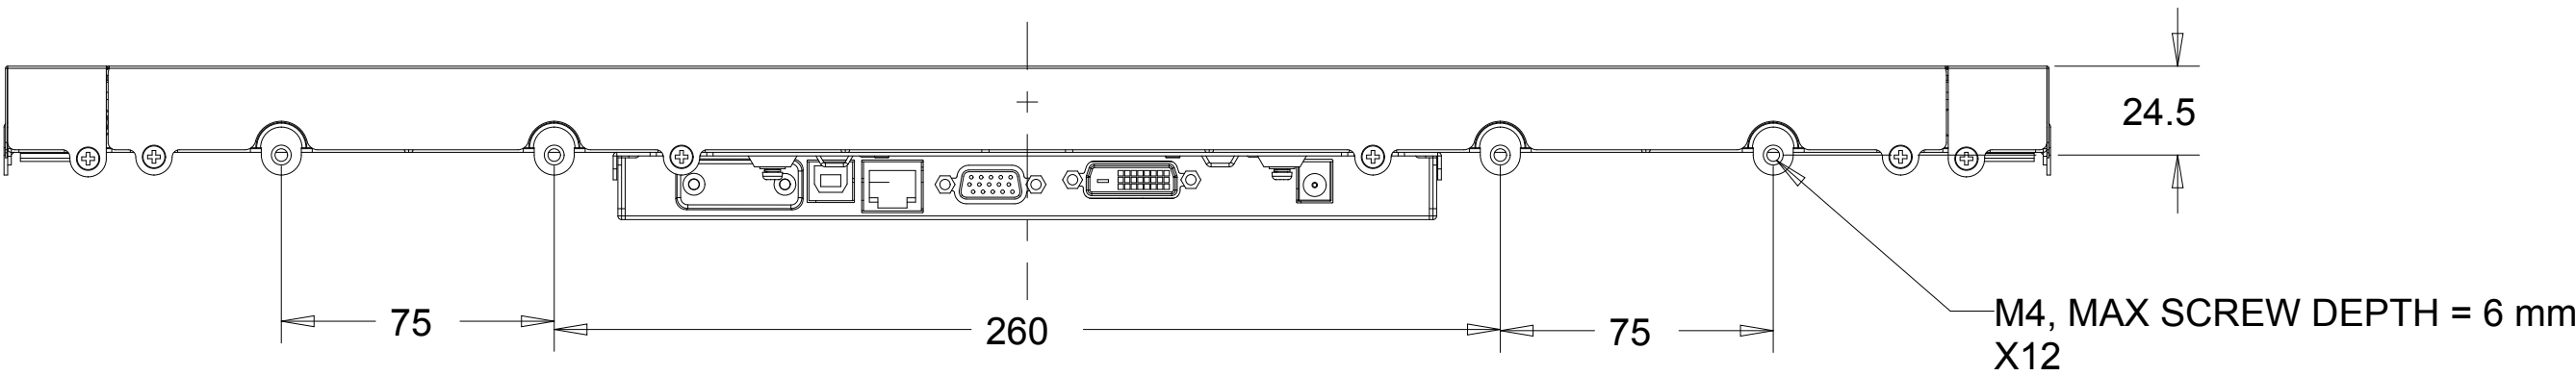


SIDE MOUNT,  
HORIZONTAL,  
TOP/BOTTOM

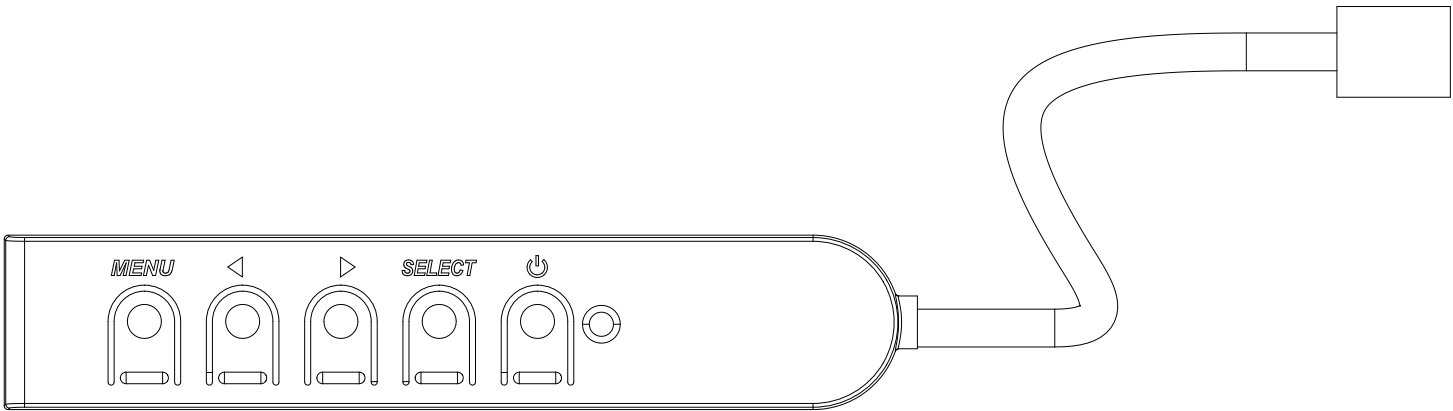



OSD REMOTE P/N E483757  
(INCLUDED WITH TOUCH MONITOR)

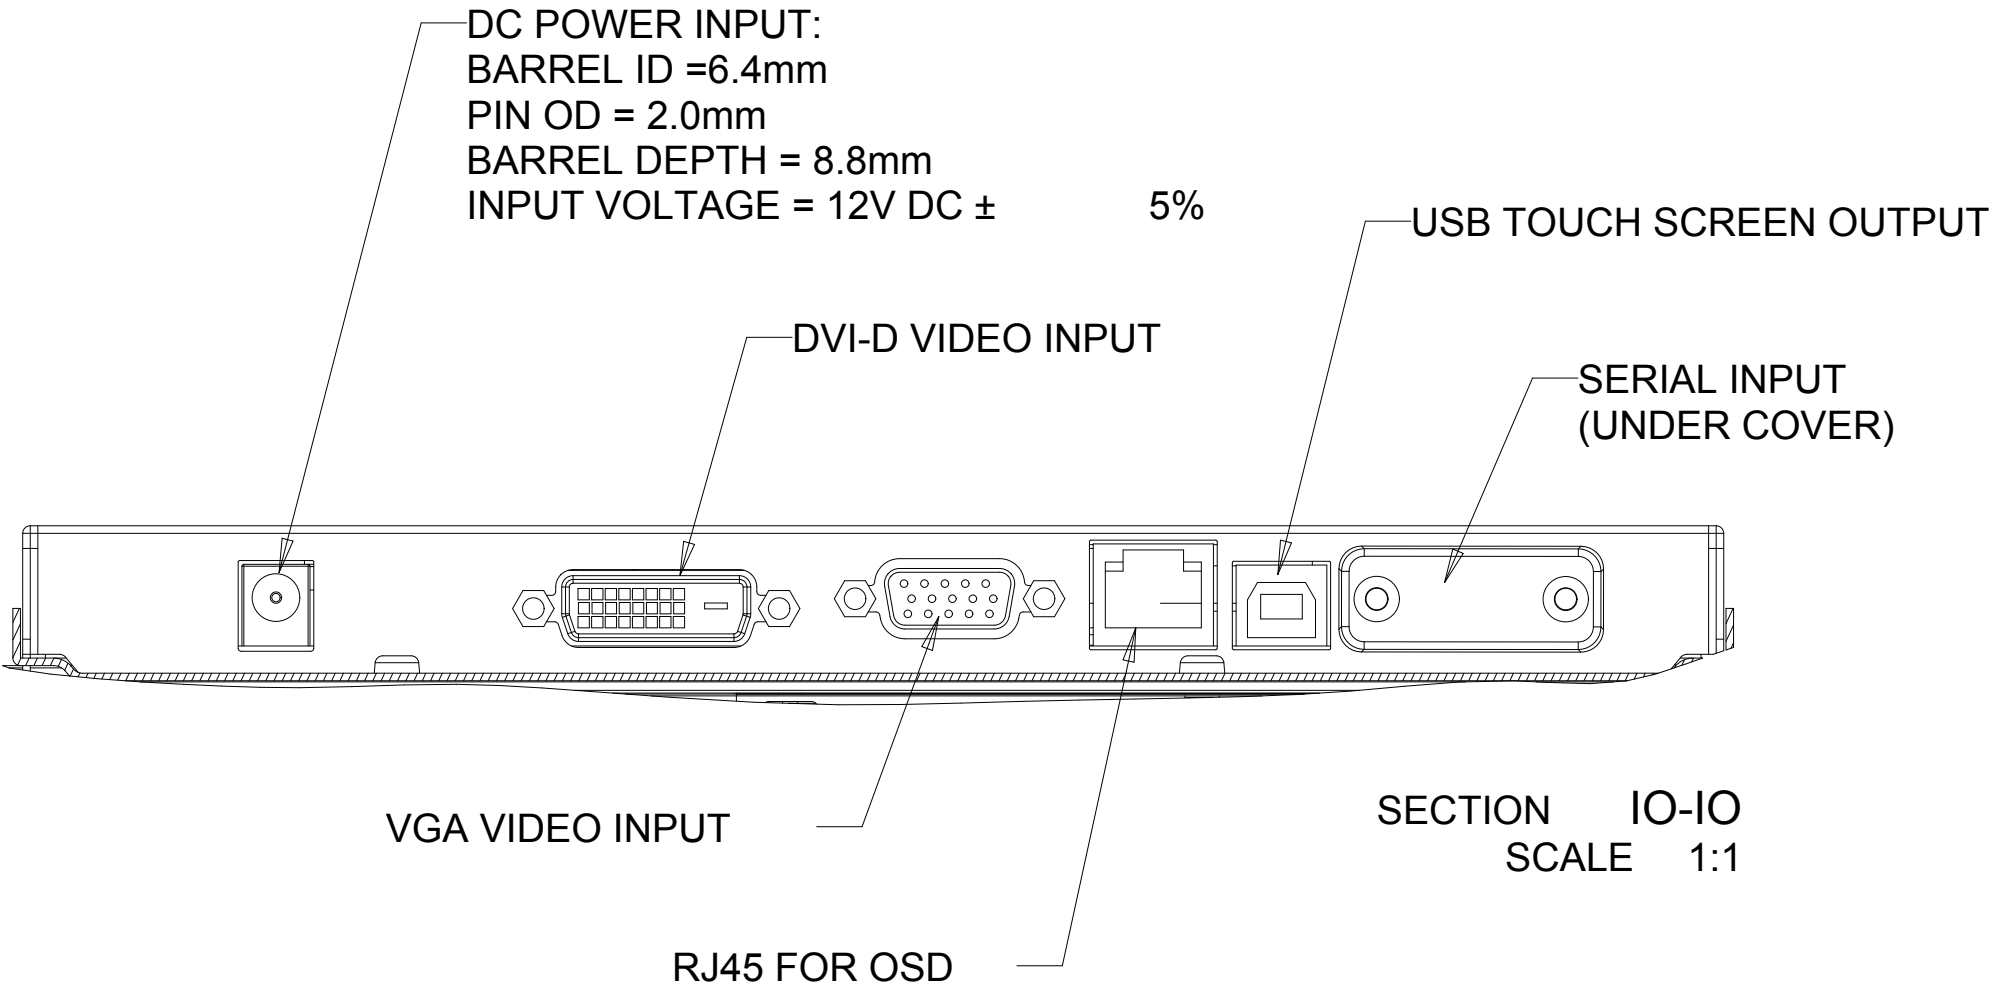


MOUNTING WITH ADJUSTABLE BRACKETS (6 PROVIDED)

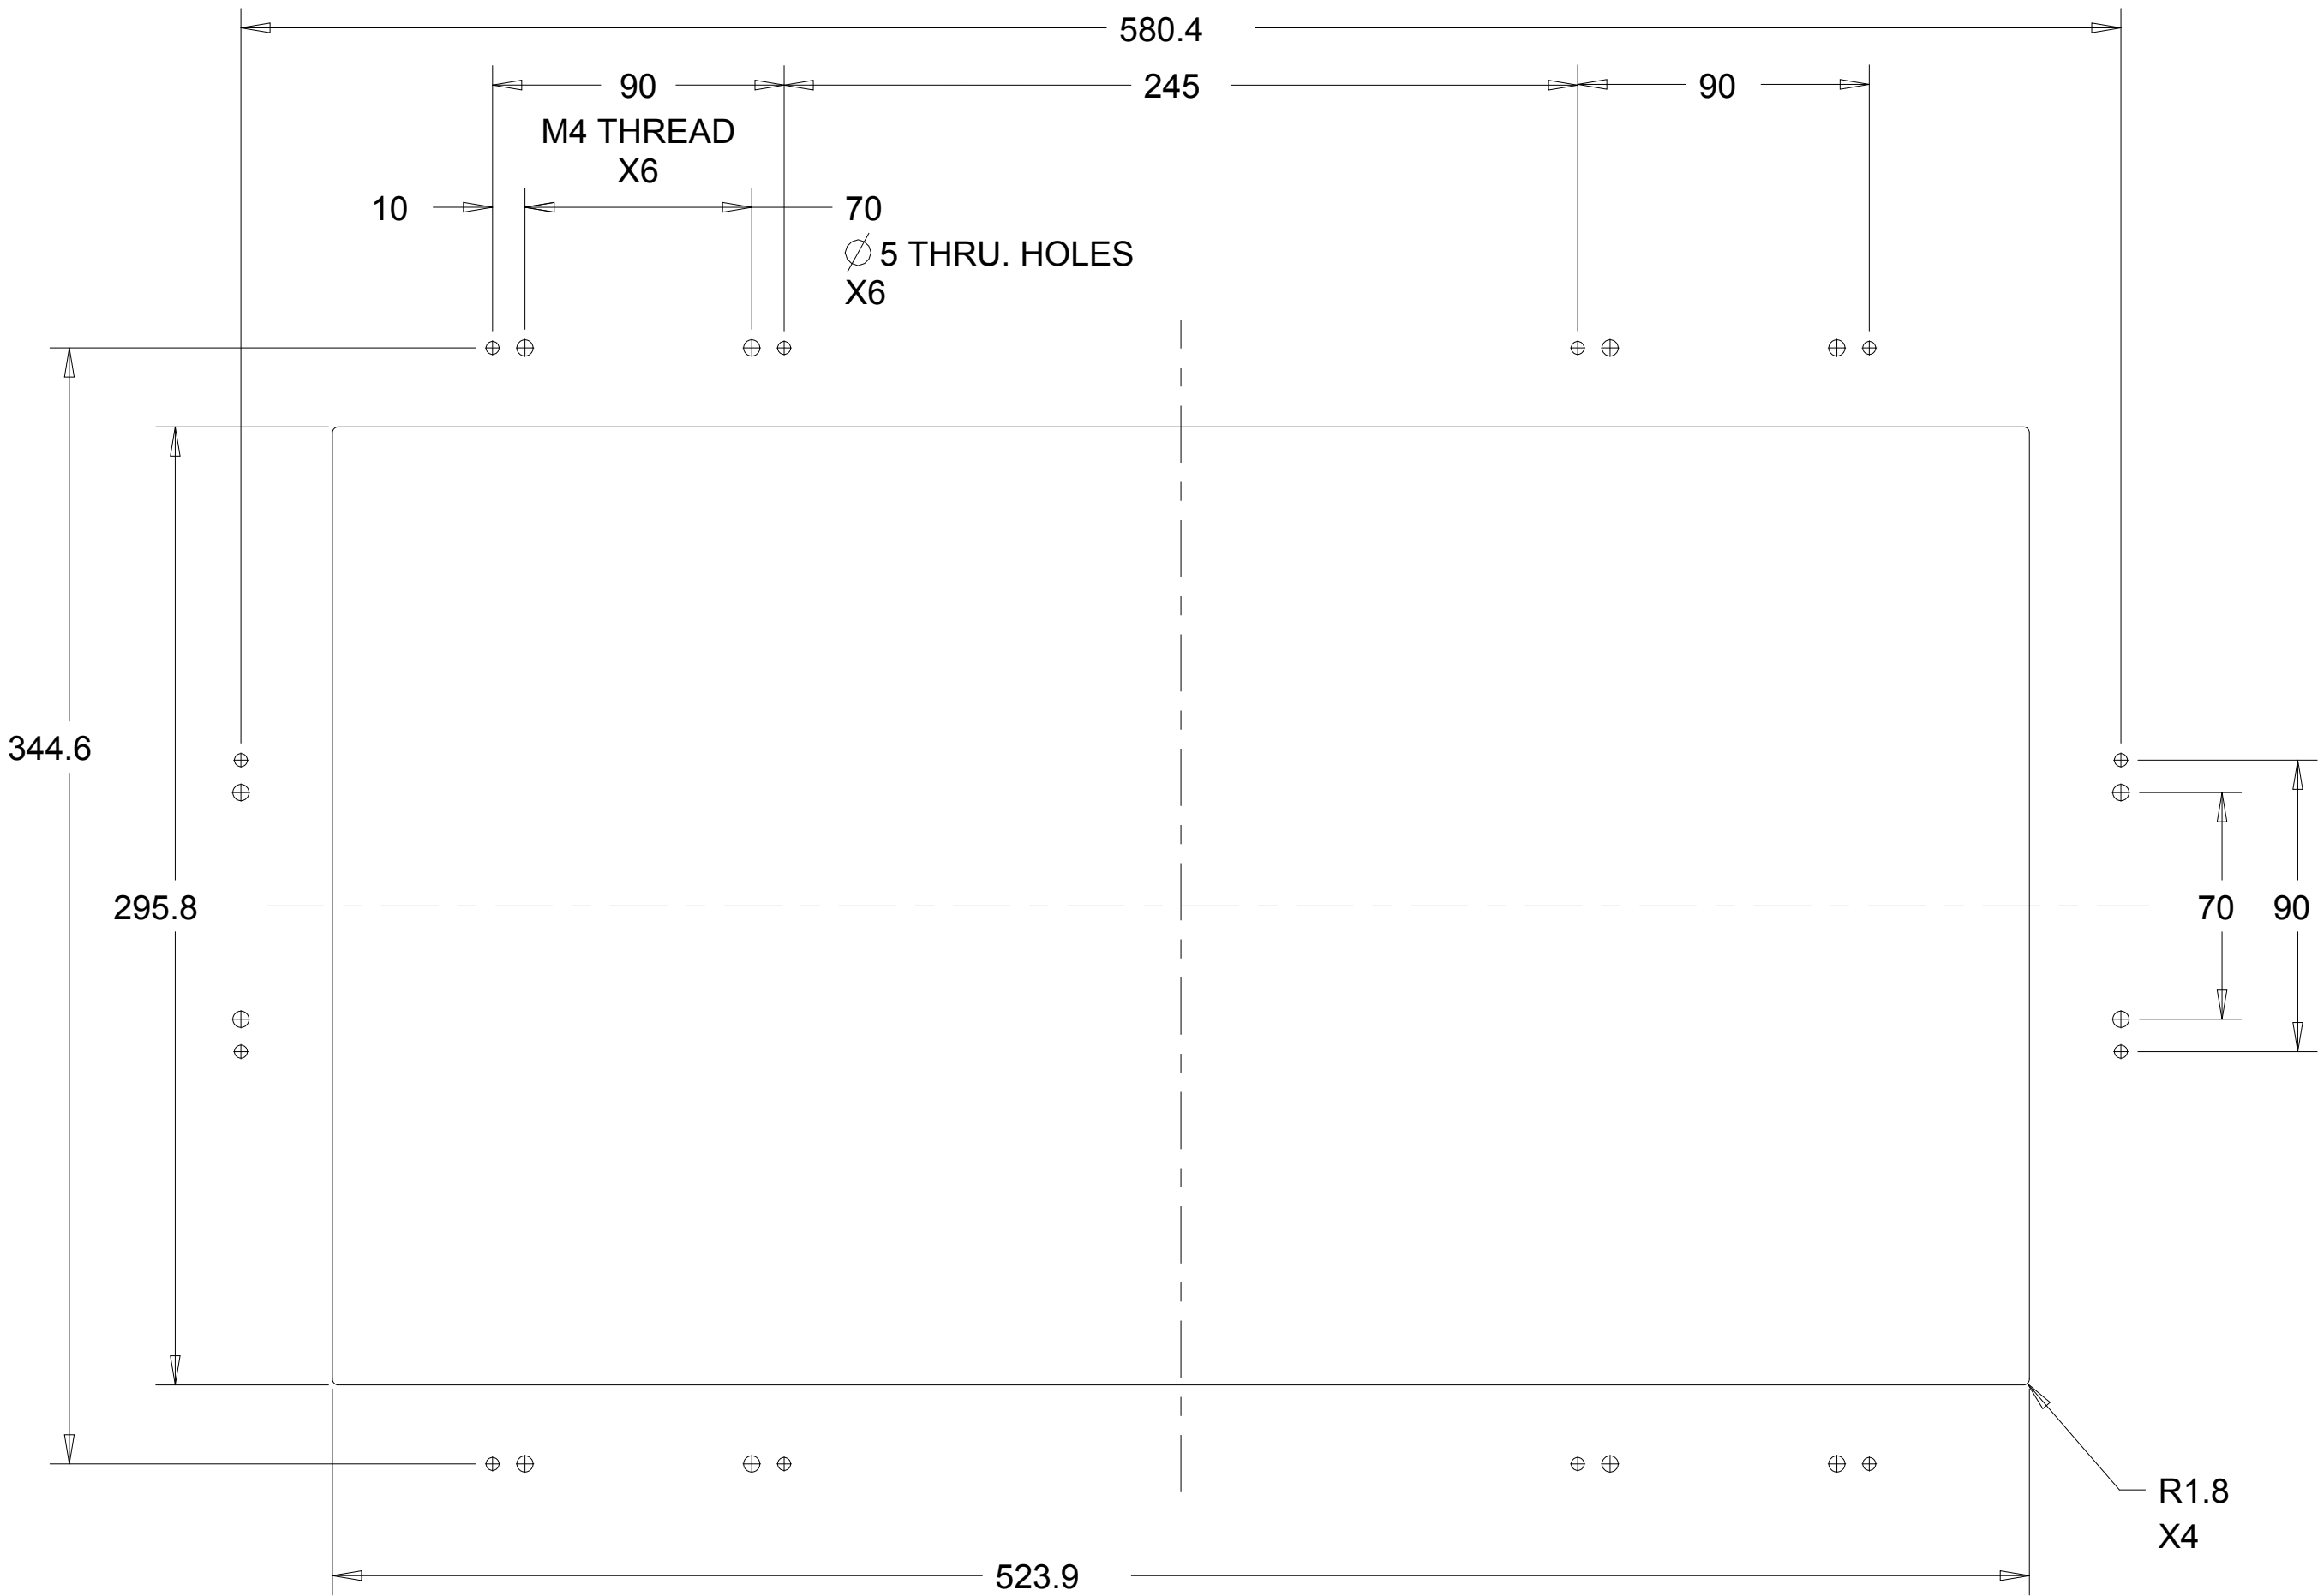



RECOMMENDED CUSTOMER PANEL CUT-OUT

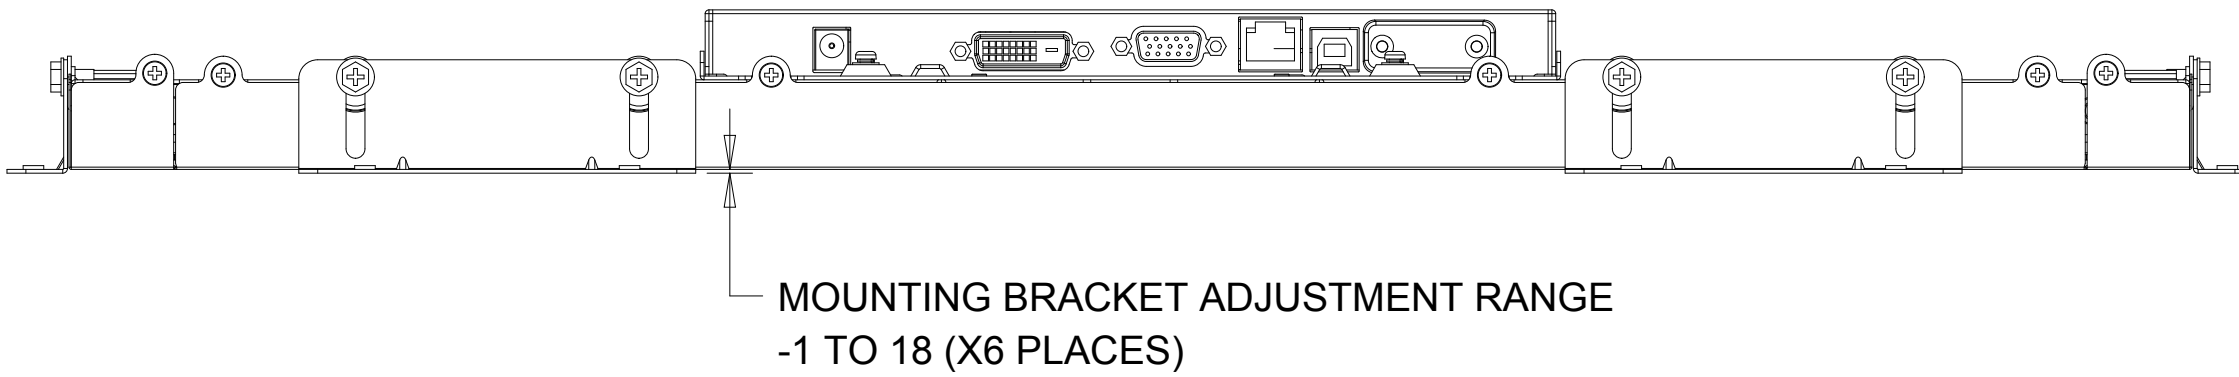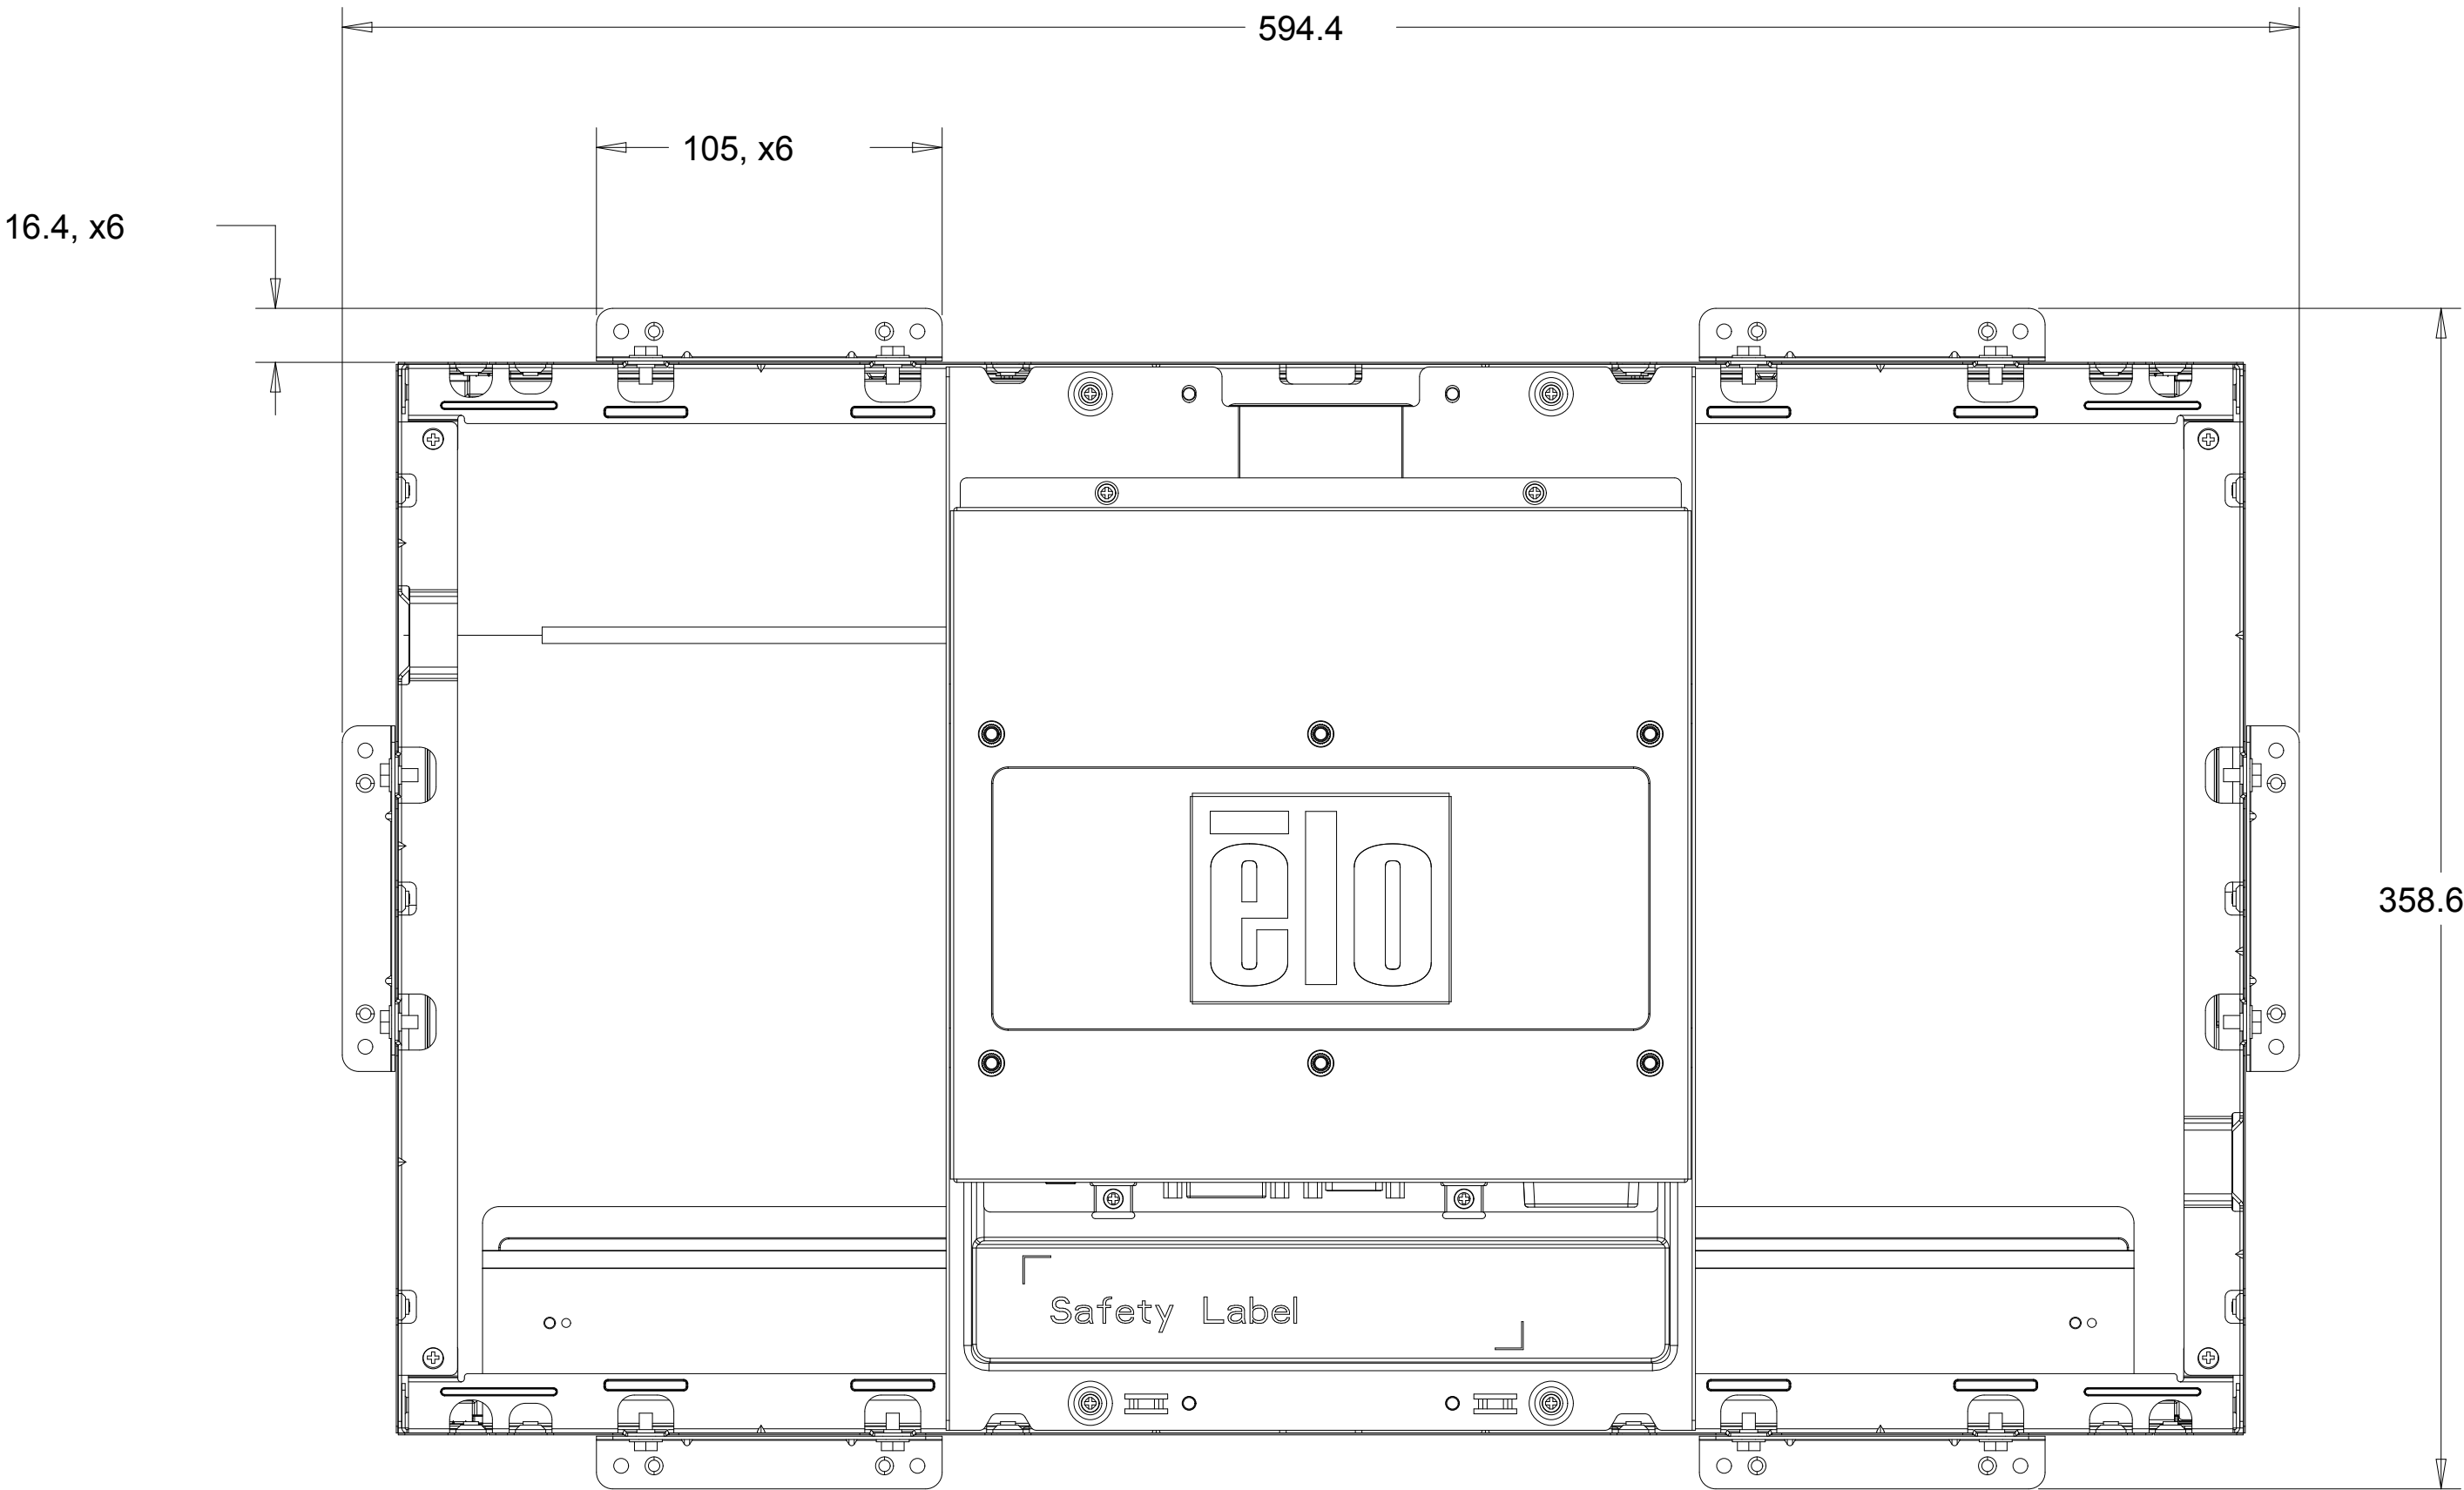

OPITIONAL FRONT MOUNT BEZEL KIT P/N E000880  
INTELLITOUCH AND NO-TOUCH MODELS ONLY  
(ORDERED SEPARATELY, CUSTOMER ASSEMBLED)

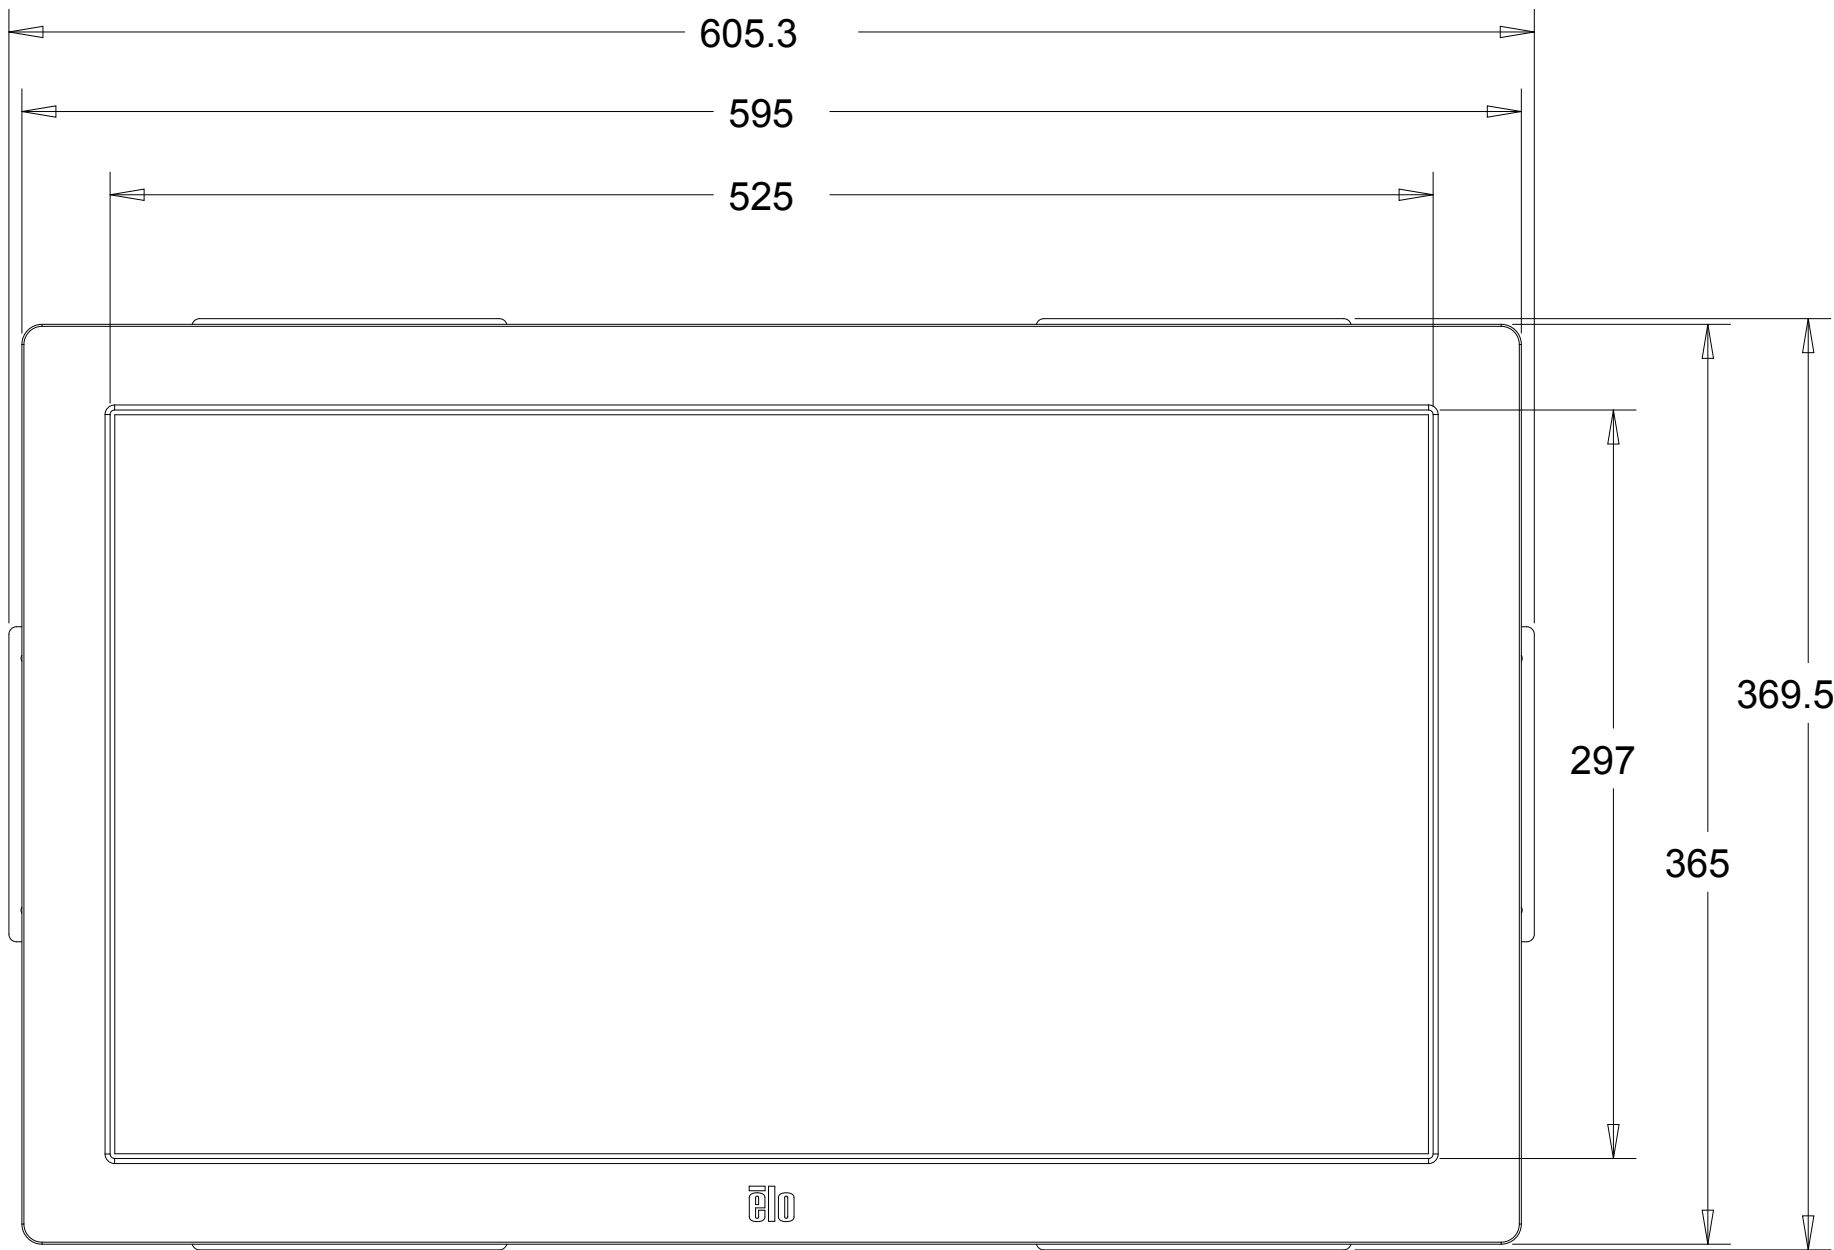


FRONT MOUNT BEZEL

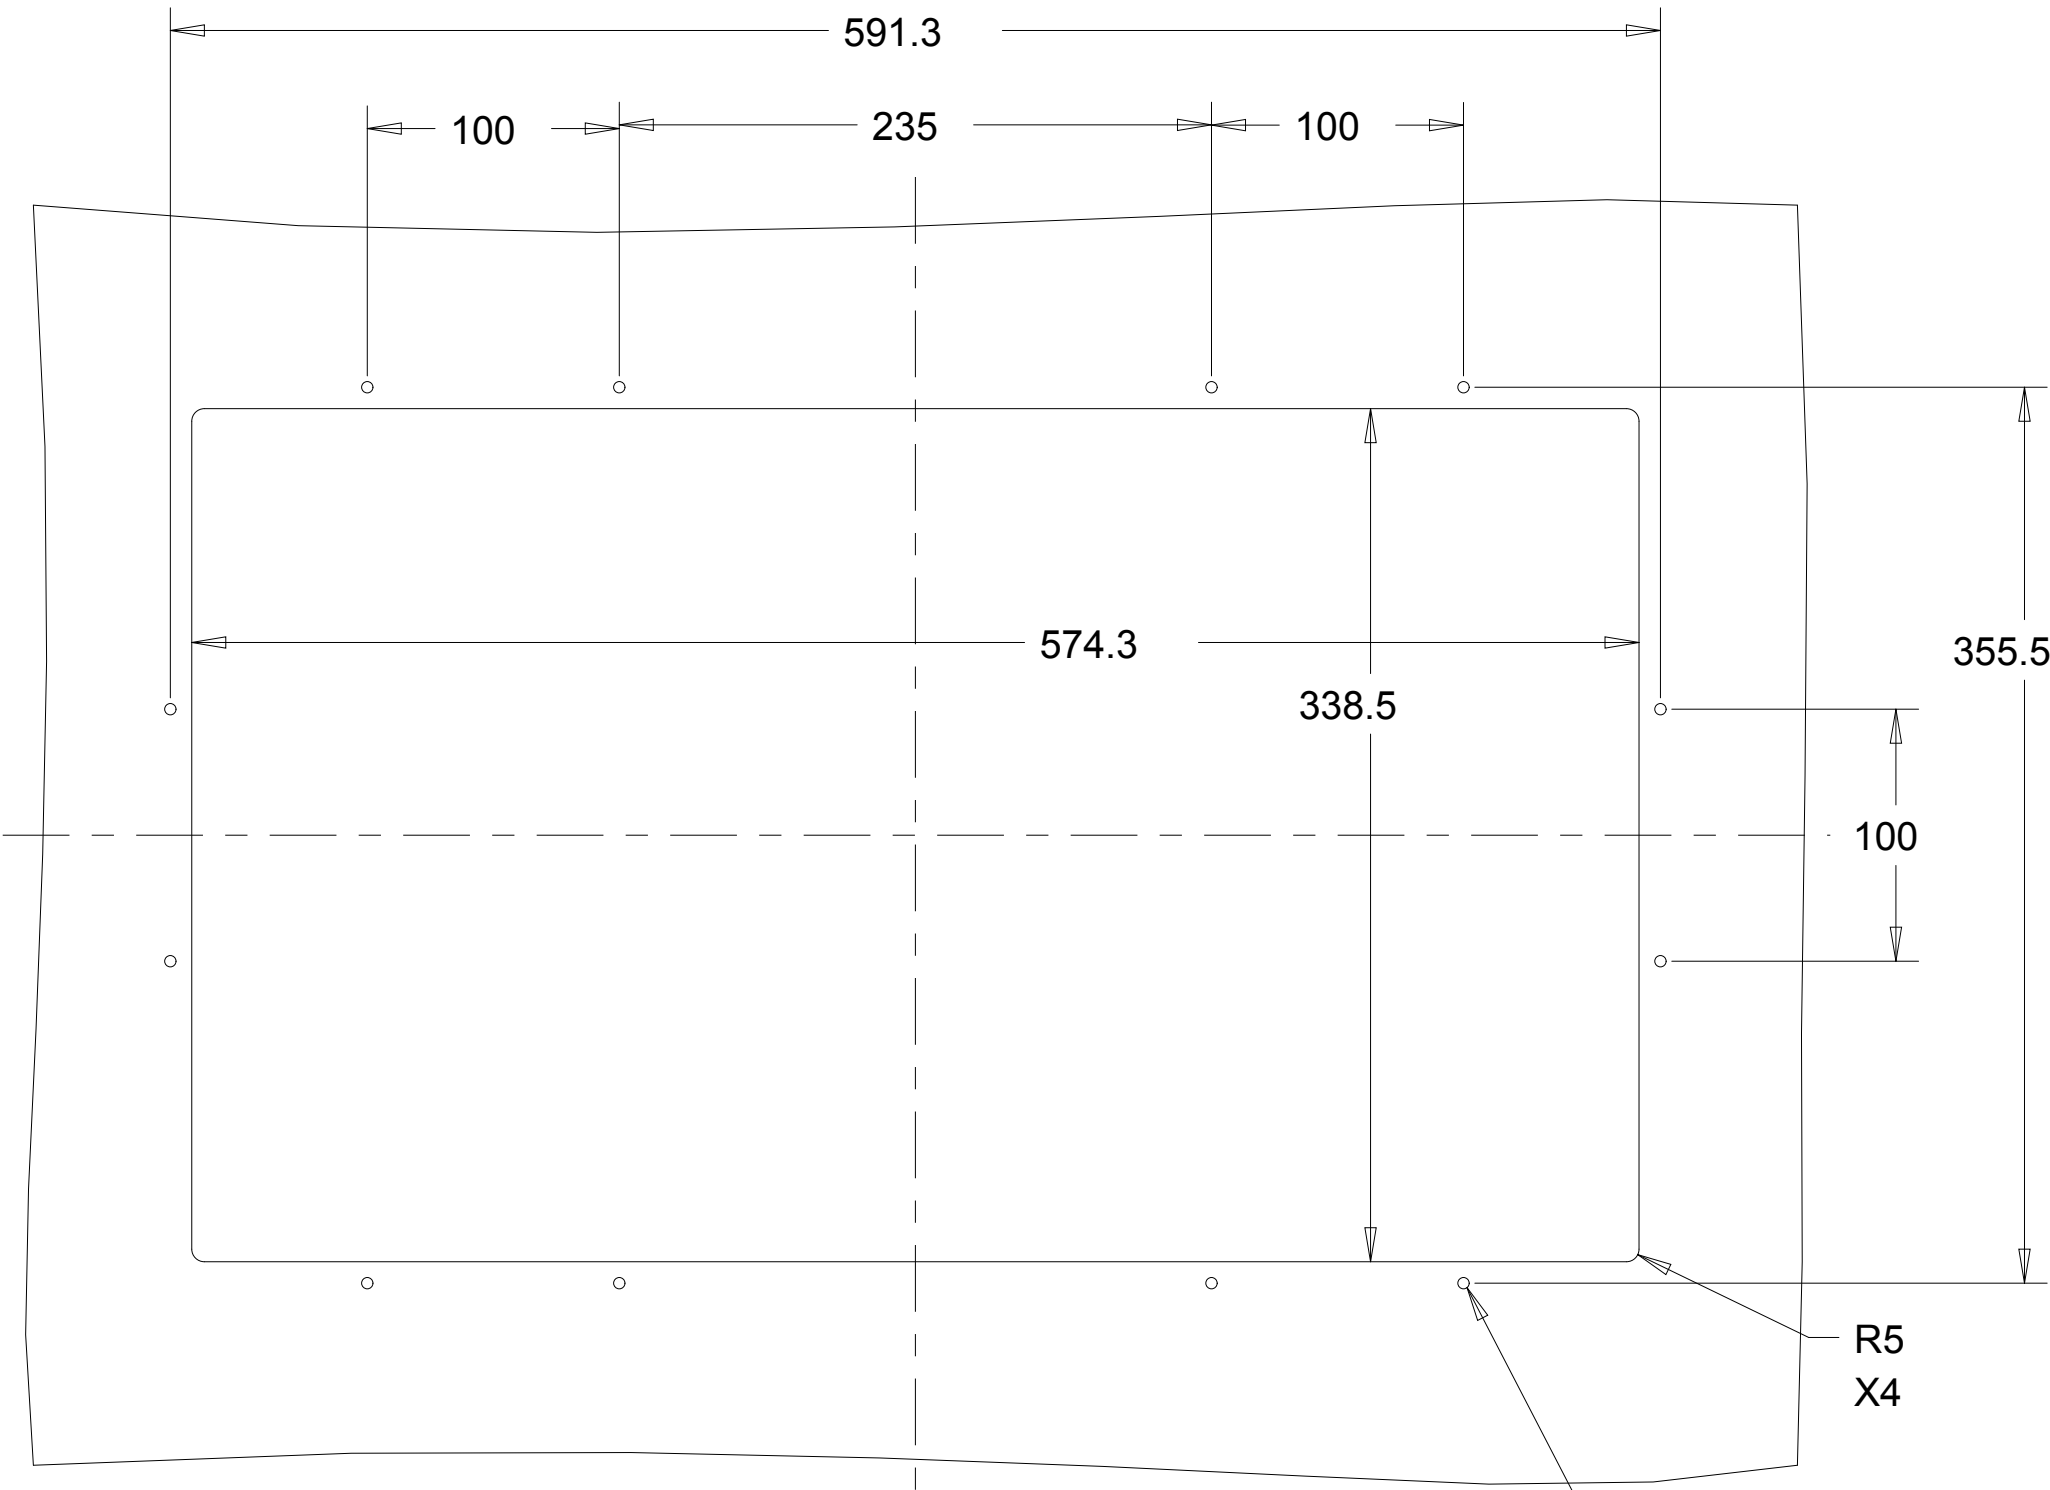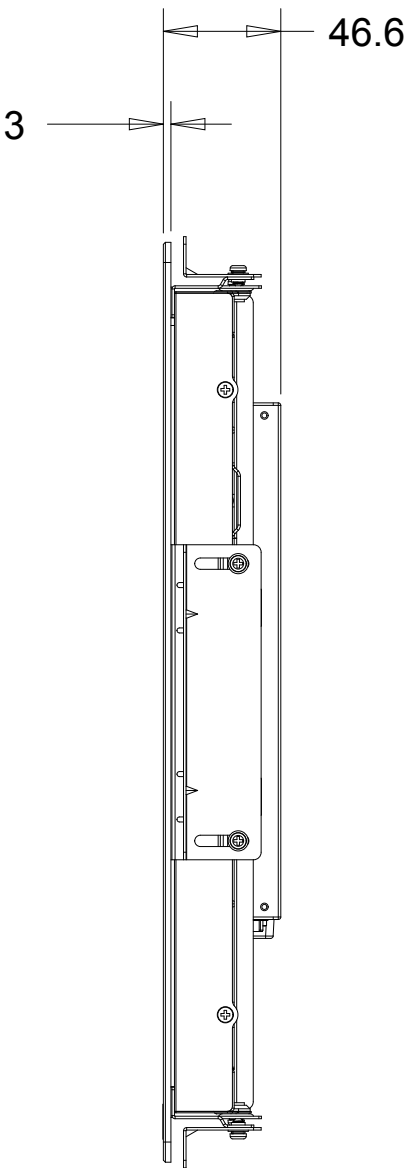


RECOMMENDED CUSTOMER PANEL CUT-OUT




MOUNTING HOLES, X12  
1. IF CUSTOMER PANEL IS WOOD,  
Ø 4.5MM THRU HOLES FOR M4 SCREWS WITH NUTS  
  
2. IF CUSTOMER PANEL IS SHEET METAL,  
CONCEALED HEAD THREADED STUDS M4 WITH NUTS

DIMENSIONS ARE IN MILLIMETERS

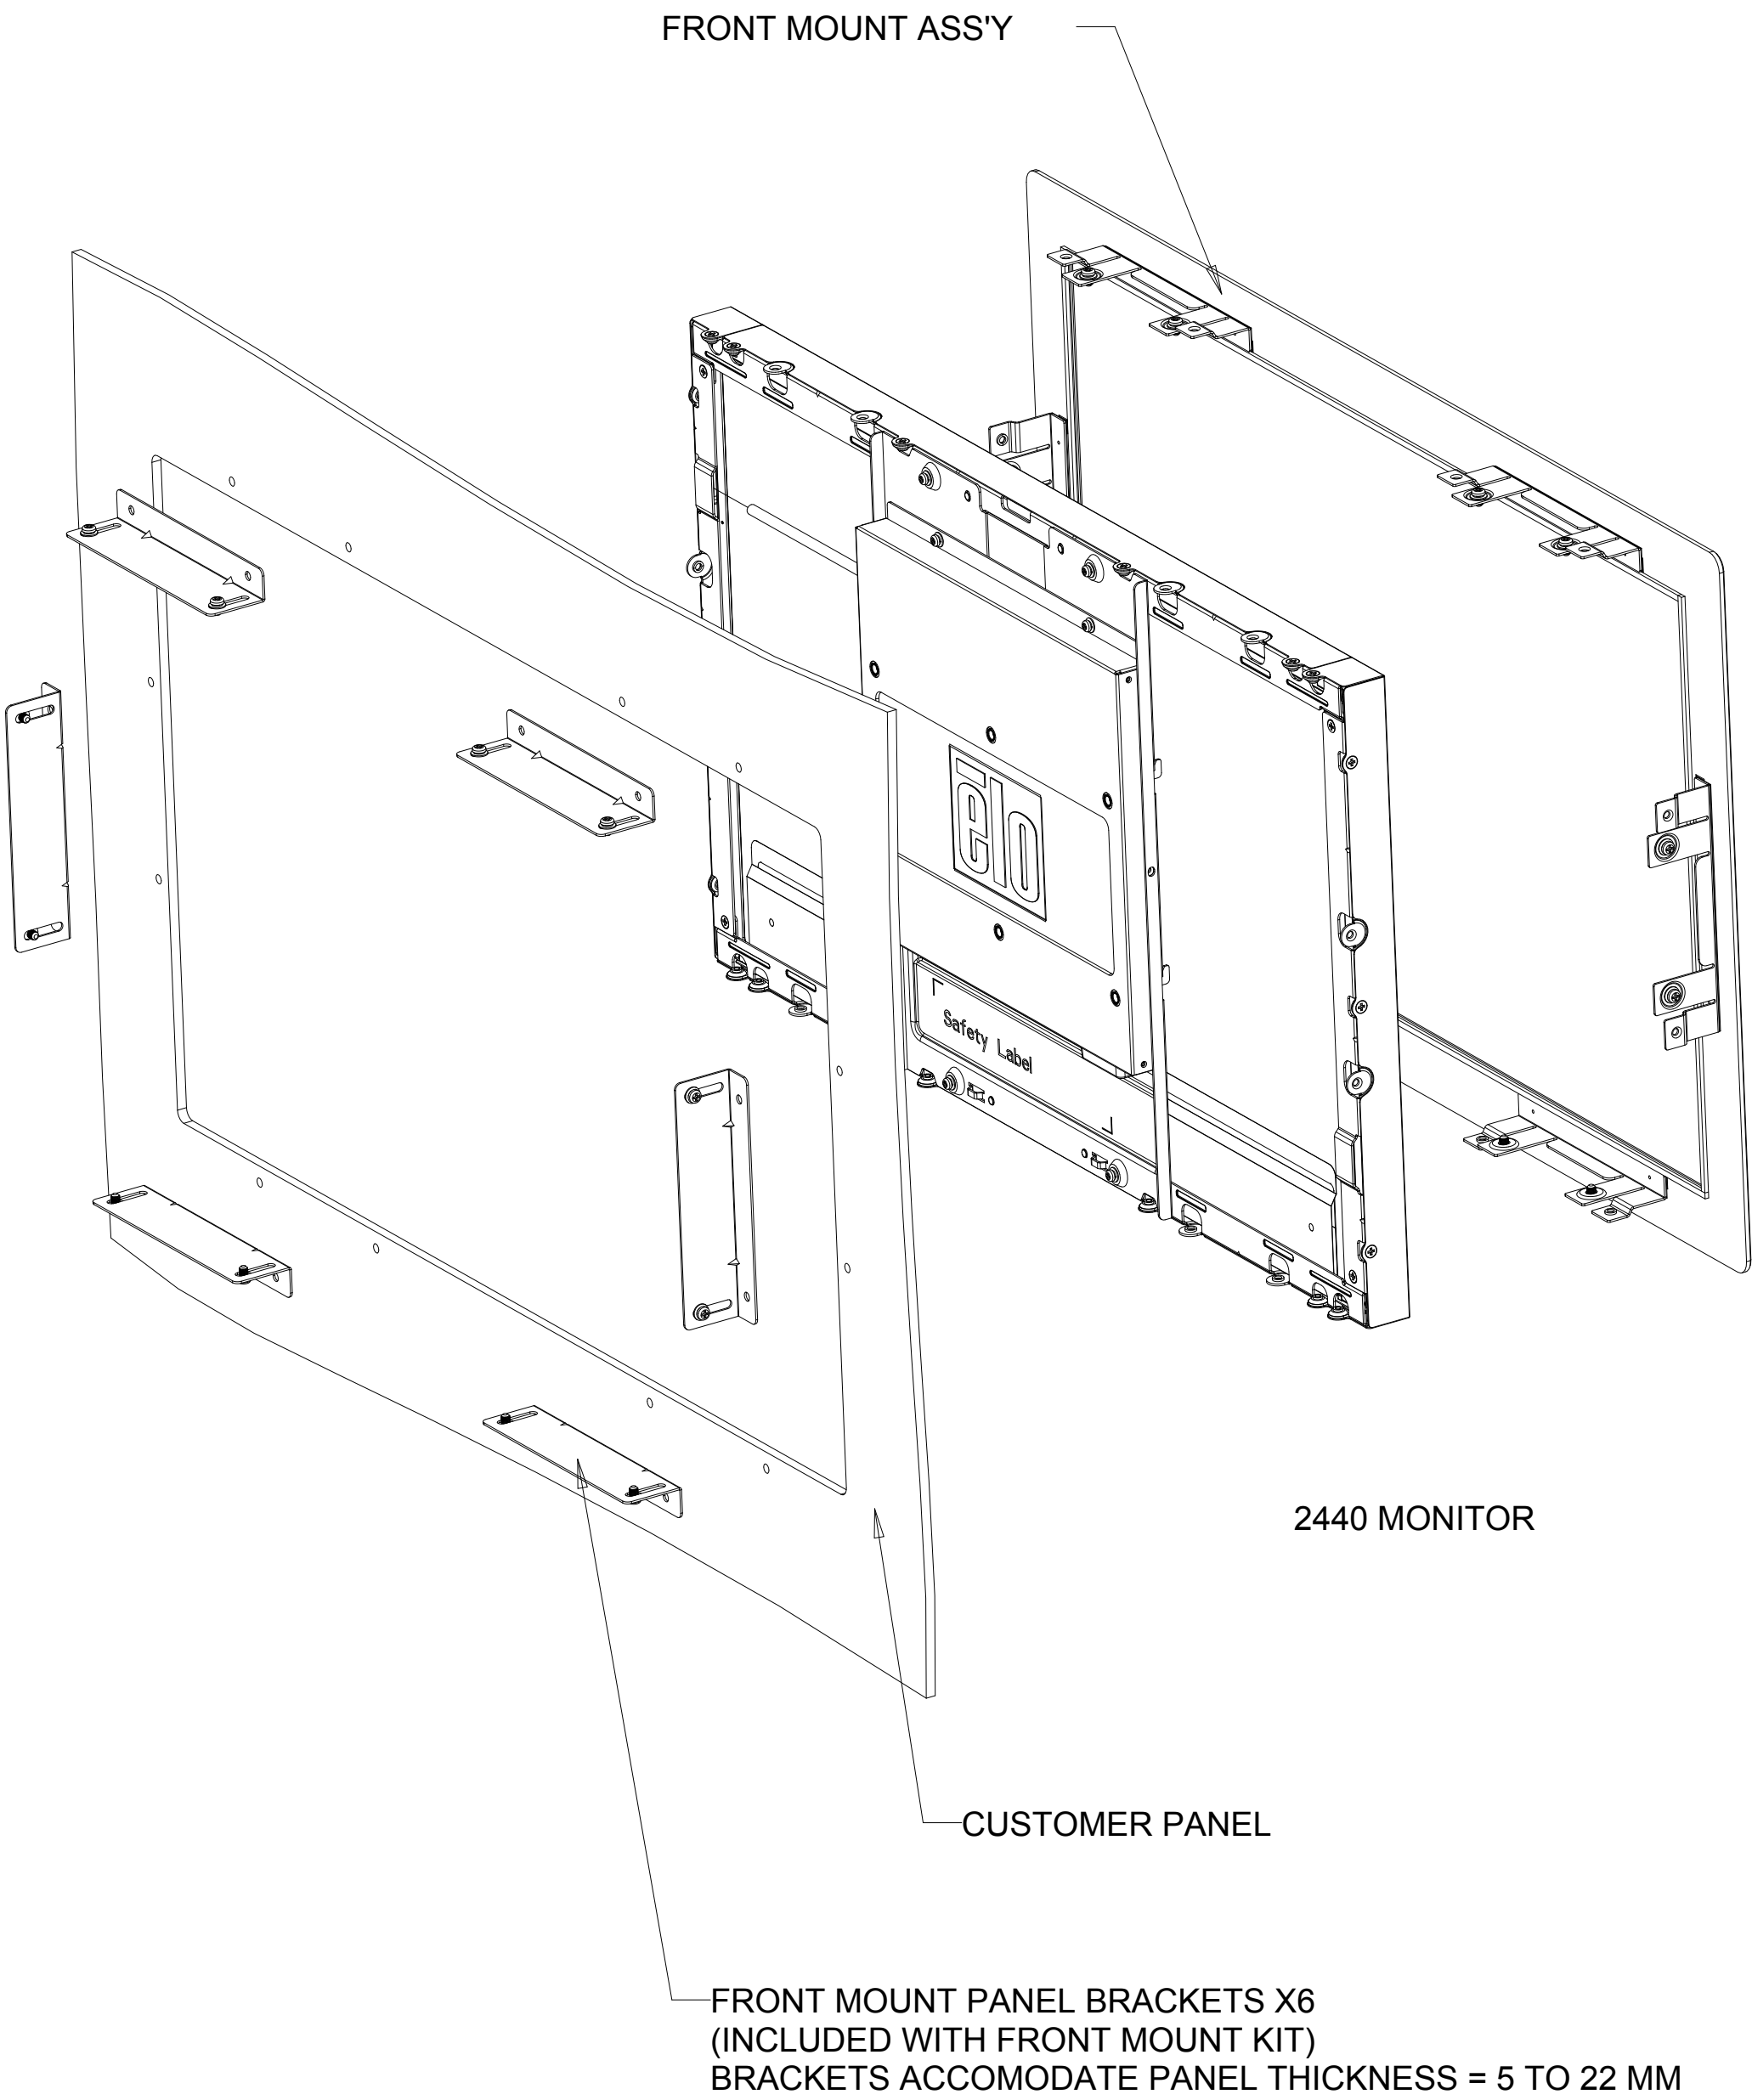


PROJECTED CAPACITIVE MODELS ONLY

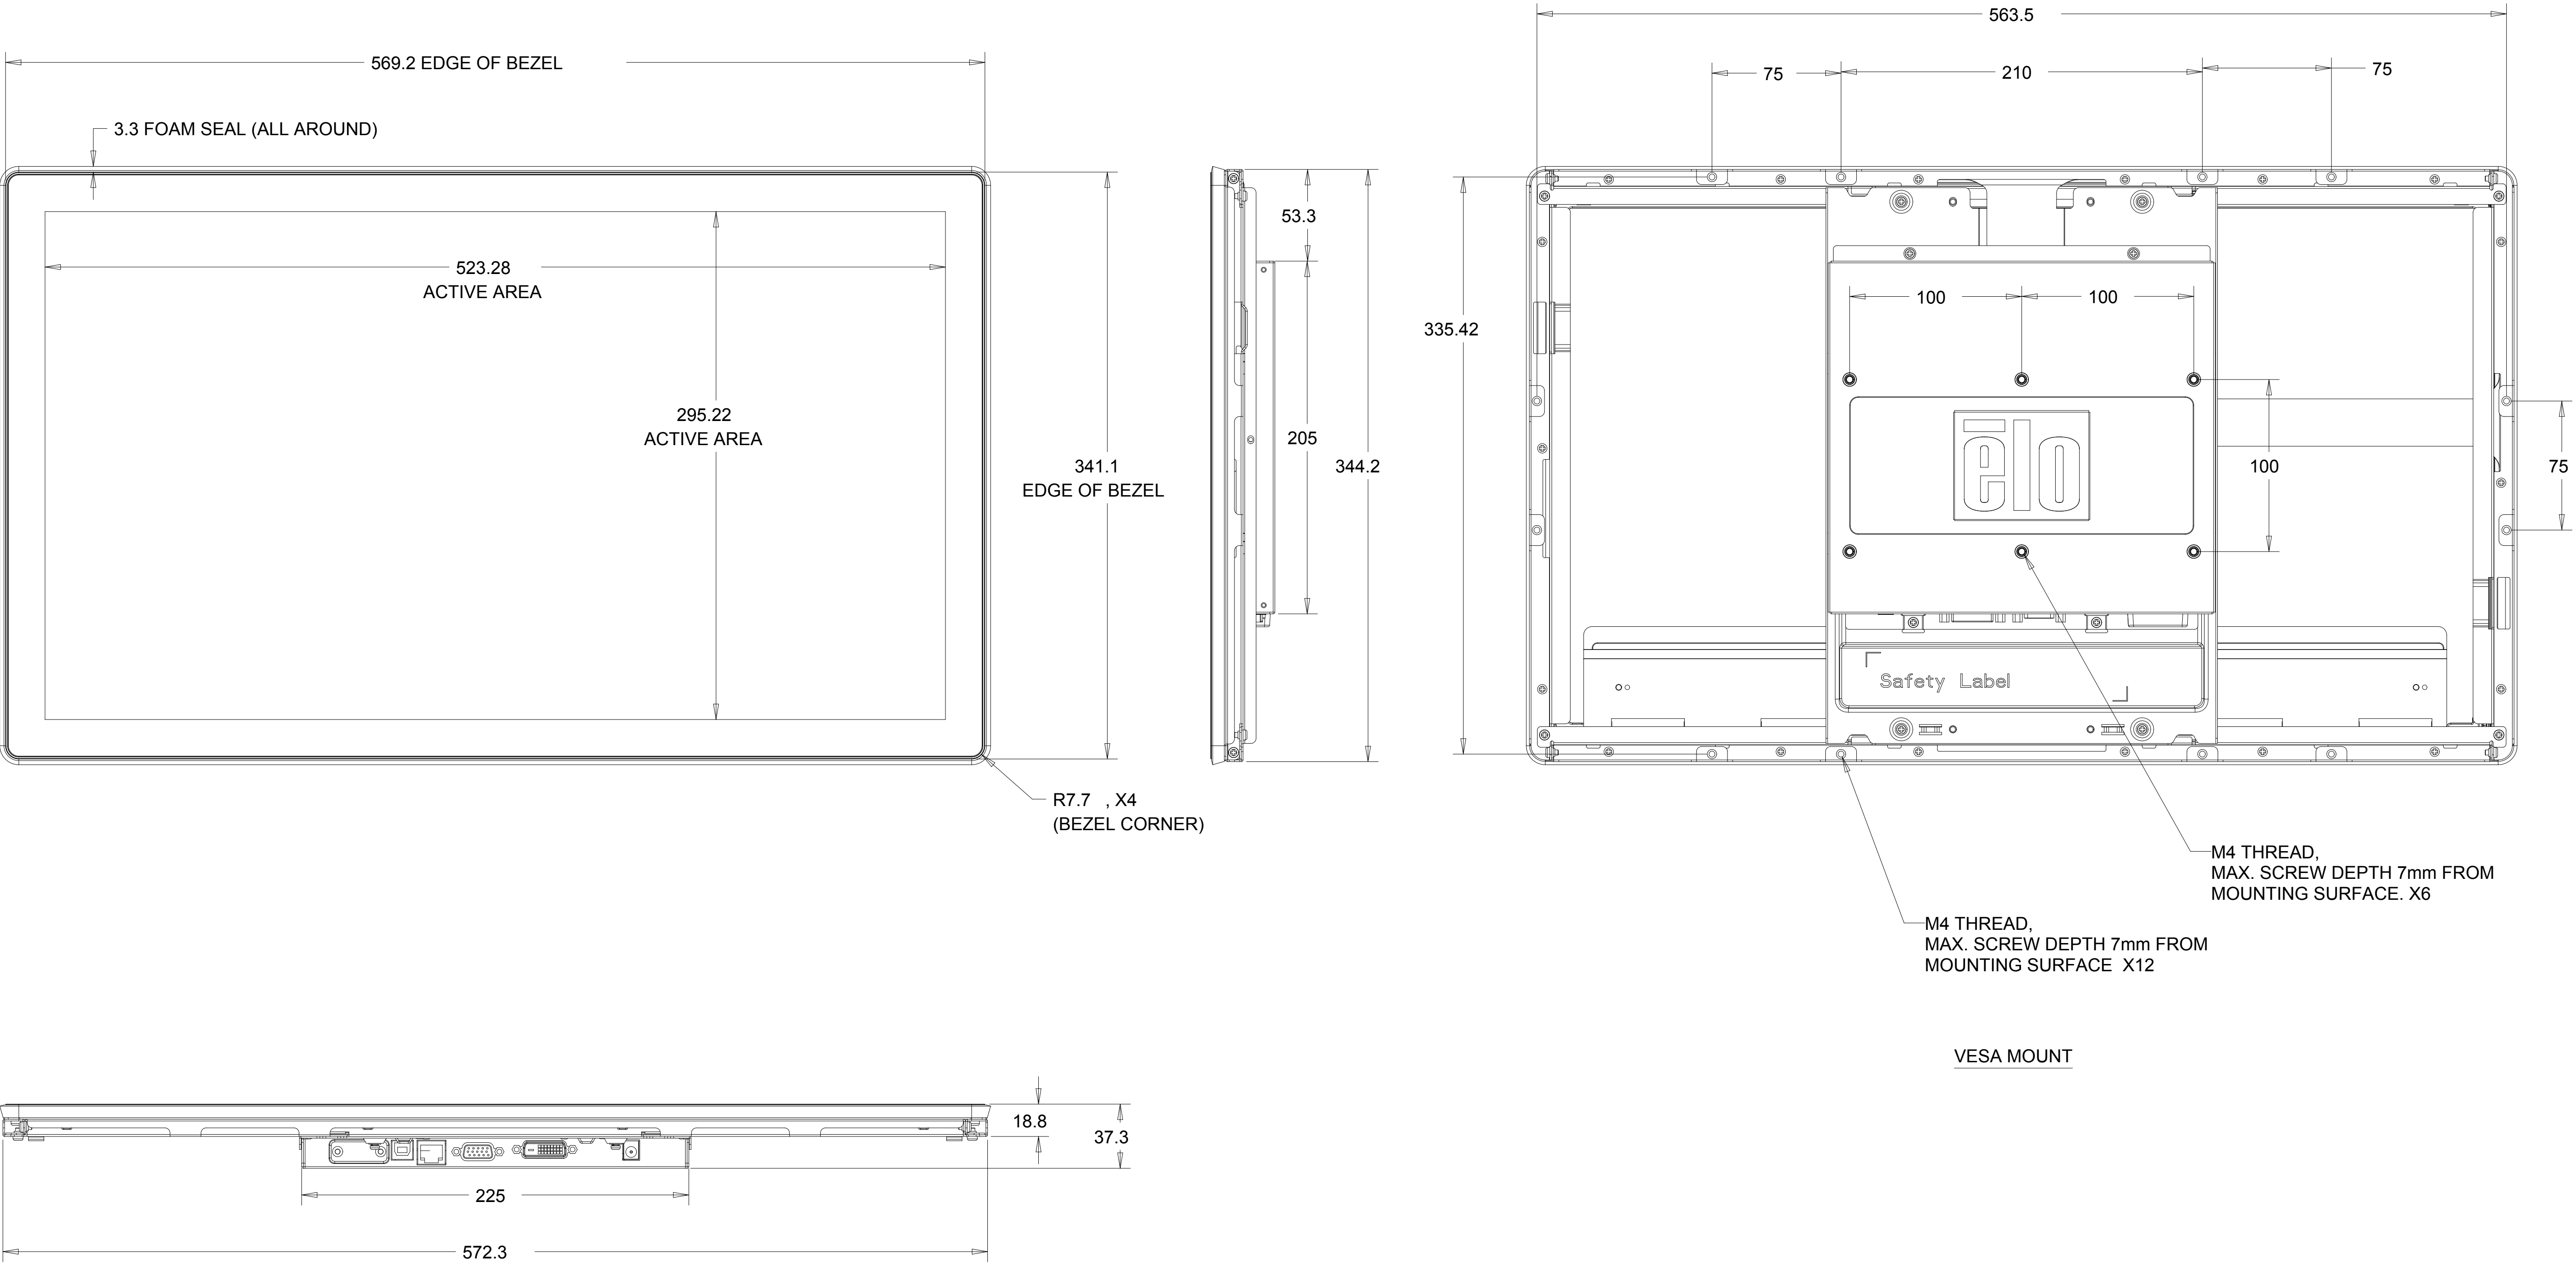

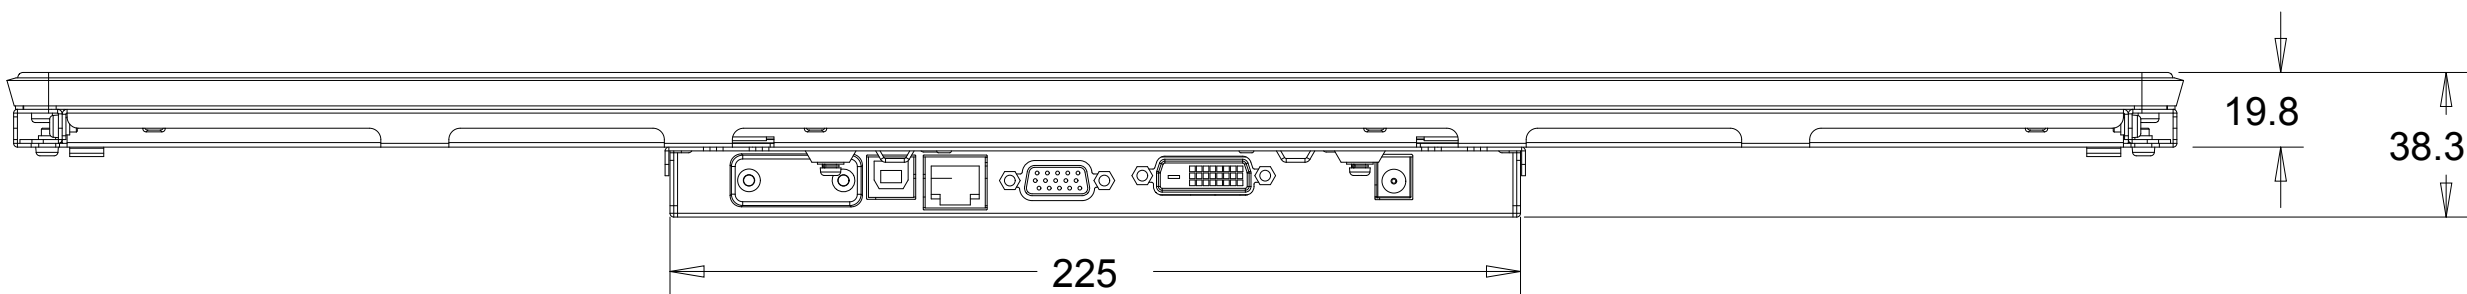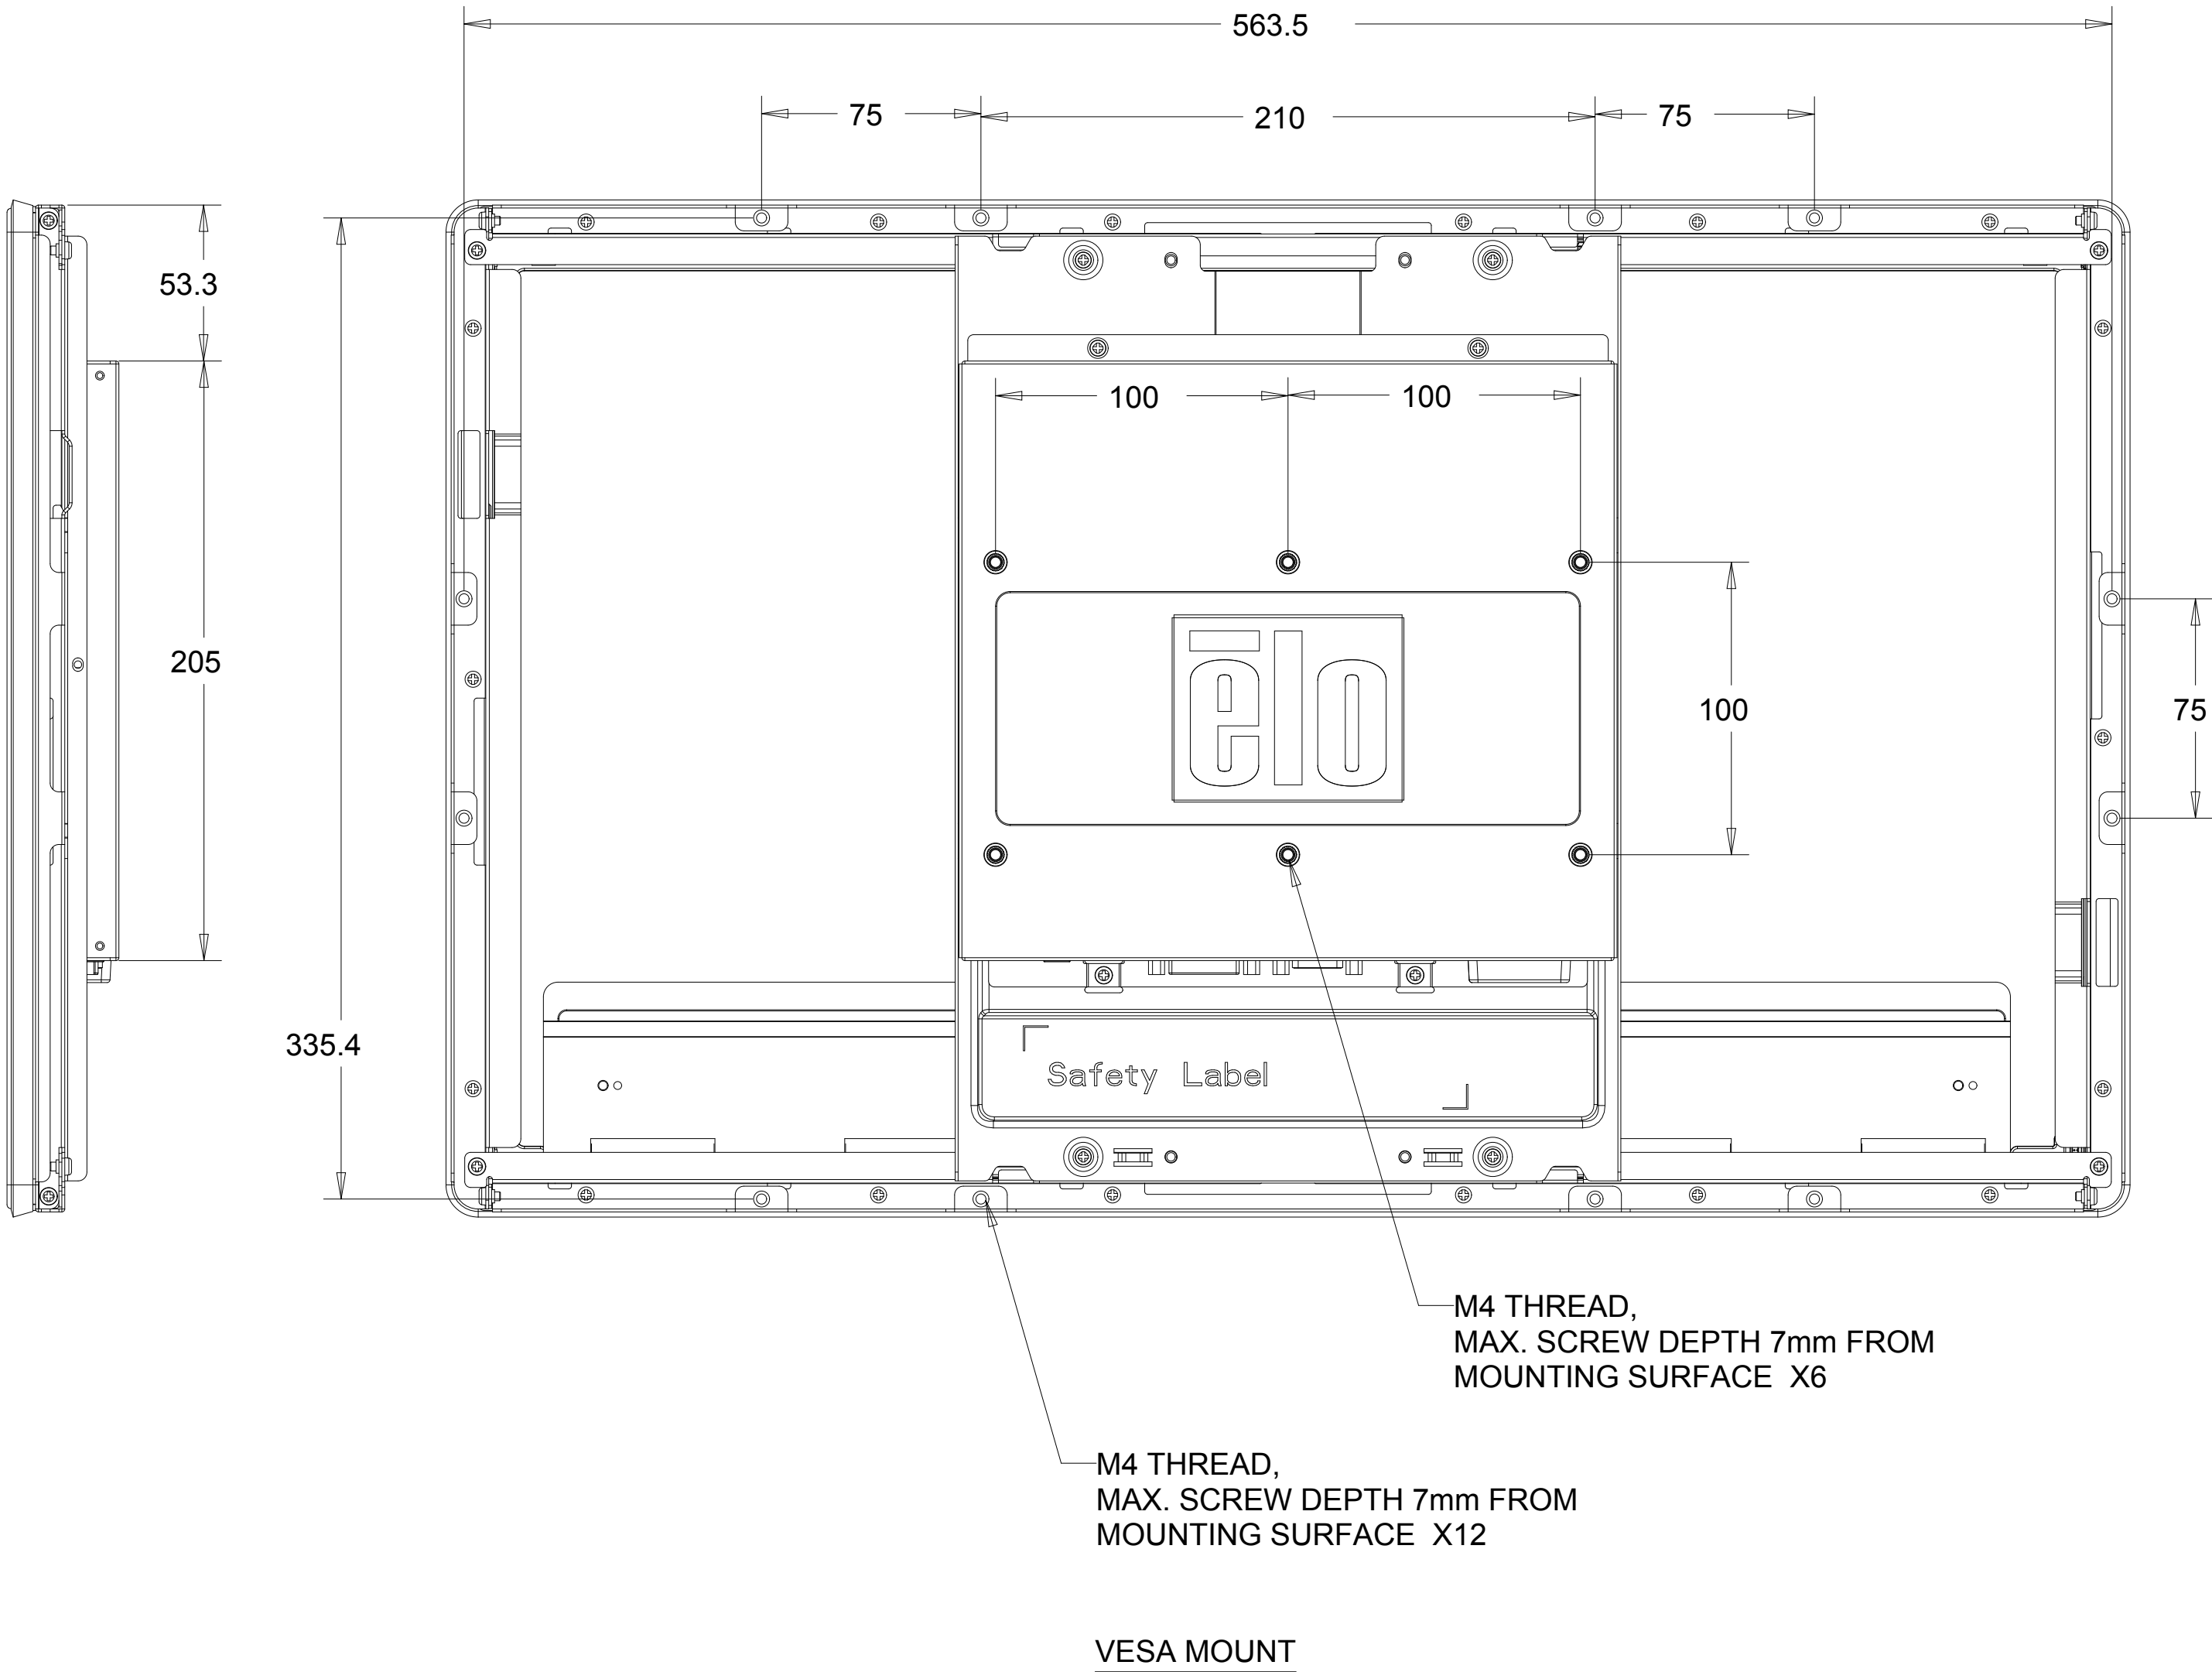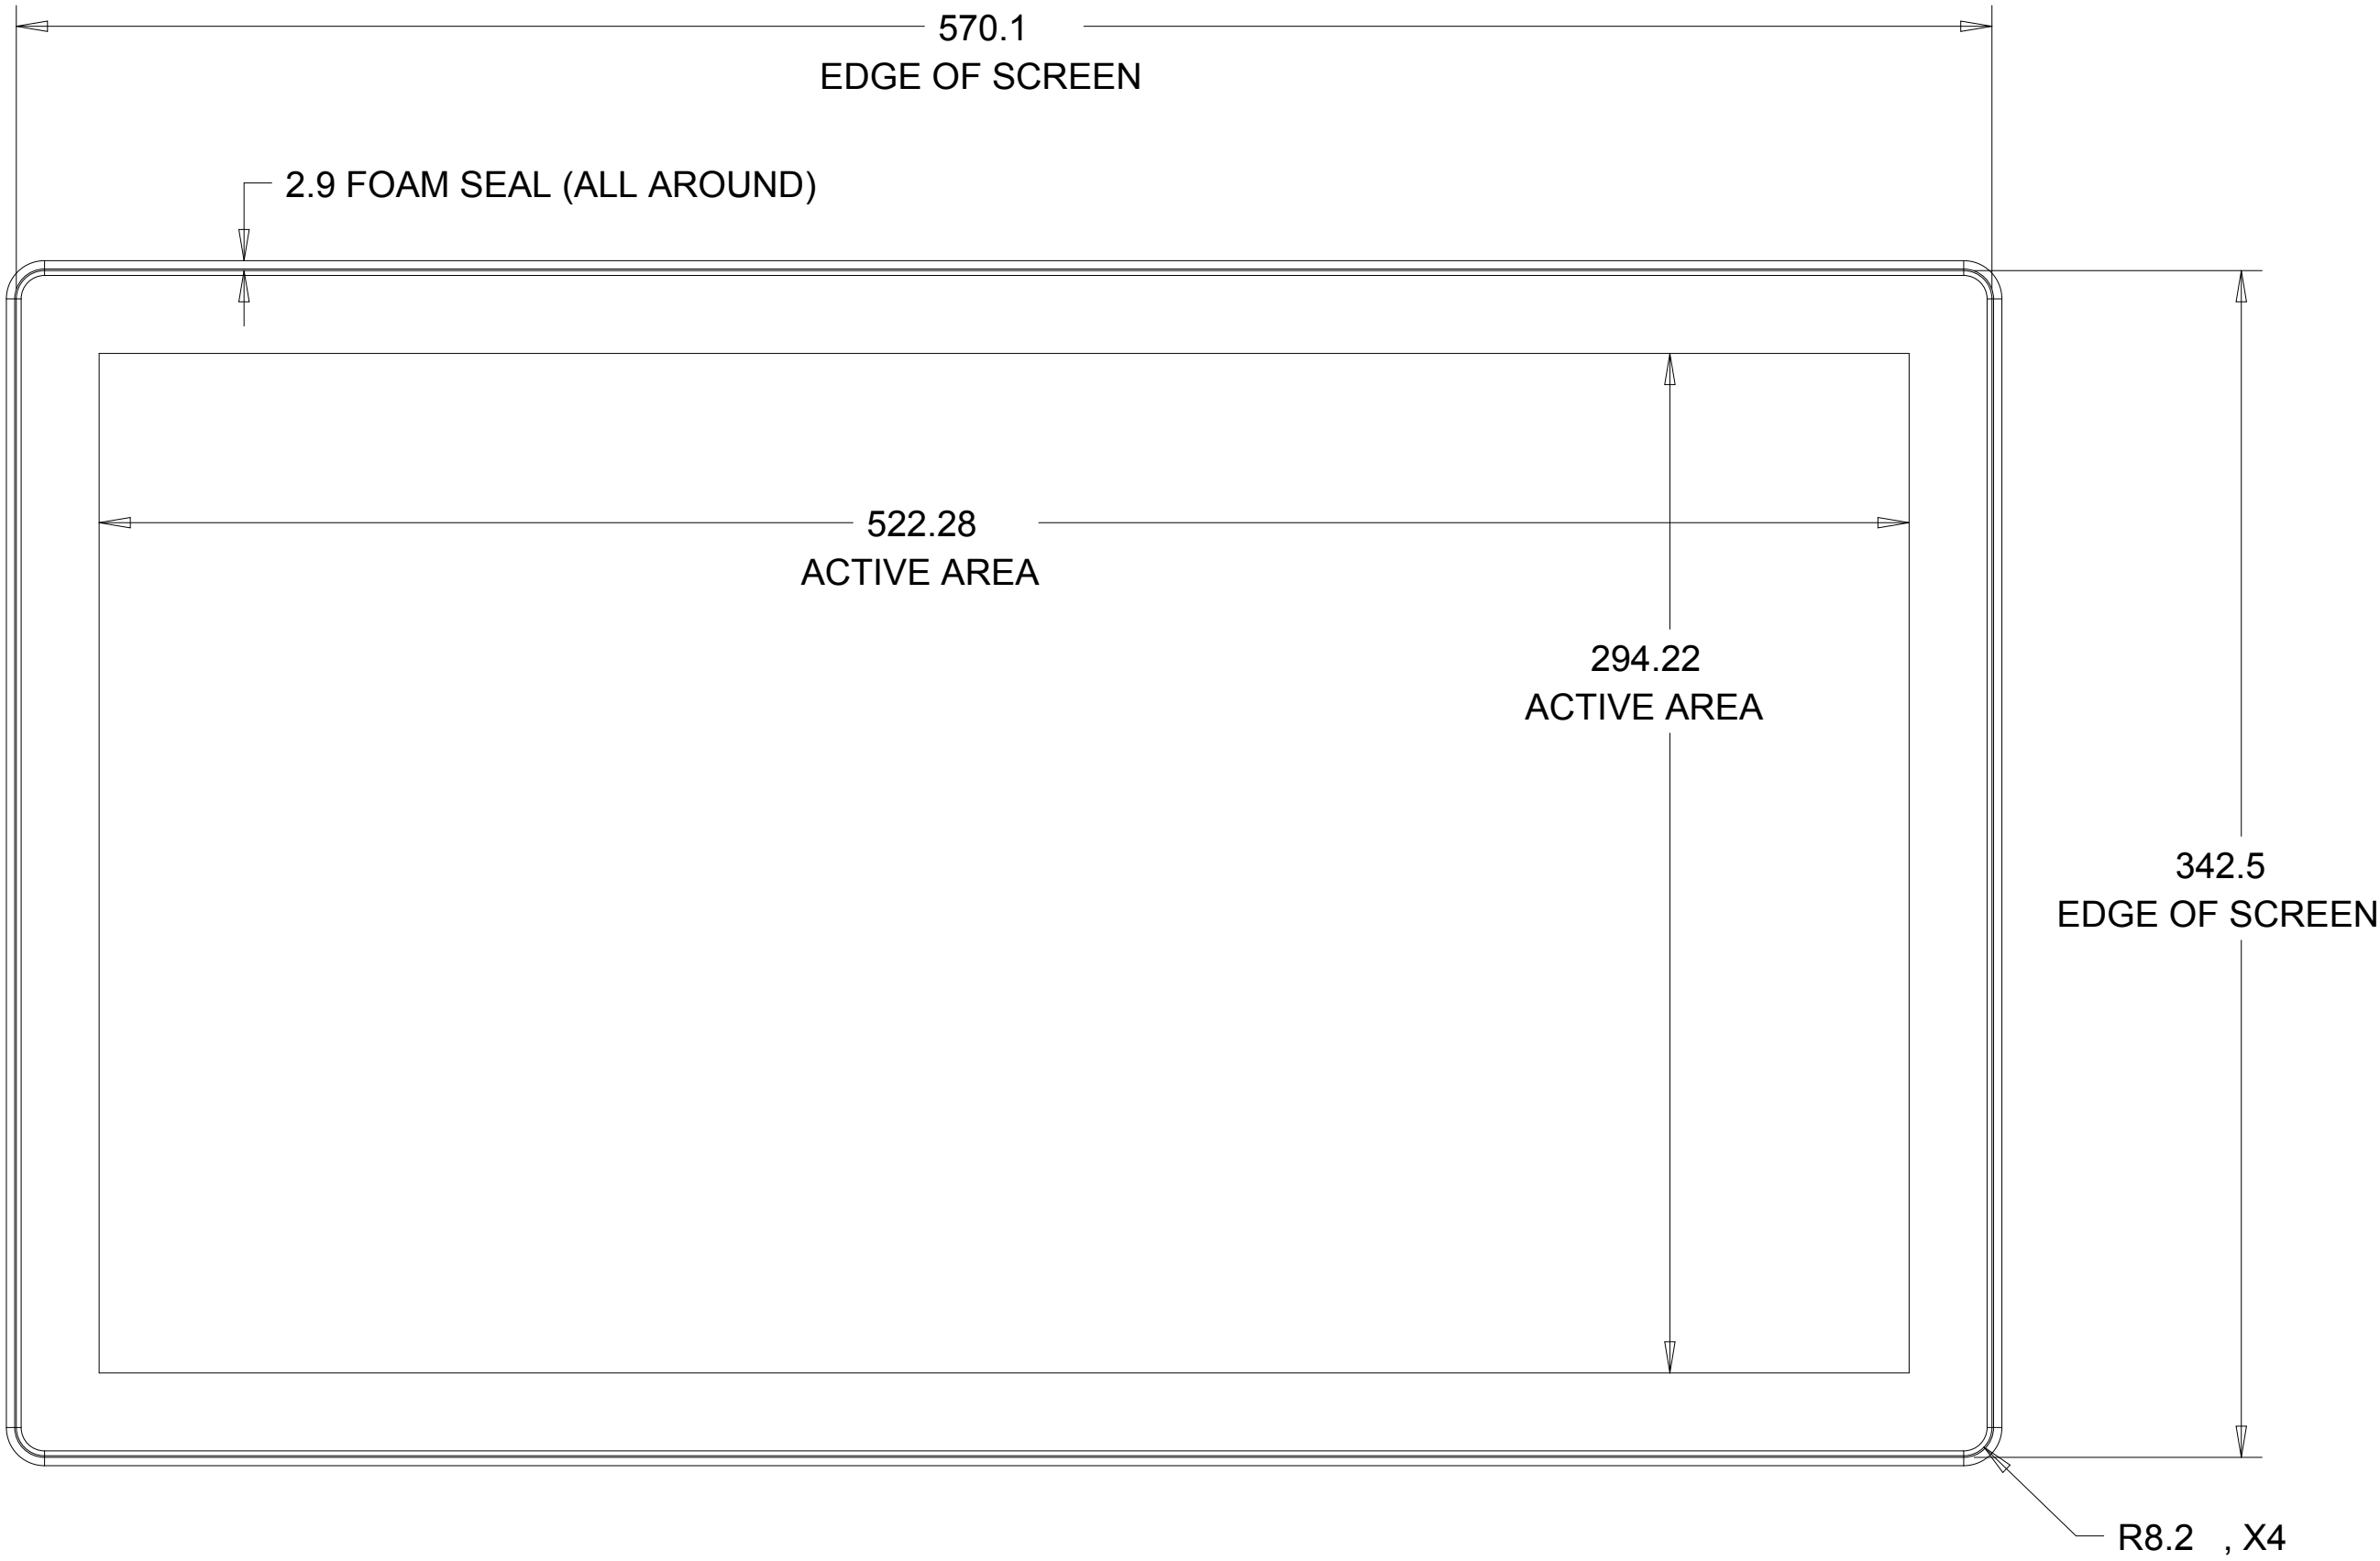

PROJECTED CAPACITIVE/iTOUCH/  
NO TOUCH ZERO BEZEL MODELS  
FLUSH MOUNTING

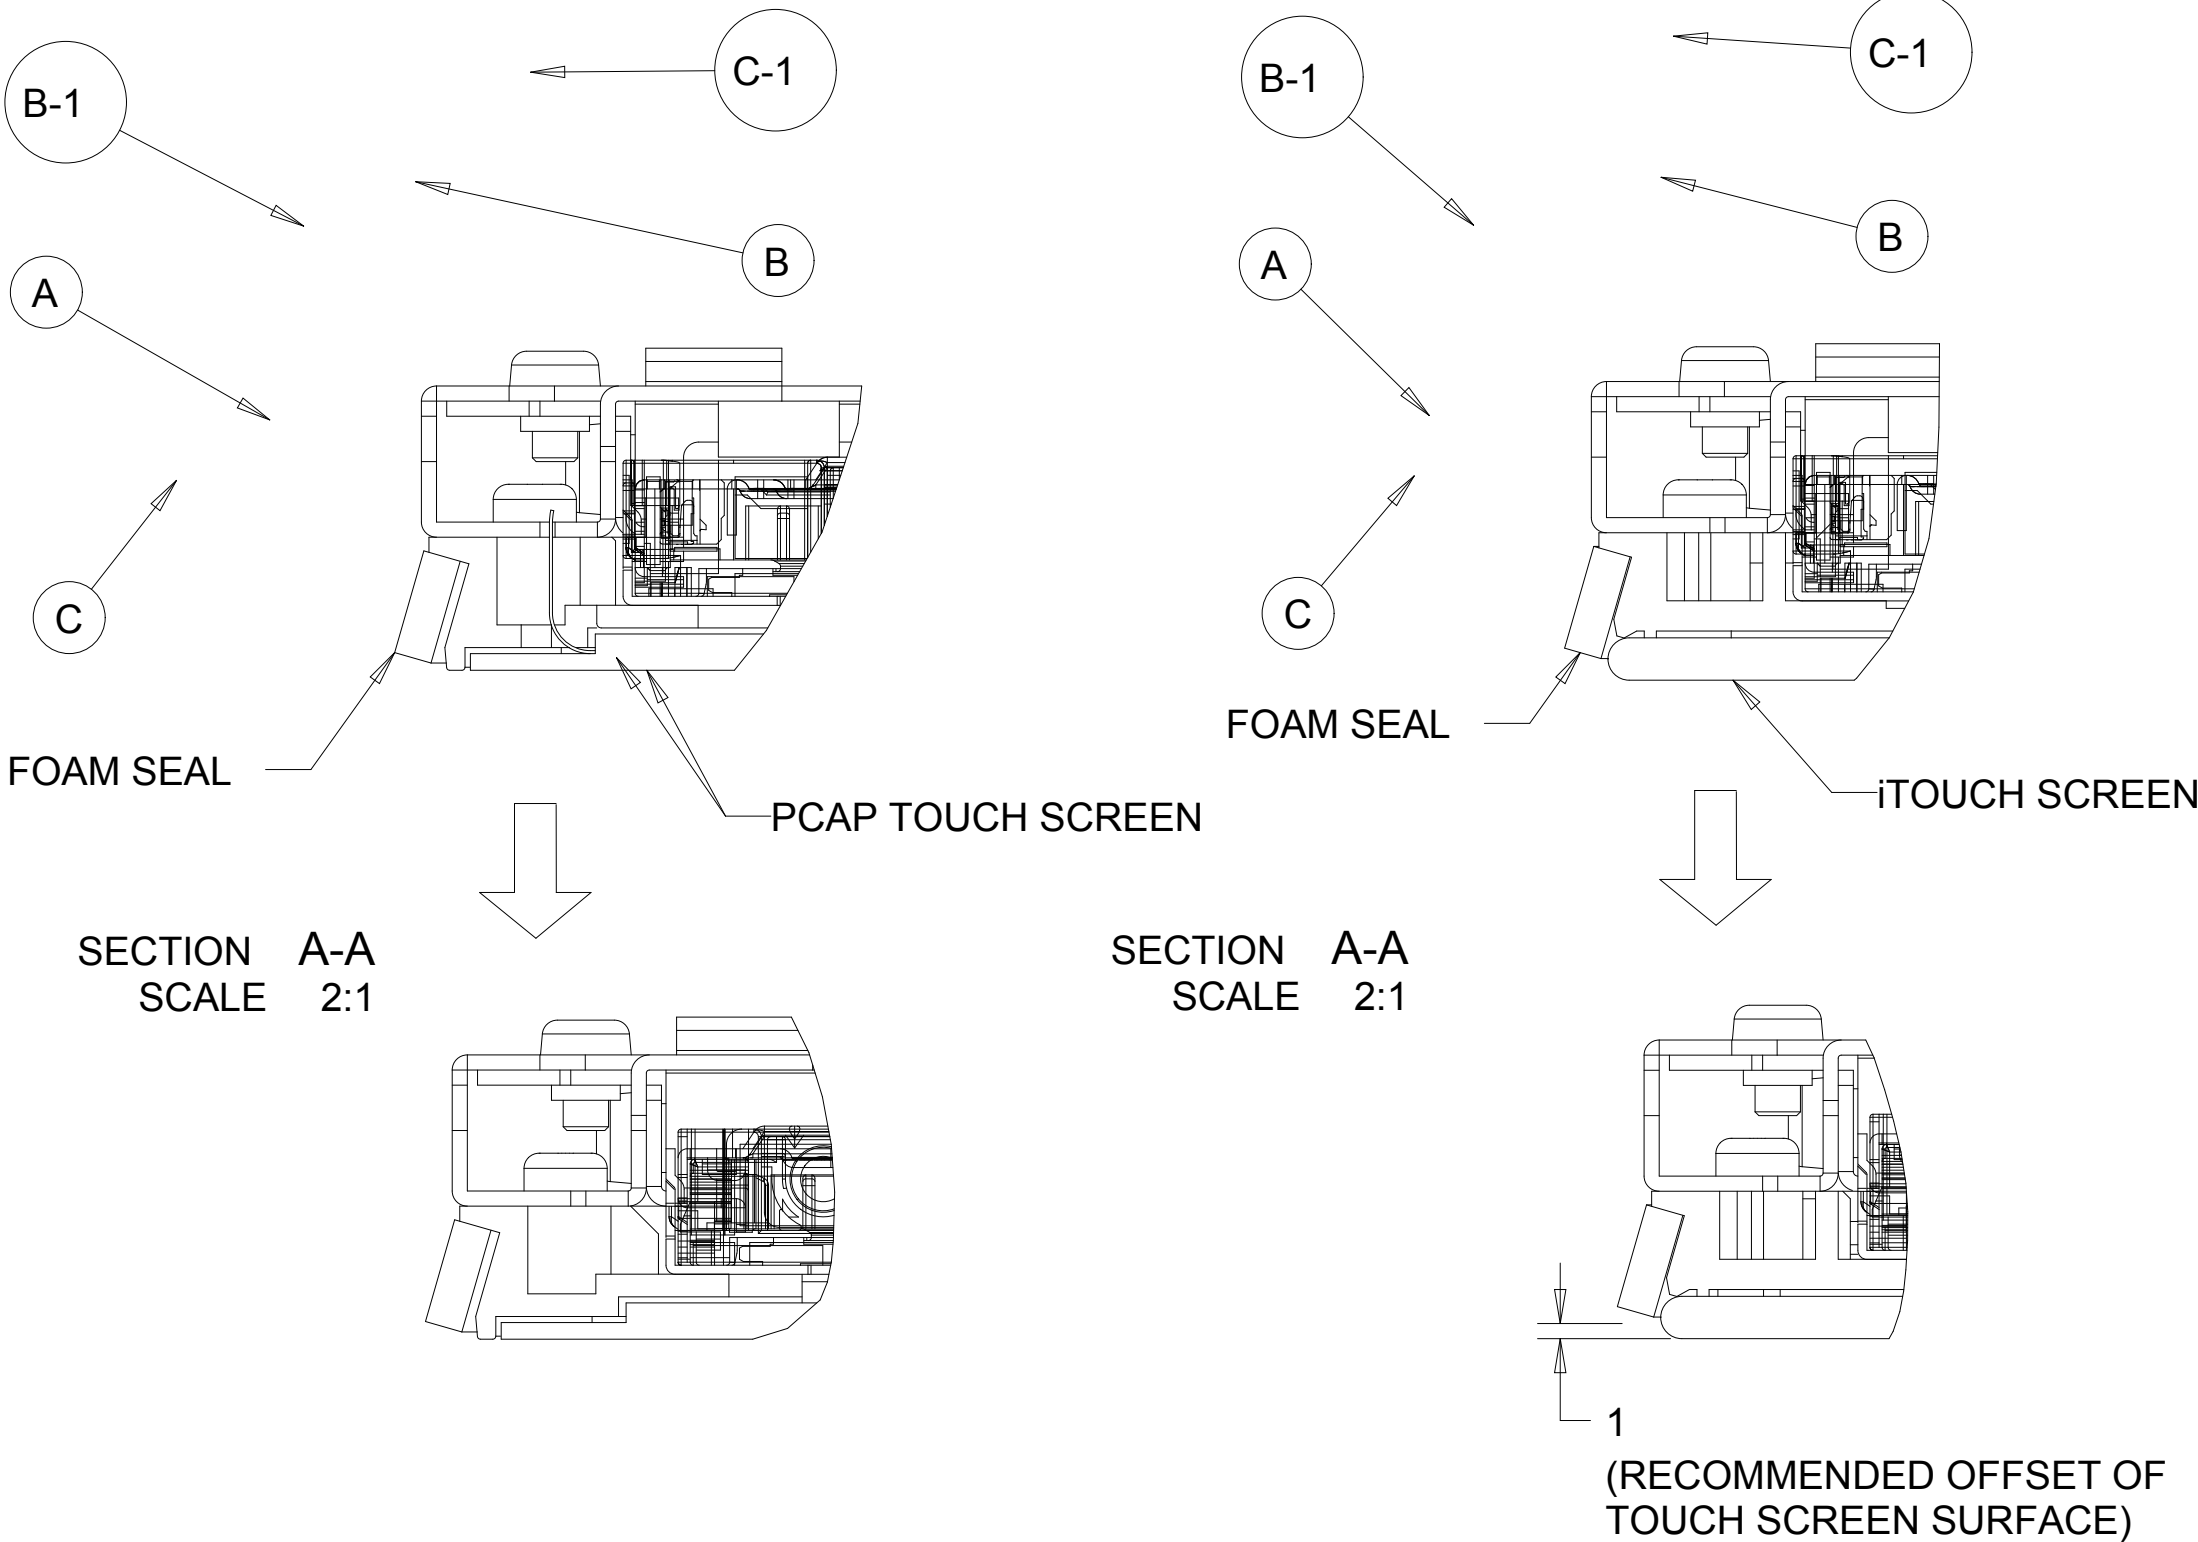

- FLUSH MOUNT INSTALLATION NOTES:
1. ATTACH BRACKET "A" TO CUSTOMER PANEL "C" PER DRAWING
  2. ATTACH BRACKET "B" TO BRACKET "A" WITH M4 SCREWS "B-1"( INCLUDED)
  3. PLACE TOUCH MONITOR INTO CUSTOMER PANEL OPENING,TAKING CARE NOT TO DAMAGE FOAM SEAL
  4. ADJUST DEPTH OF BRACKETS "B" SO MONITOR IS FLUSH WITH CUSTOMER PANEL FOR PCAP,  
SLIGHTLY PROUND OF CUSTOMER PANEL ABOUT 1MM FOR ITOUCH
  5. SECURE TOUCH MONITOR TO BRACKET "B" +"A" FROM BEHIND WITH M4 SCREWS "C-1" (INCLUDED)

