



ZERO BEZEL MODEL AND NON-TOUCH MODEL

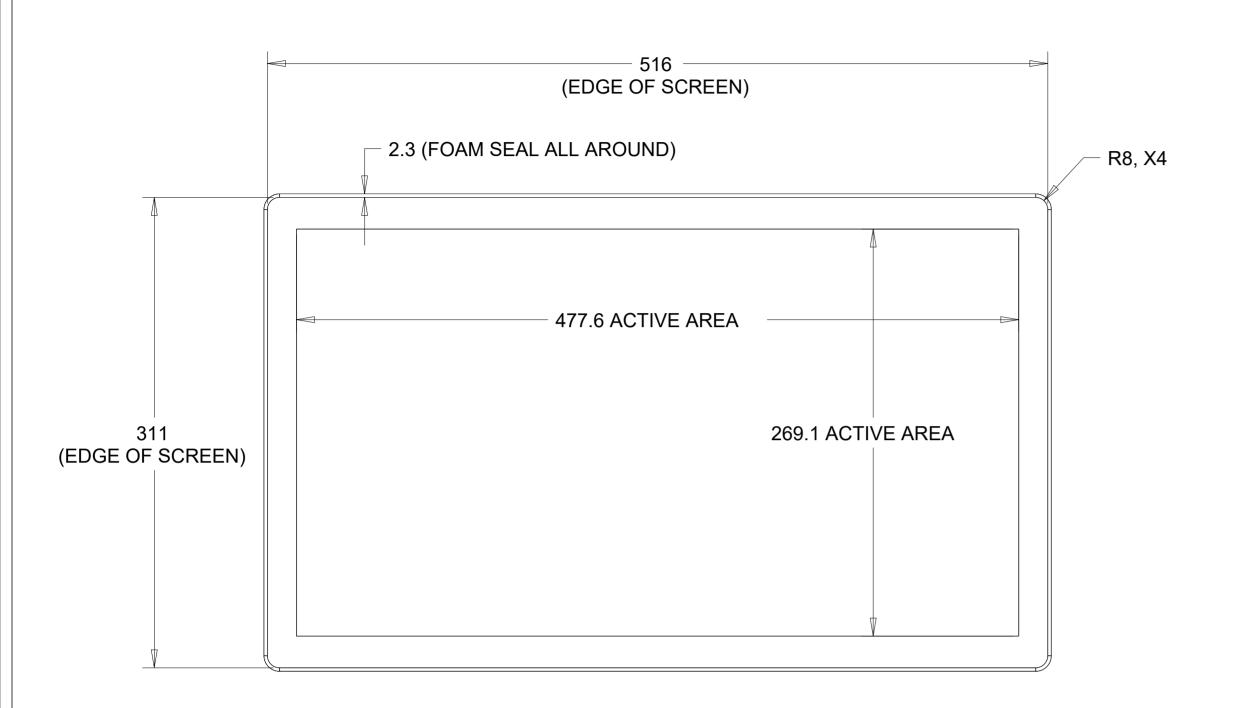

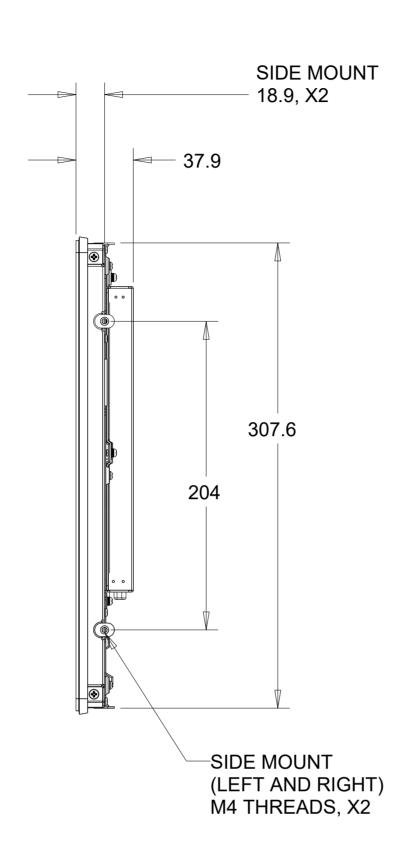


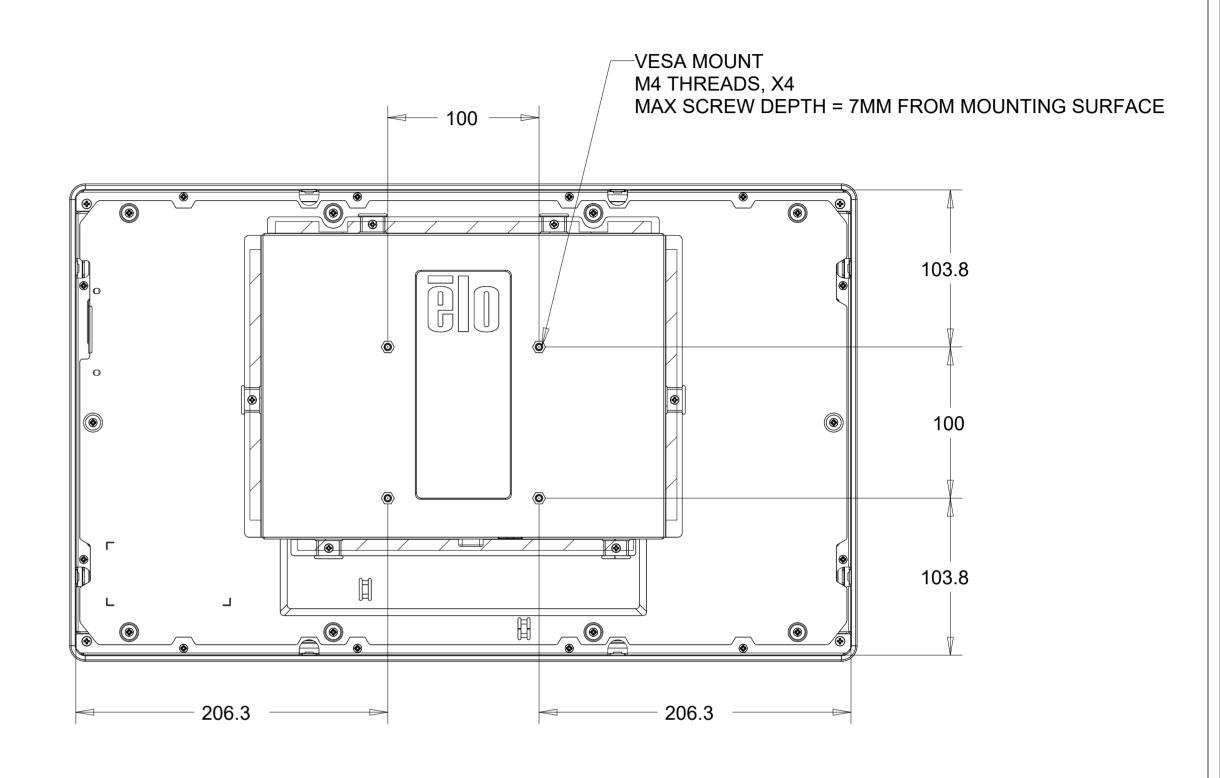


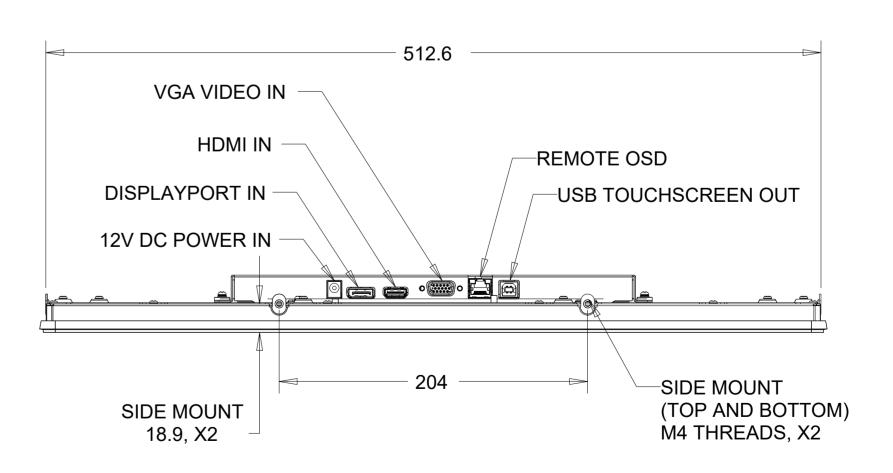


ZERO BEZEL MODEL

WITH FLUSH MOUNTING BRACKETS (4 INCLUDED) REPLACEMENT BRACKET KIT P/N E190706 AVAILABLE SEPARATELY

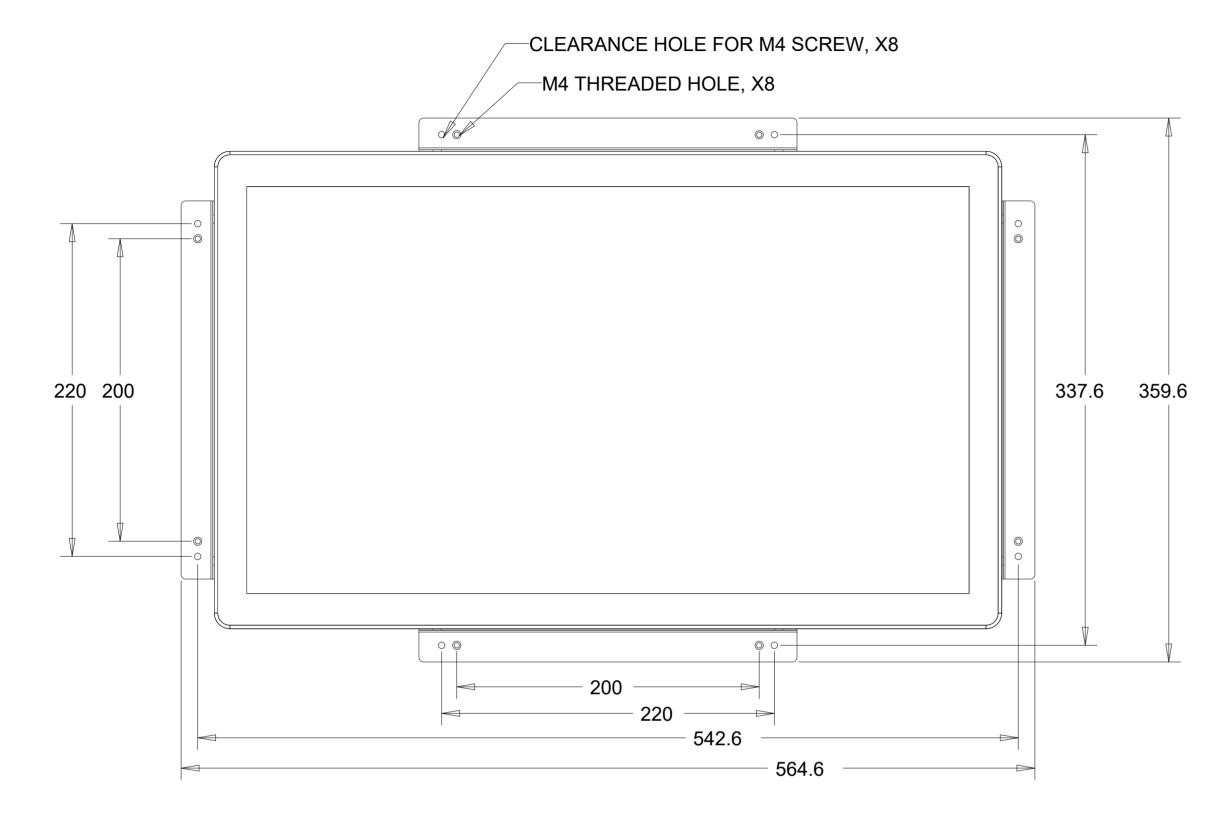


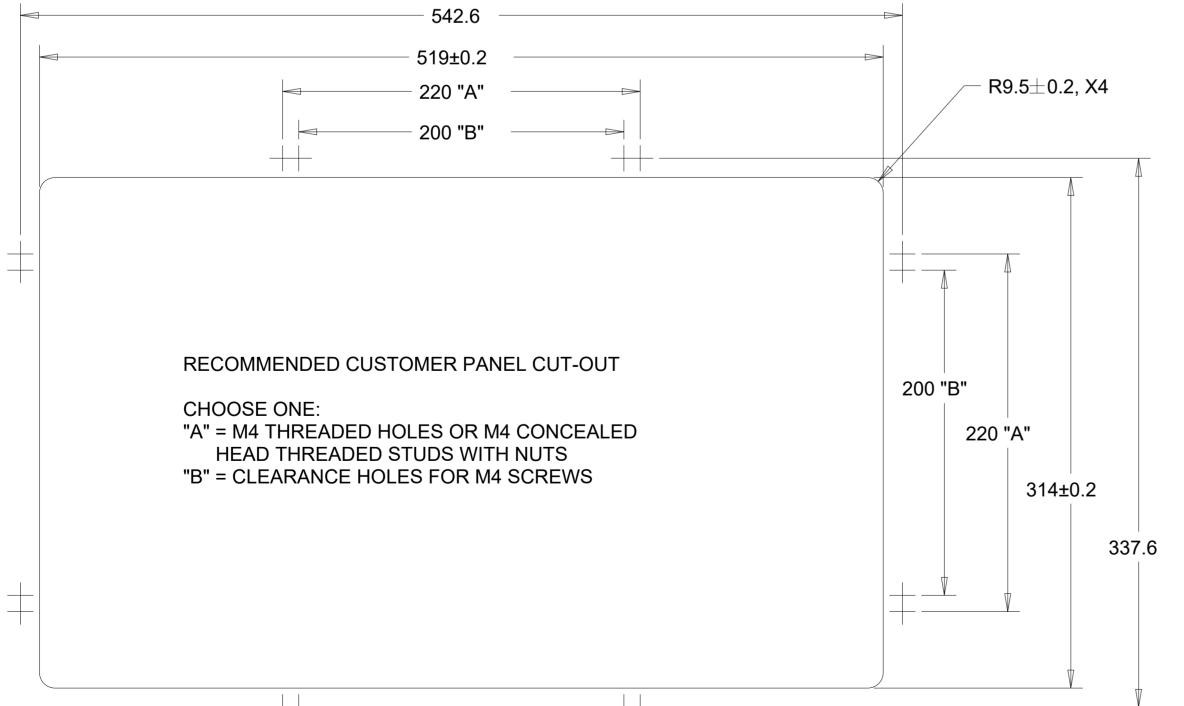

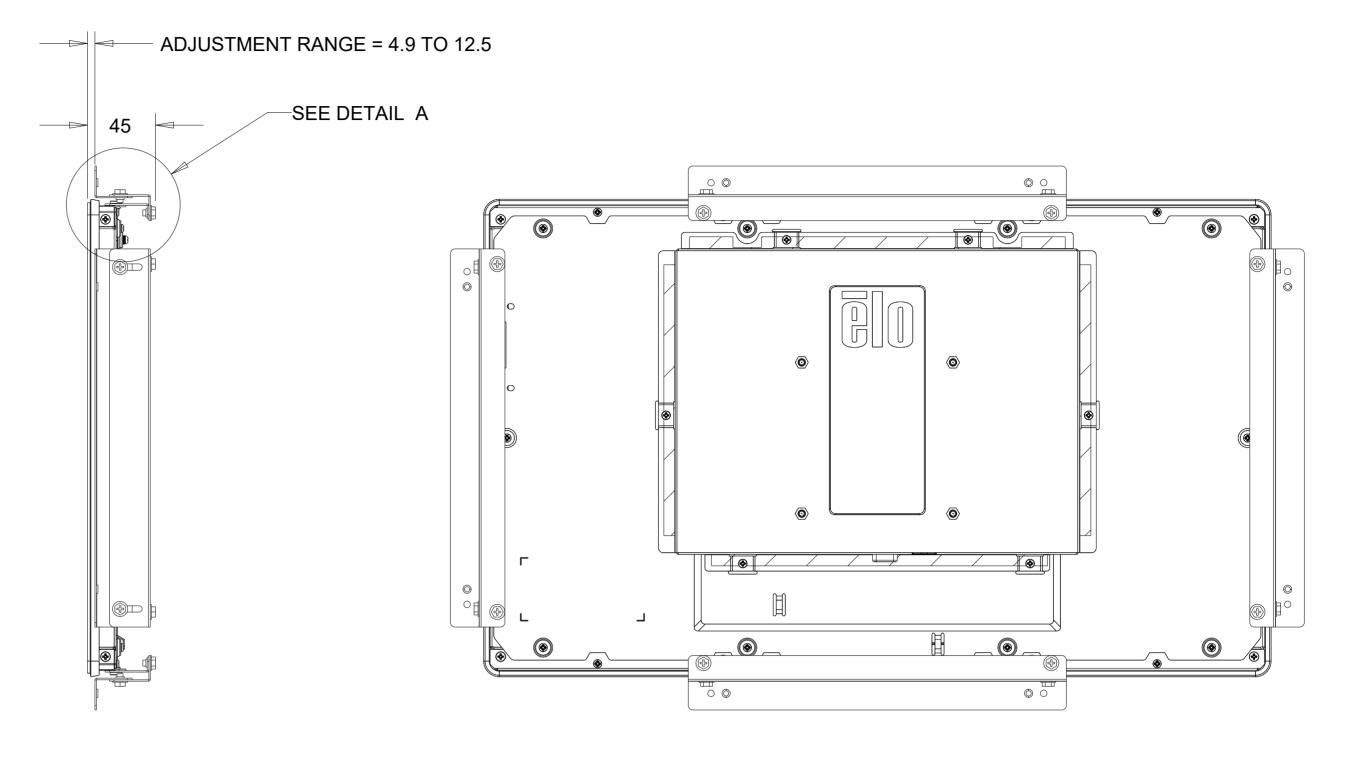

INSTALLATION NOTES:

- 1. ATTACH BRACKET "A" TO TOUCHMONITOR (ALL FOUR SIDES) WITH LOW PROFILE SCREWS (INCLUDED)
 2. ATTACH BRACKET "C' TO CUSTOMER PANEL PER CUT-OUT DRAWING (ALL FOUR SIDES)
- 3. ATTACH BRACKET "B" TO BRACKET "C" ON ALL FOUR SIDES WITH M4 HEX HEAD SCREWS (INCLUDED)
- 4. ADJUST DEPTH OF BRACKET "B" SO MONITOR IS FLUSH WITH CUSTOMER PANEL
- 5. PLACE TOUCHMONITOR INTO CUSTOMER PANEL OPENING
- 6. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND WITH M4 HEX HEAD SCEWS (INCLUDED)

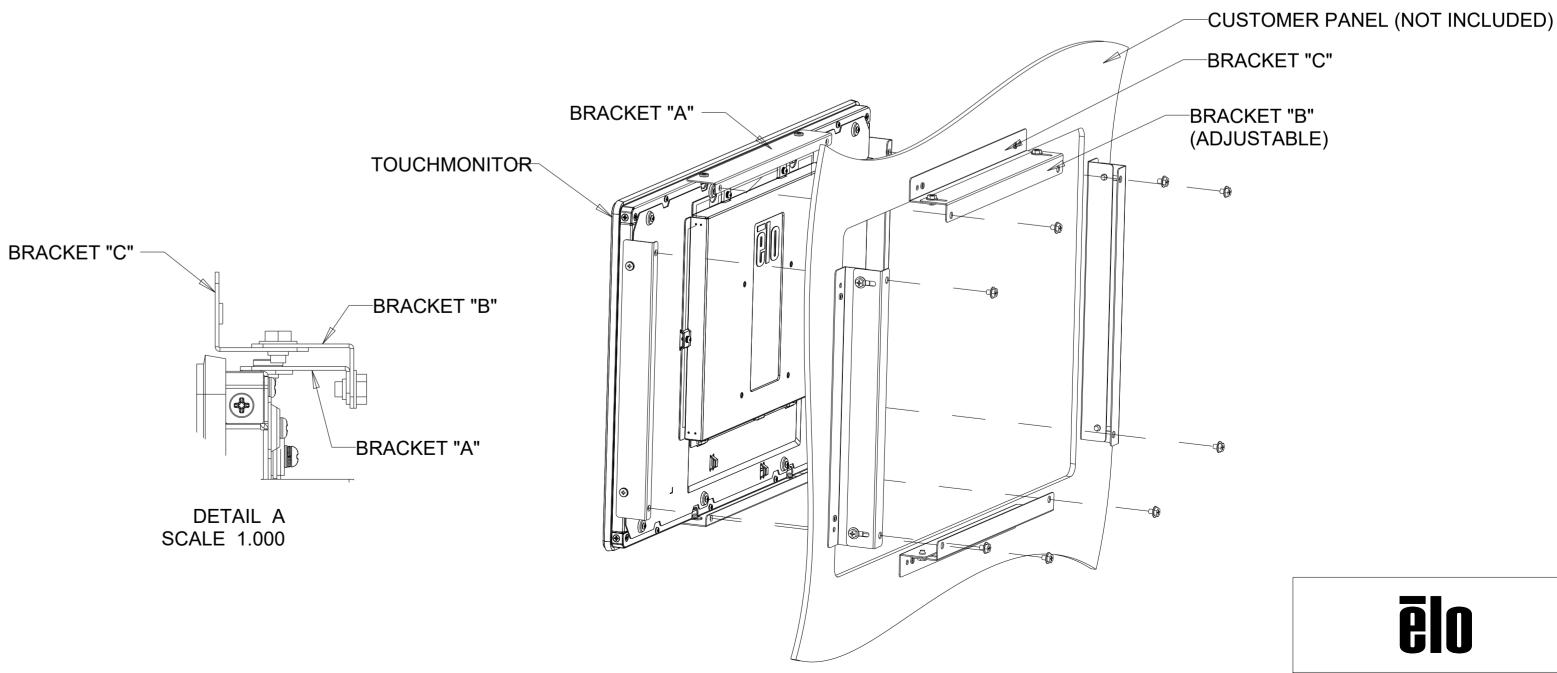



SHEET 2 OF 6


MS601694 DATE: 12/28/2022

REV: E

BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

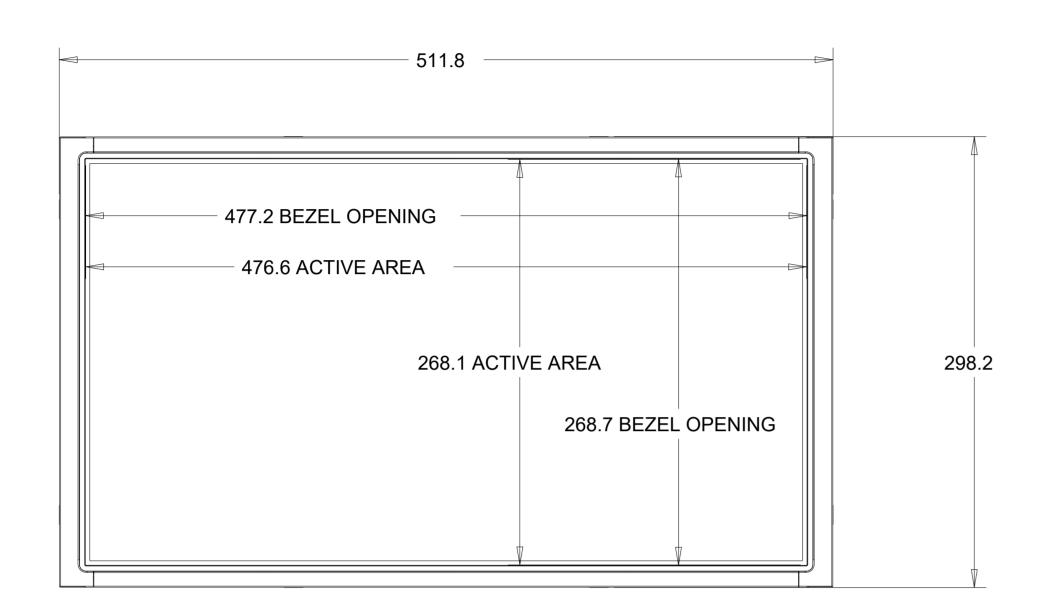


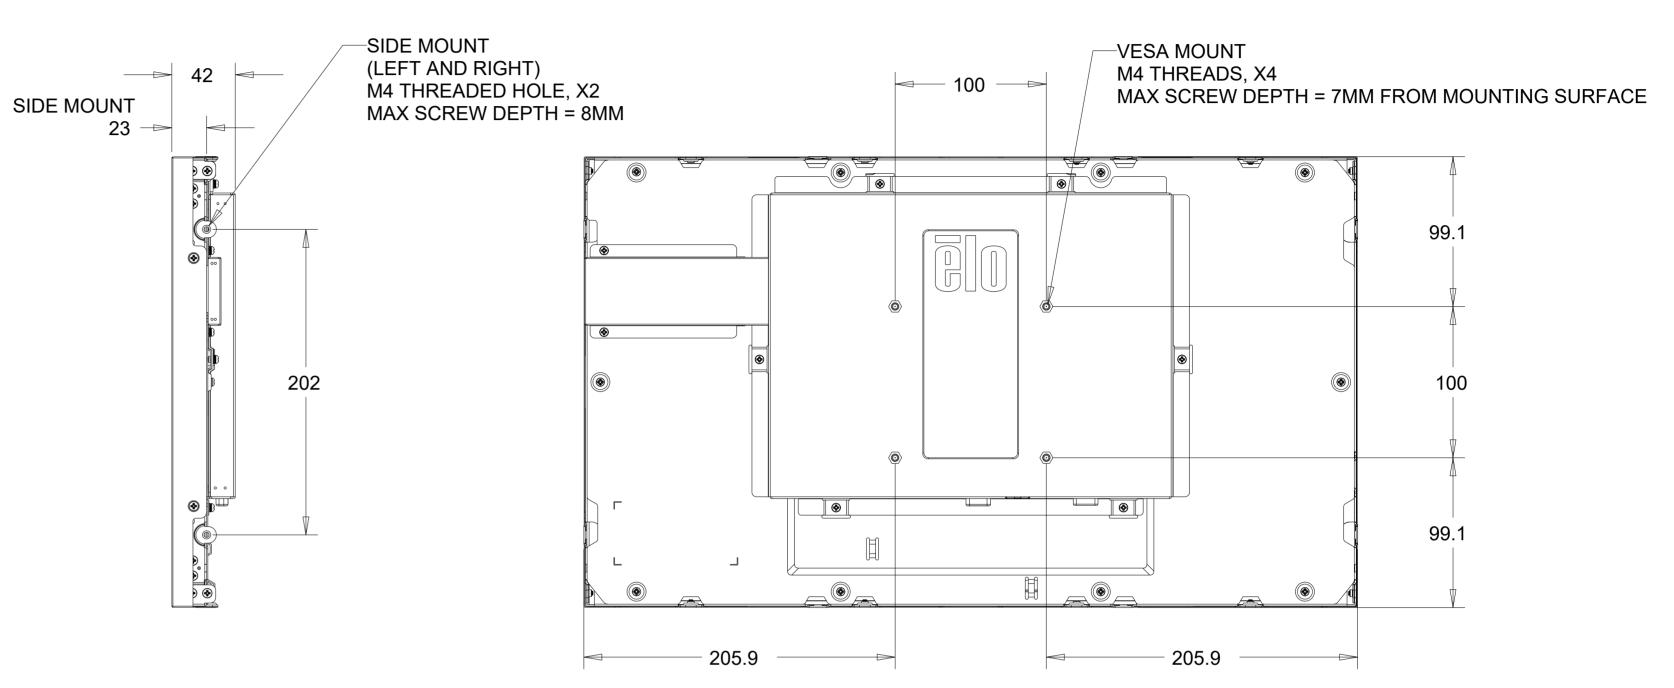

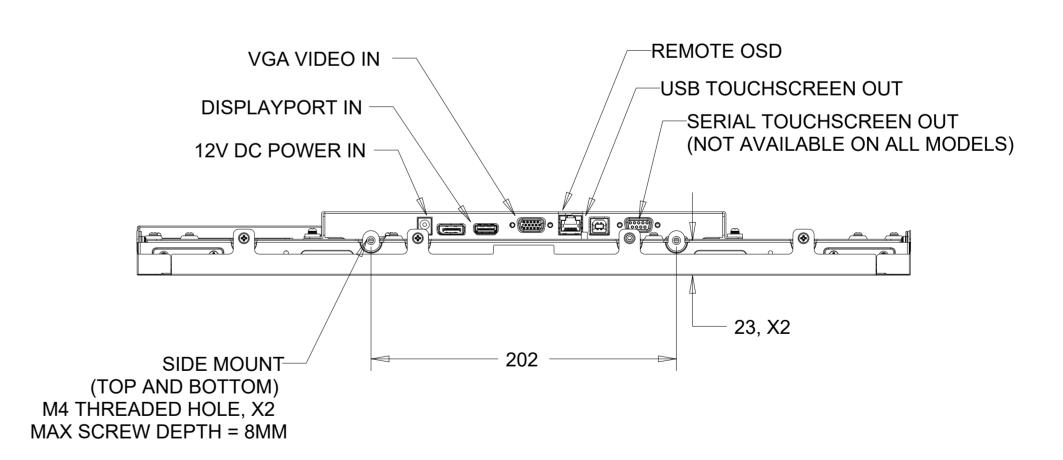


BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

WITH SIDE MOUNTING BRACKETS (4 INCLUDED) REPLACEMENT BRACKET KIT P/N E530432 AVAILABLE SEPARATELY

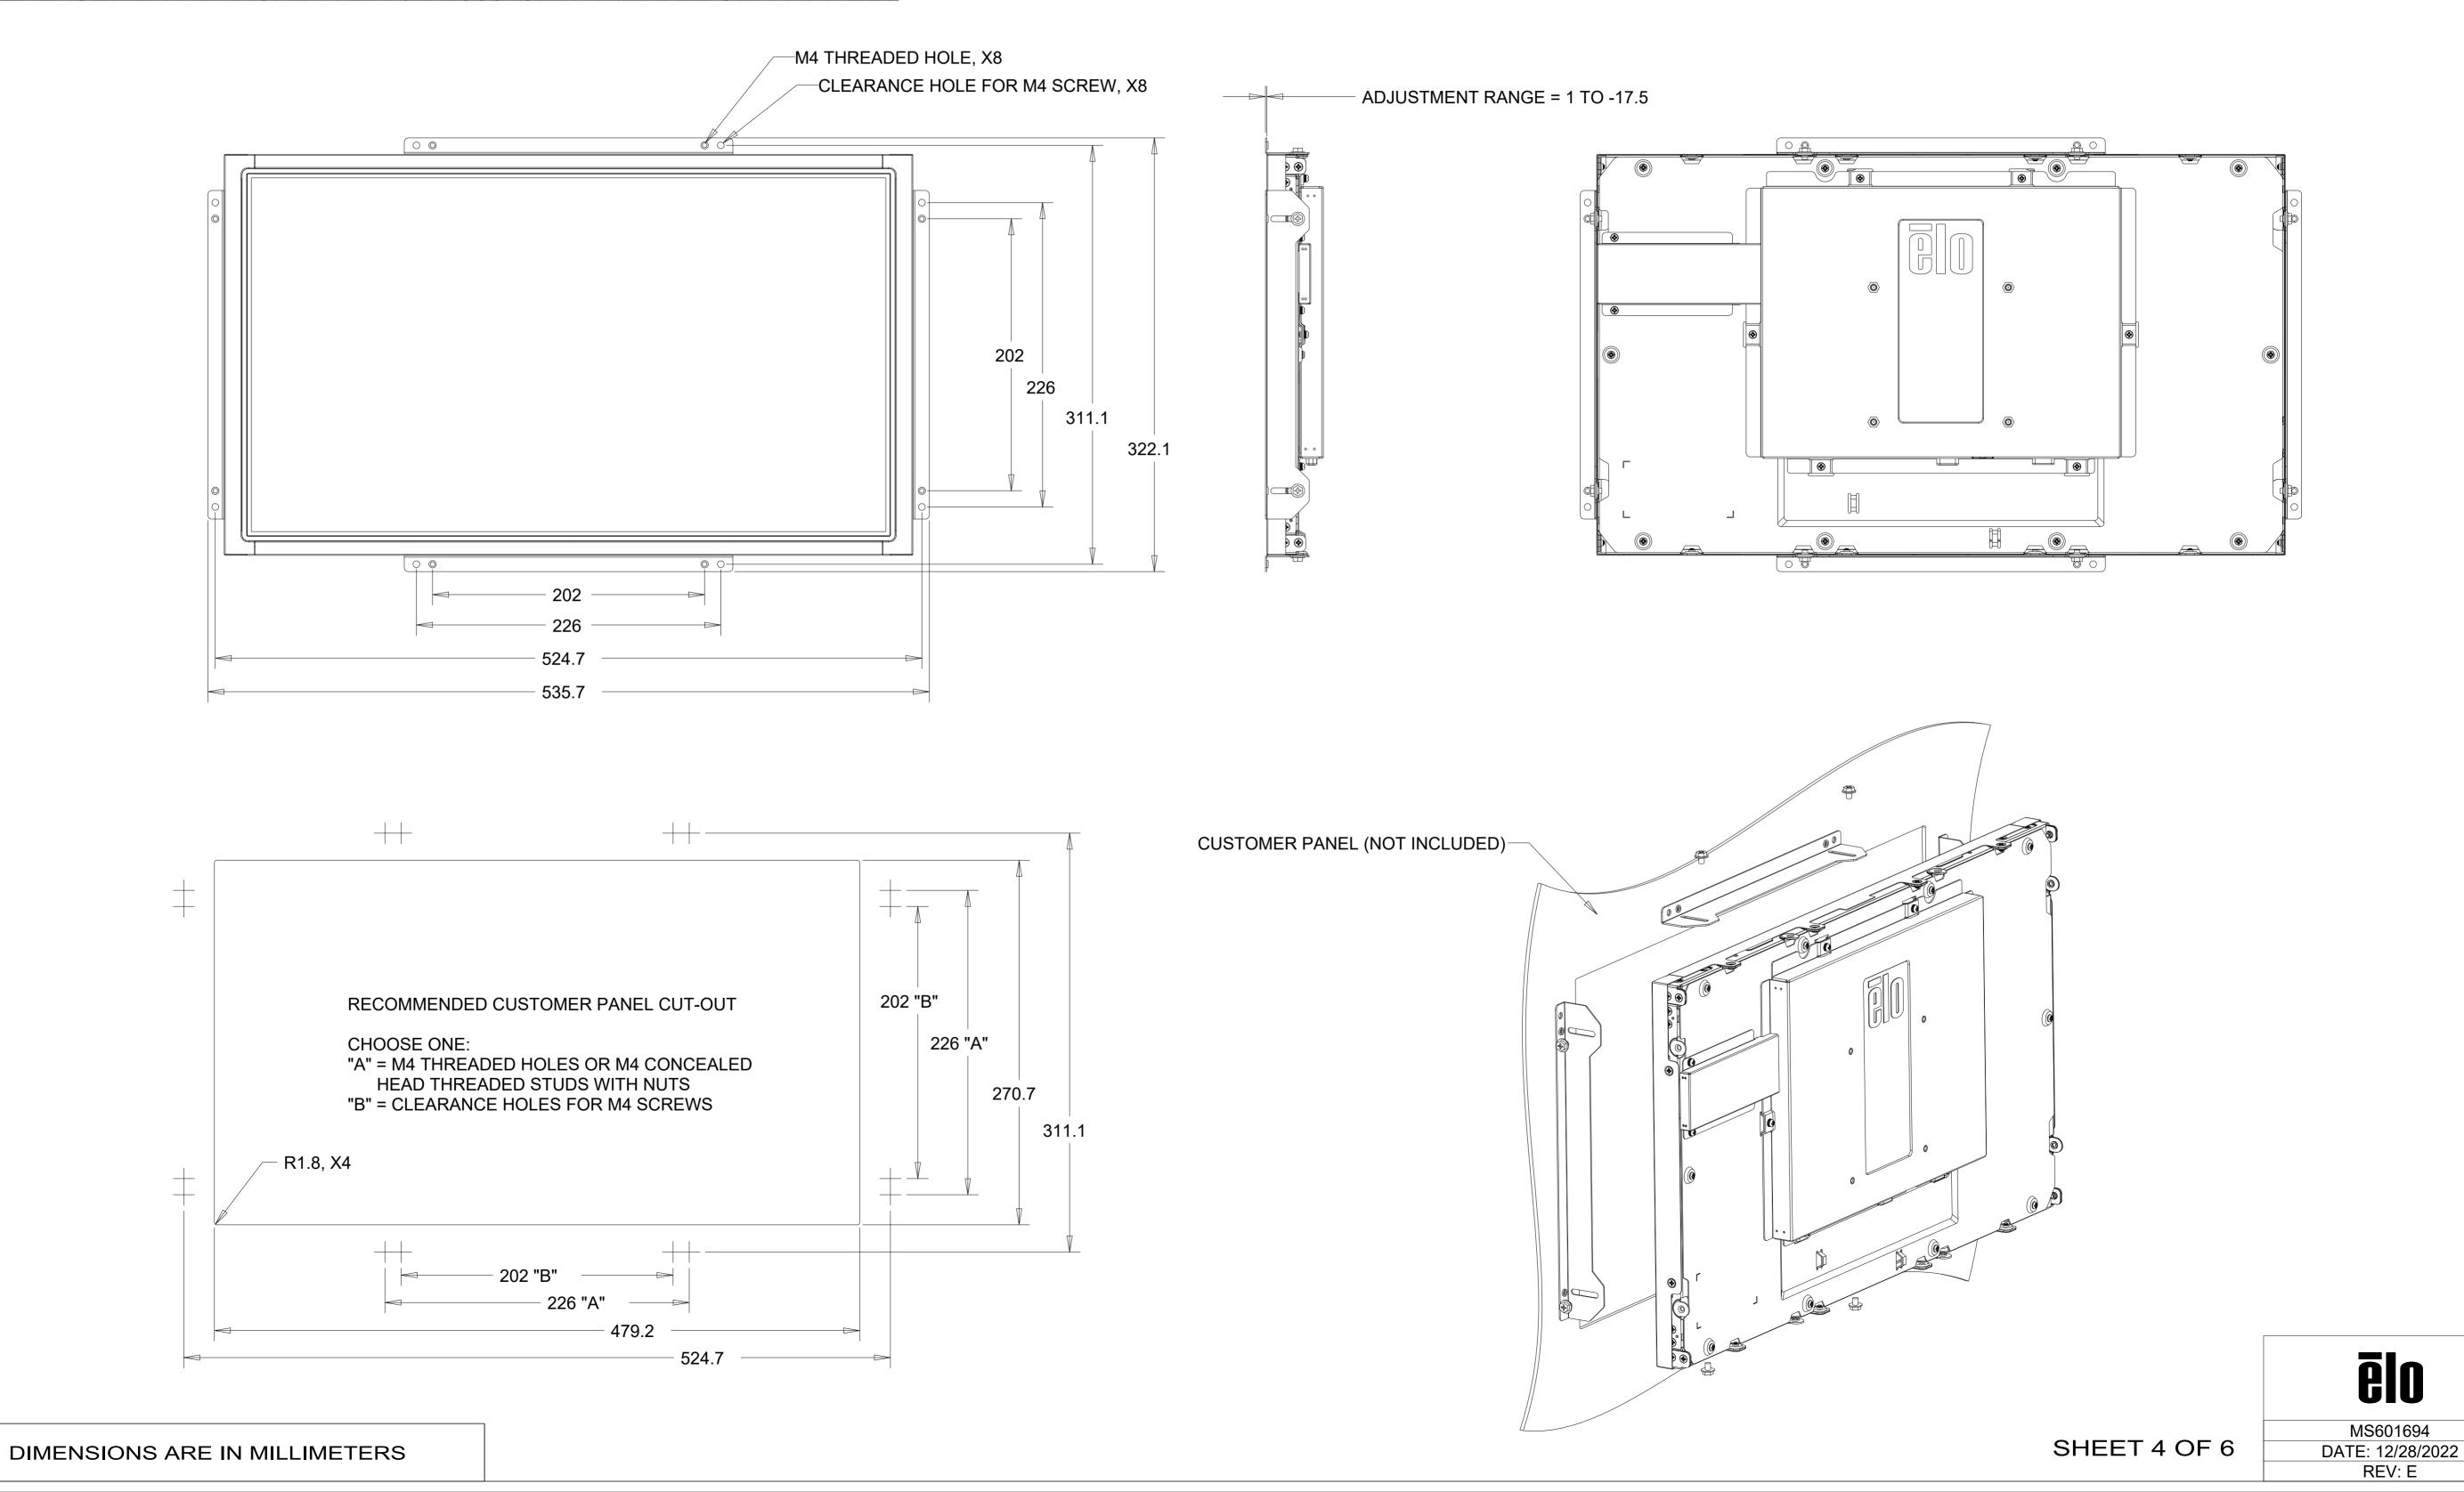

FRONT MOUNT BEZEL KIT P/N: E668194 (ORDERED SEPARATELY, CUSTOMER ASSEMBLED)


COMPATIBLE WITH BEZELED PCAP, INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY

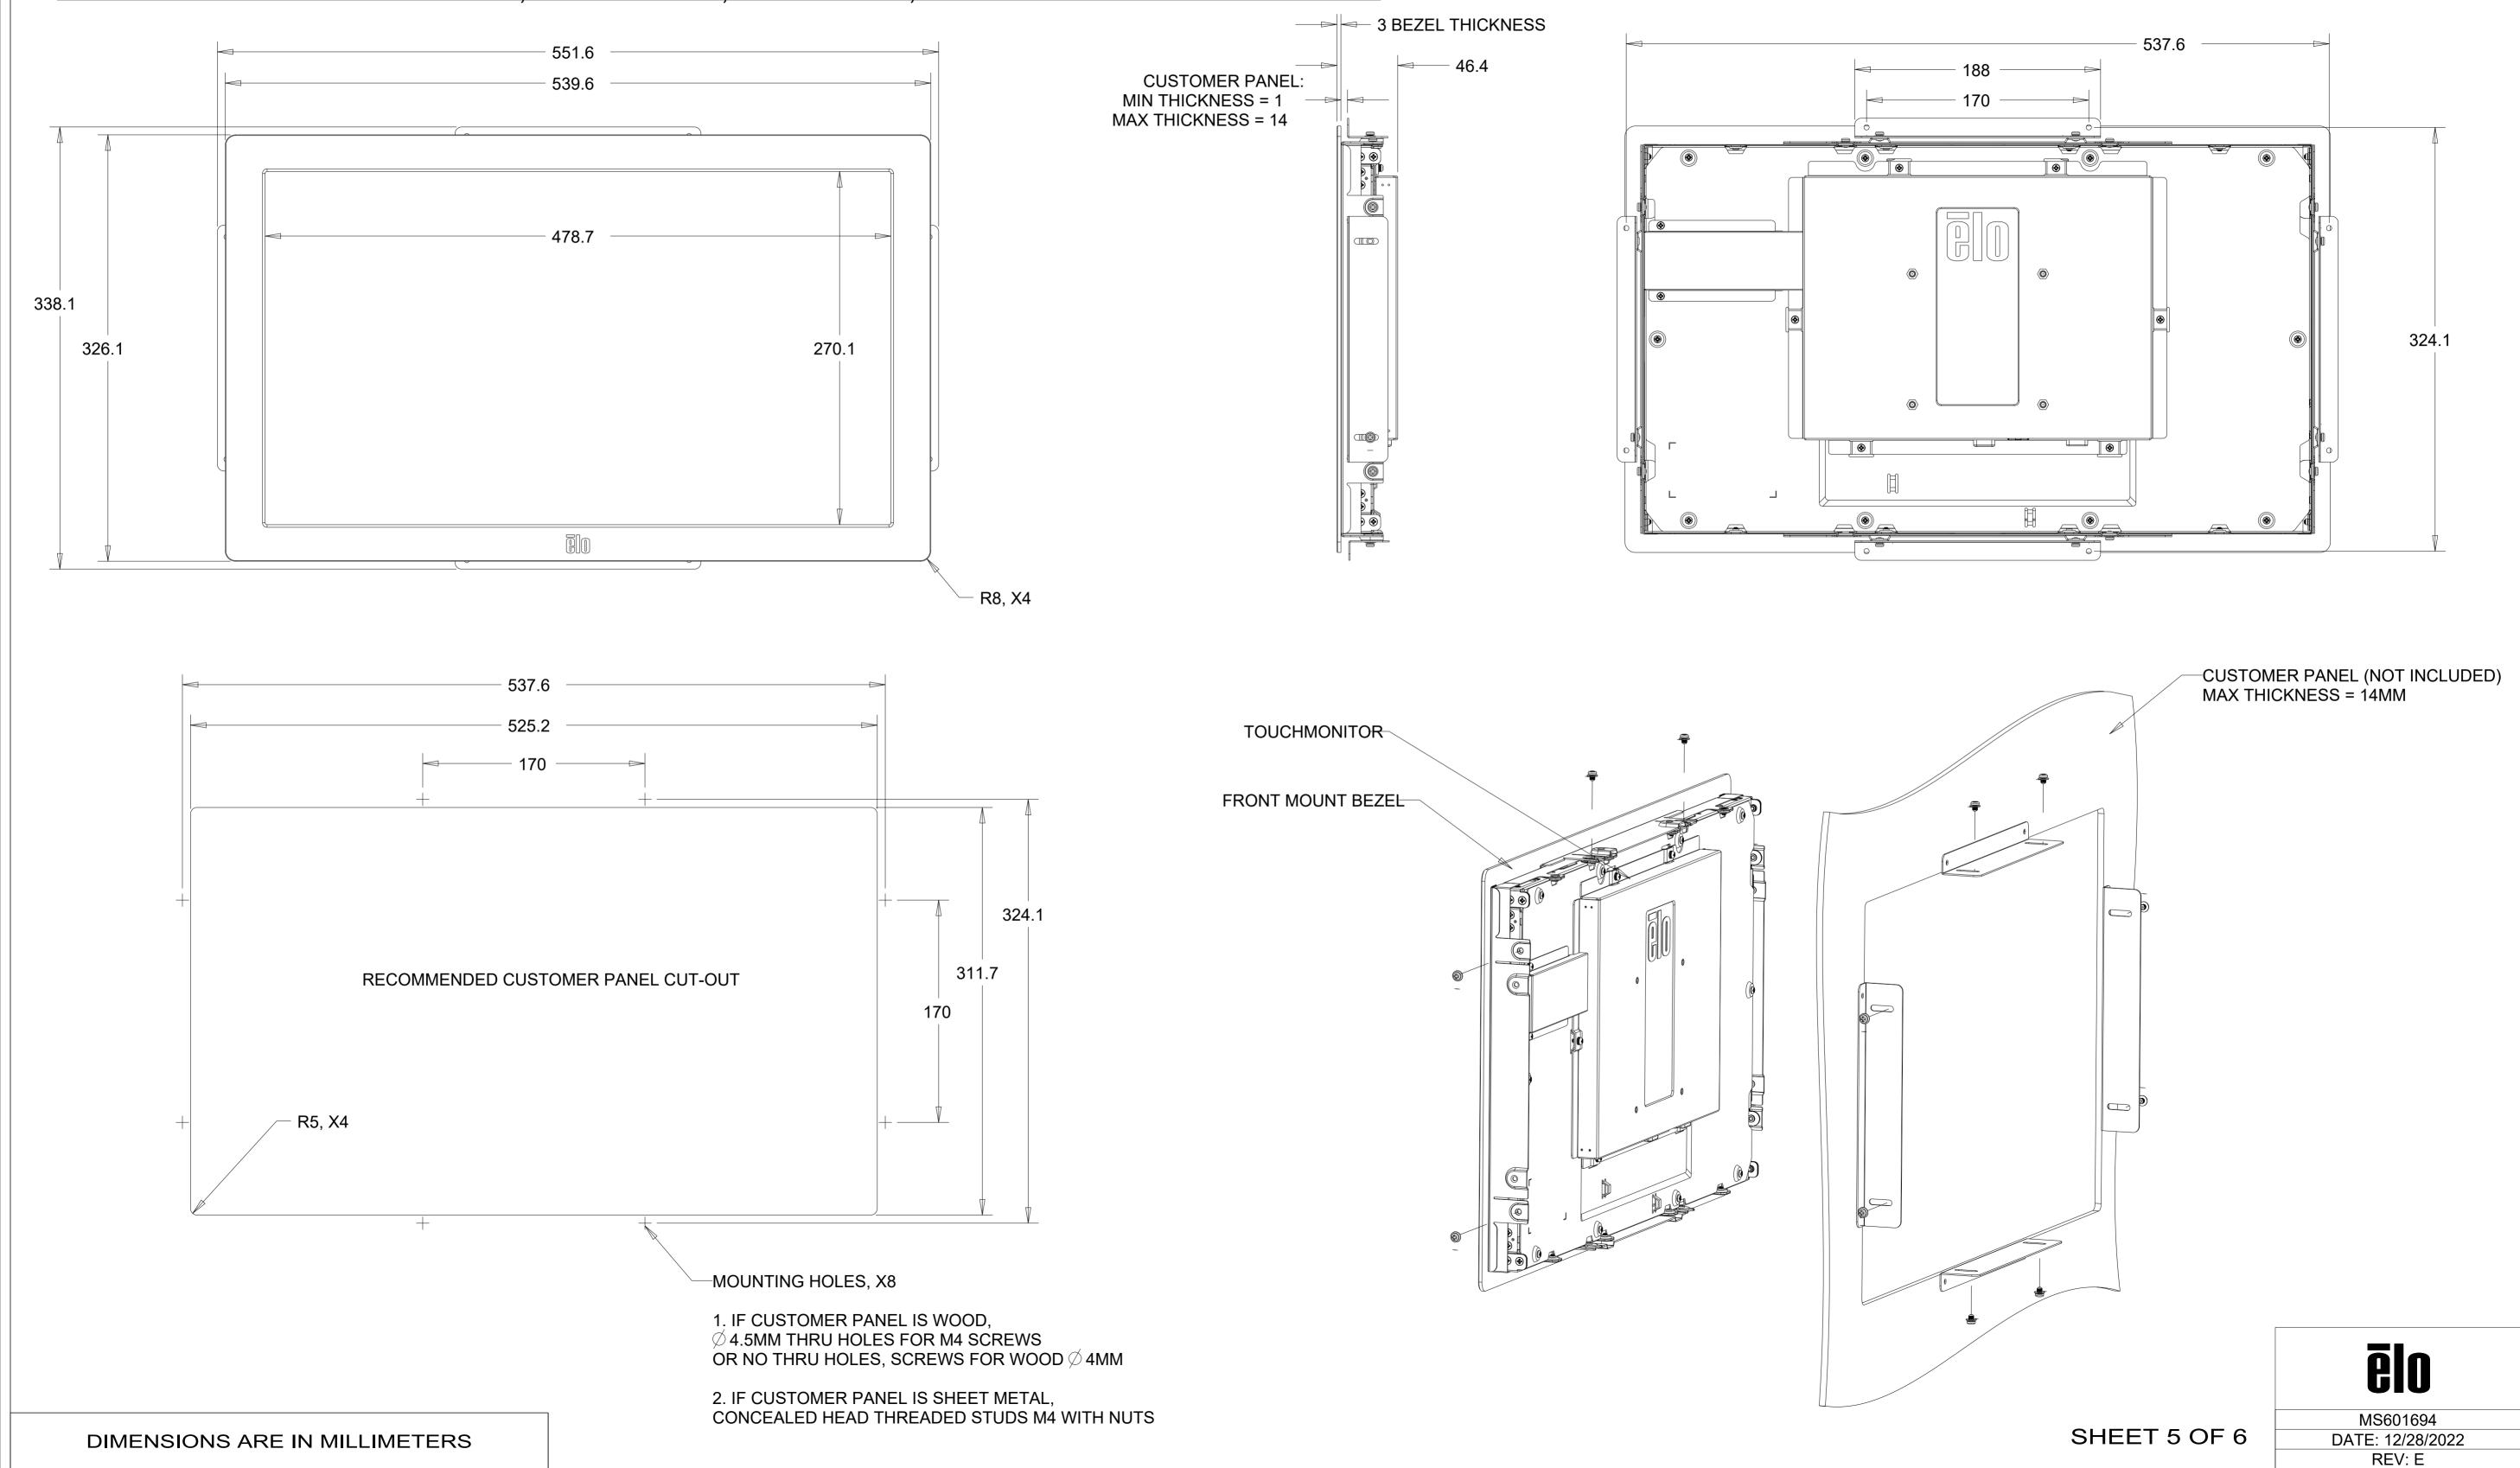


RACK MOUNT BRACKET KIT P/N: E462672 (ORDERED SEPARATELY, CUSTOMER ASSEMBLED) COMPATIBLE WITH BEZELED PCAP,INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY

NOTES:

- 1. REQUIRES 12U RACK SPACE
- 2. TOUCHMONITOR IS ORIENTED IN PORTRAIT MODE
- 3. HOLE SPACING PER EIA-310-D

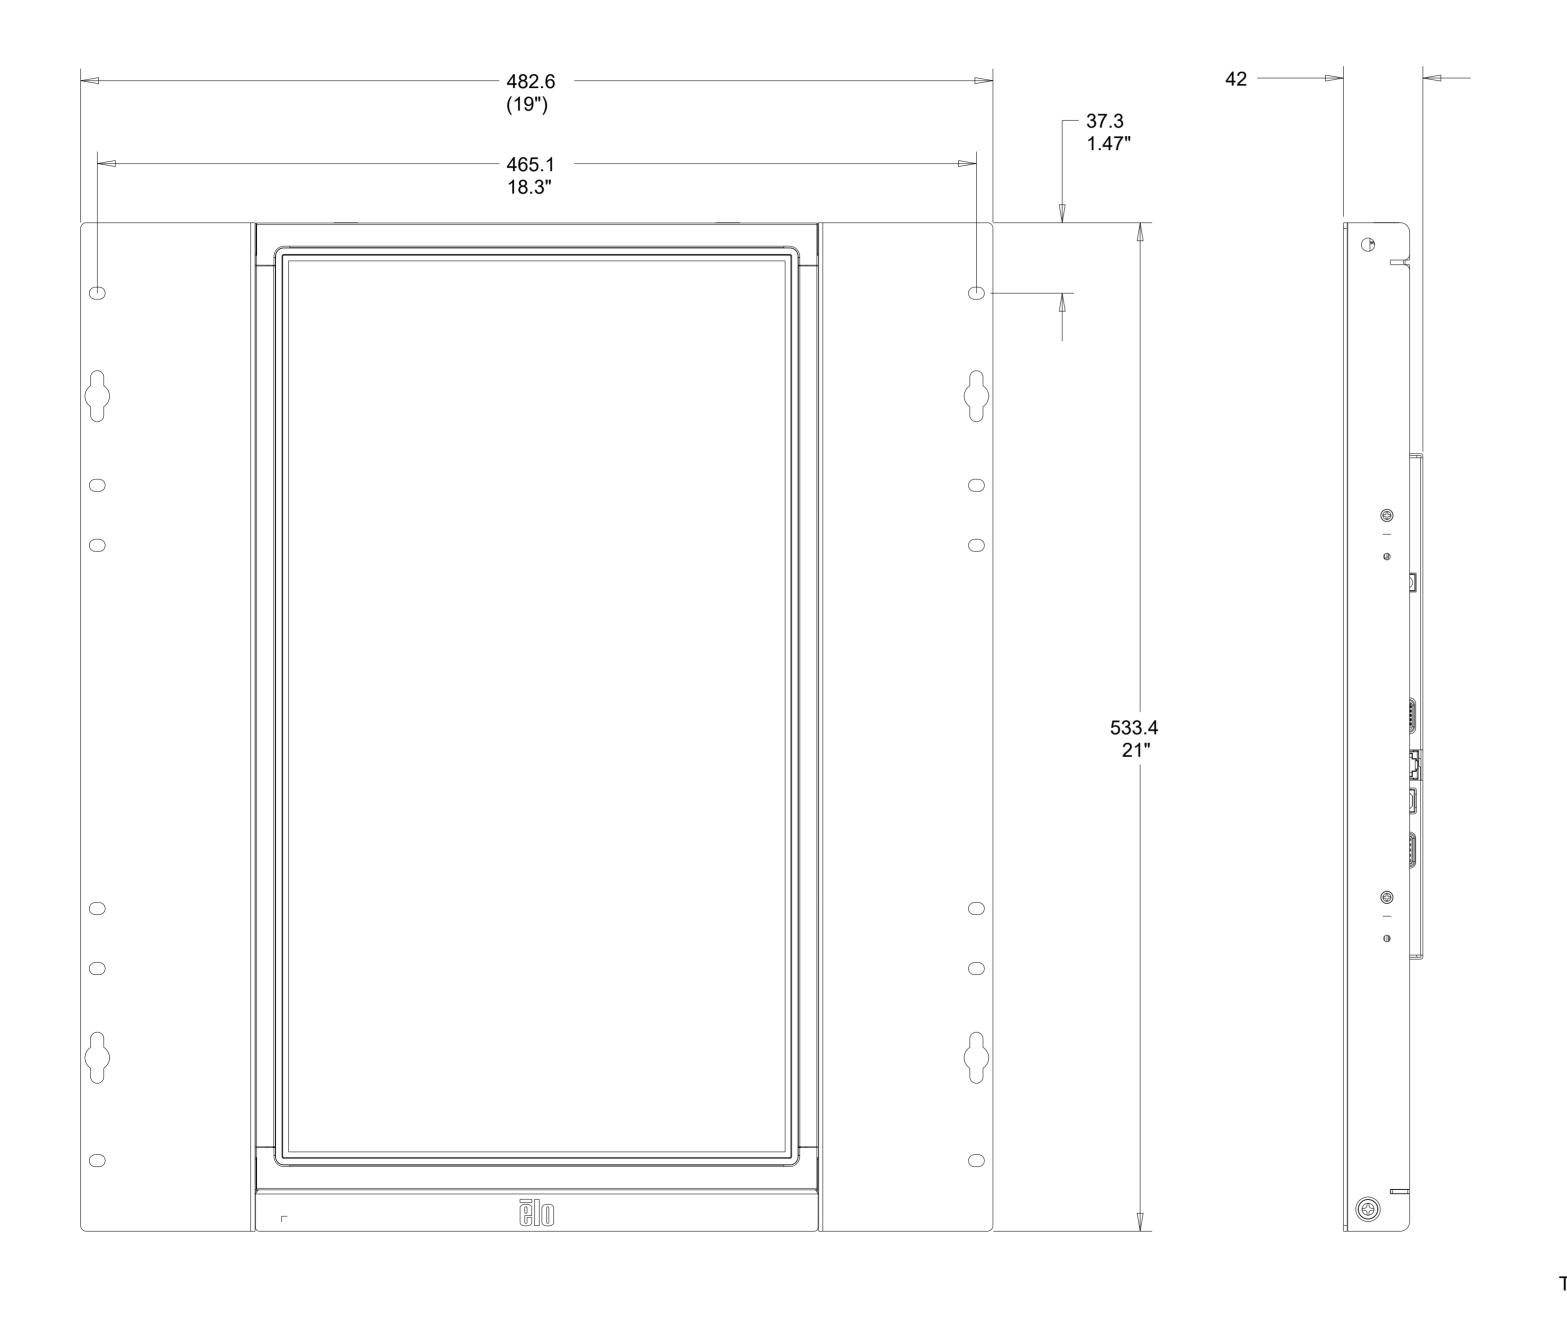

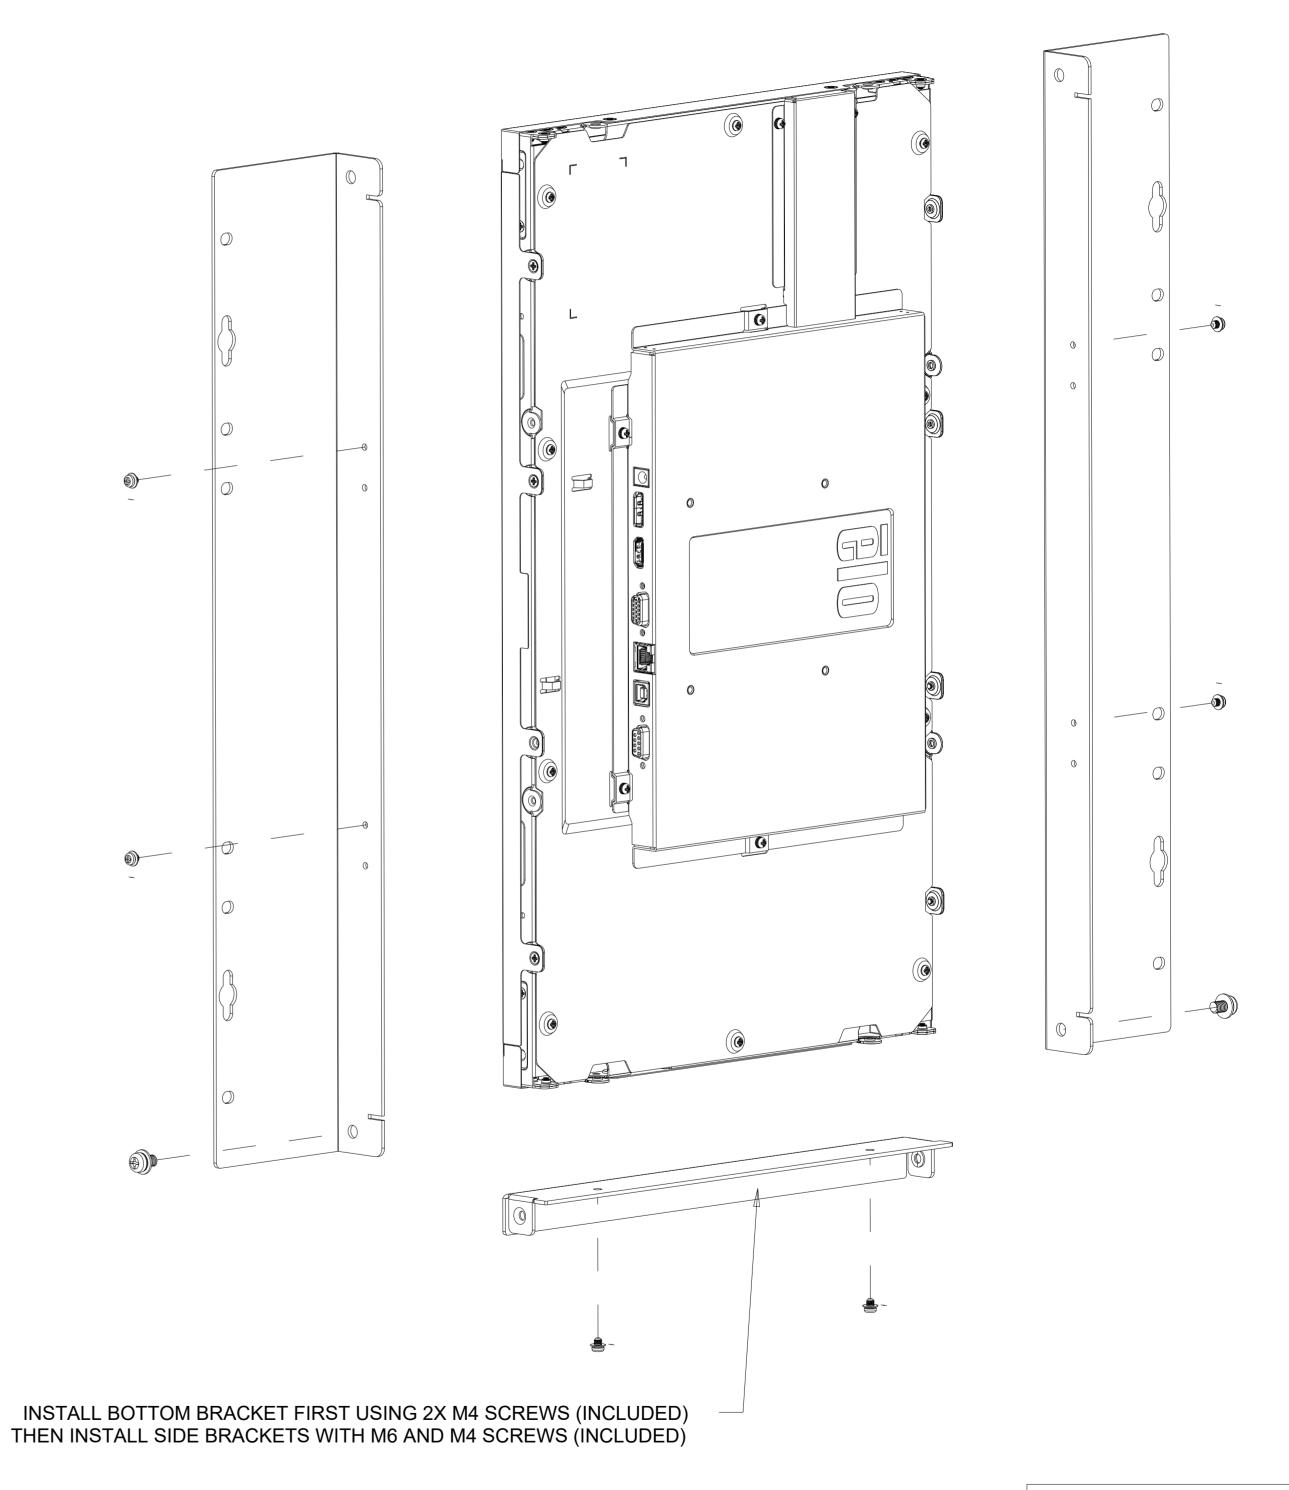

REV: E