


PROJECTED CAPACITIVE MODEL

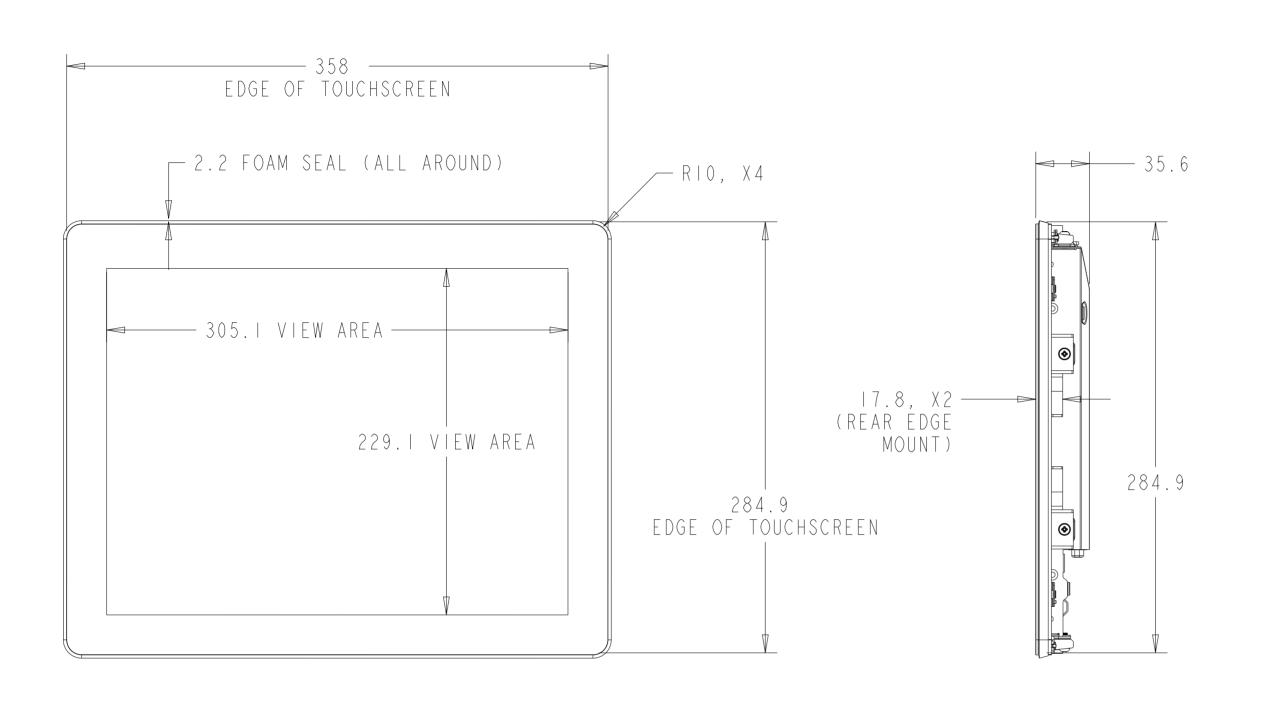


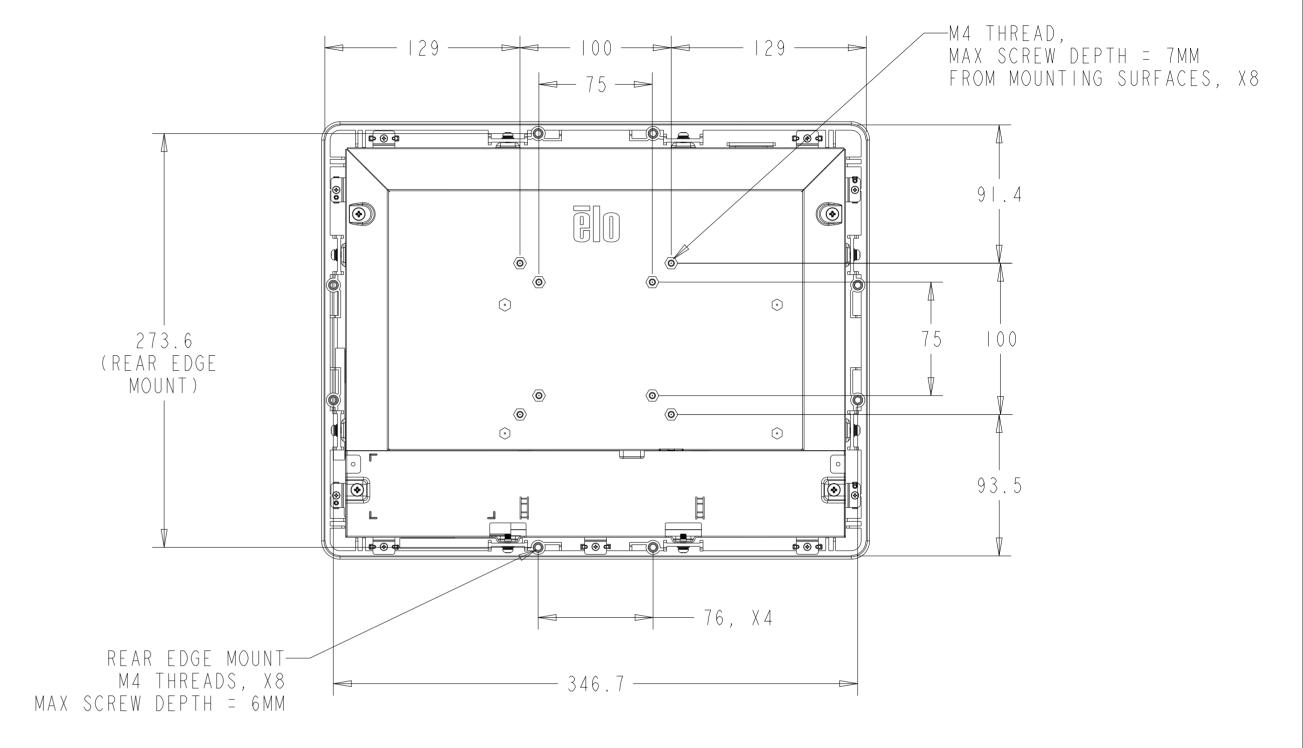

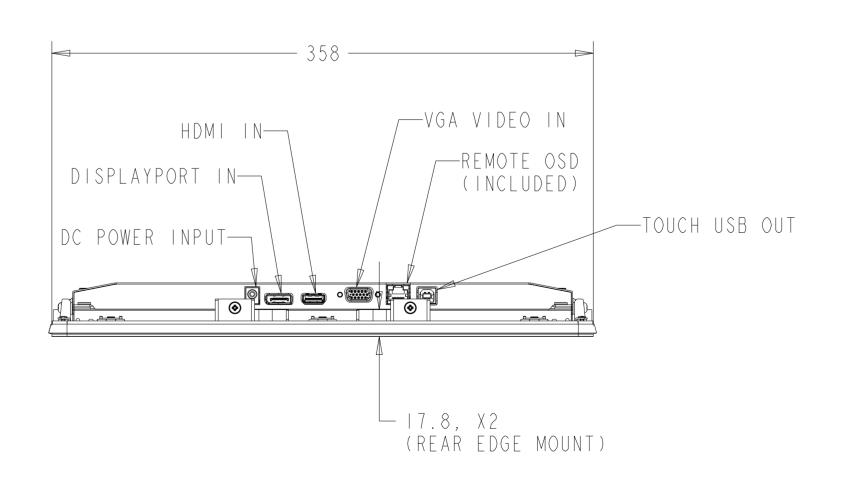



PROJECTED CAPACITIVE MODEL

<u>WITH FLUSH MOUNTING BRACKETS (4 SETS INCLUDED)</u> <u>REPLACEMENT BRACKET KIT P/N E139556 AVAILABLE SEPARATELY</u>

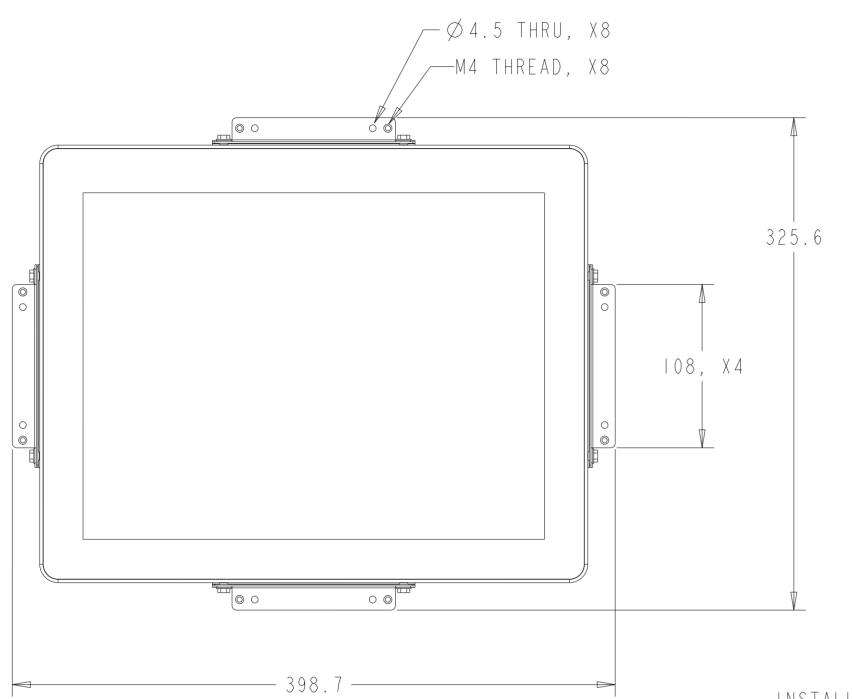



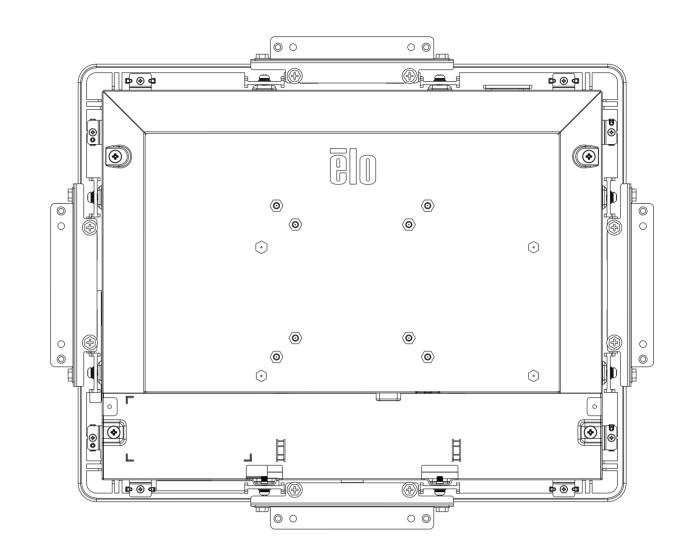

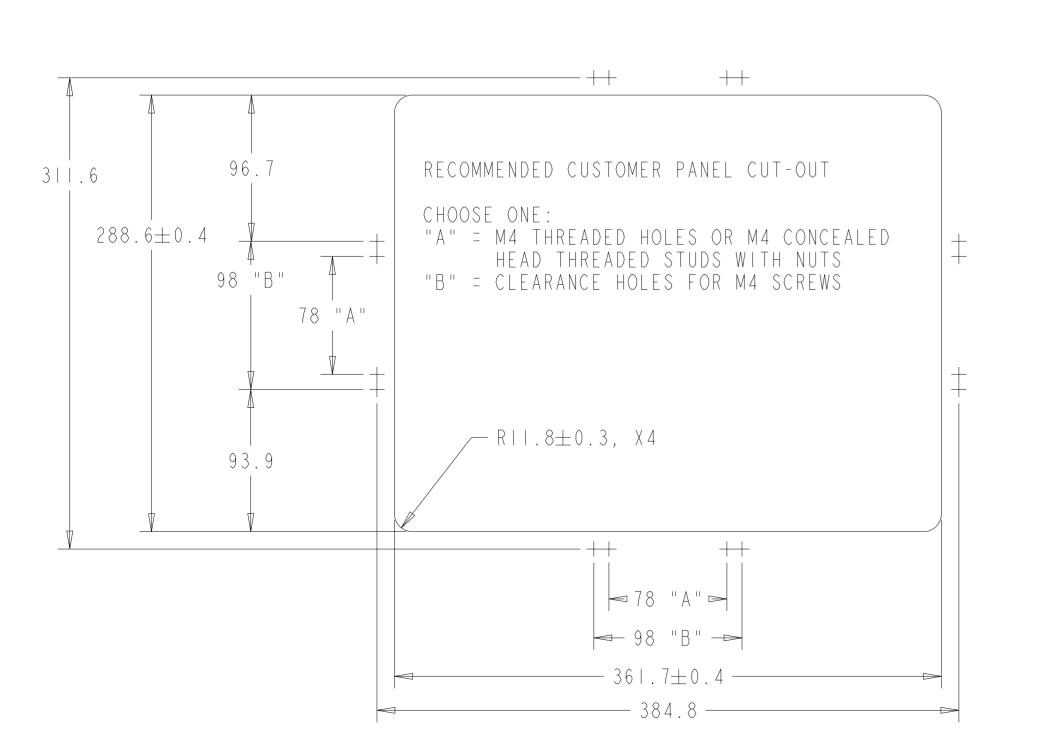

INSTALLATION NOTES:


- I. ATTACH BRACKET "A" TO CUSTOMER PANEL (ALL FOUR SIDES)
- WITH INCLUDED SCREWS


 2. ATTACH BRACKET "B' TO TOUCHMONITOR (ALL FOUR SIDES)

 3. PLACE TOUCHMONITOR INTO CUSTOMER PANEL OPENING,
 TAKING CARE NOT TO DAMAGE FOAM SEAL

 4. ADJUST DEPTH OF BRACKETS "B" SO THE MONITOR IS
 FLUSH WITH CUSTOMER PANEL

 5. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND
- 5. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND WITH INCLUDED SCREWS

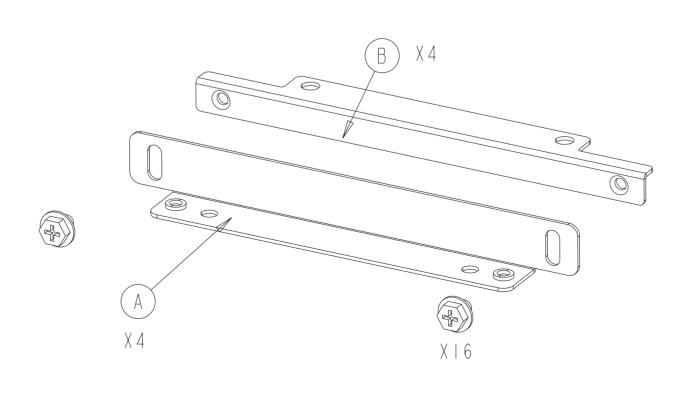


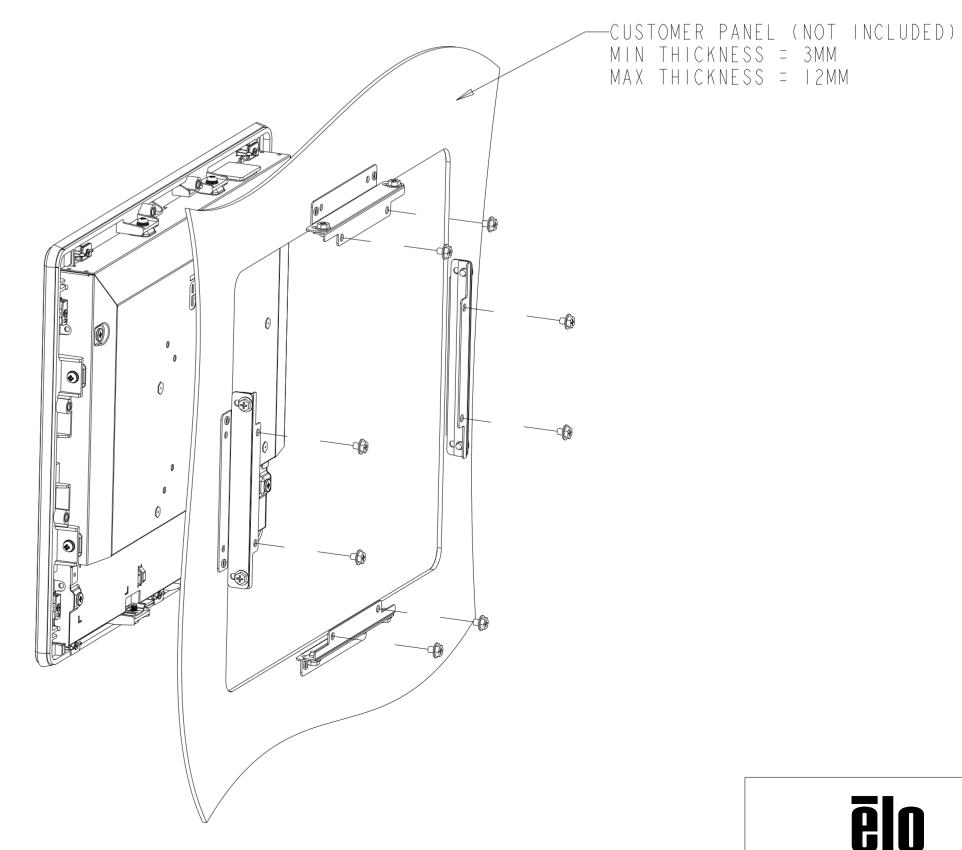



ēlo


SHEET 2 OF 6


MS601689 DATE: 09/10/2019 REV: C

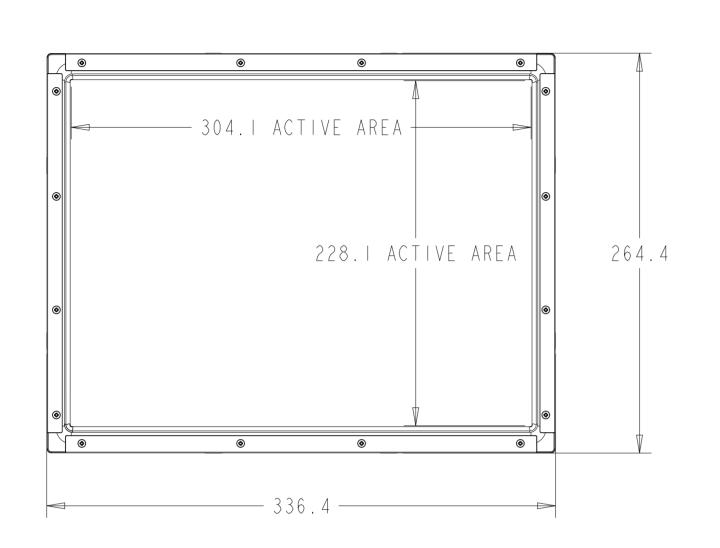

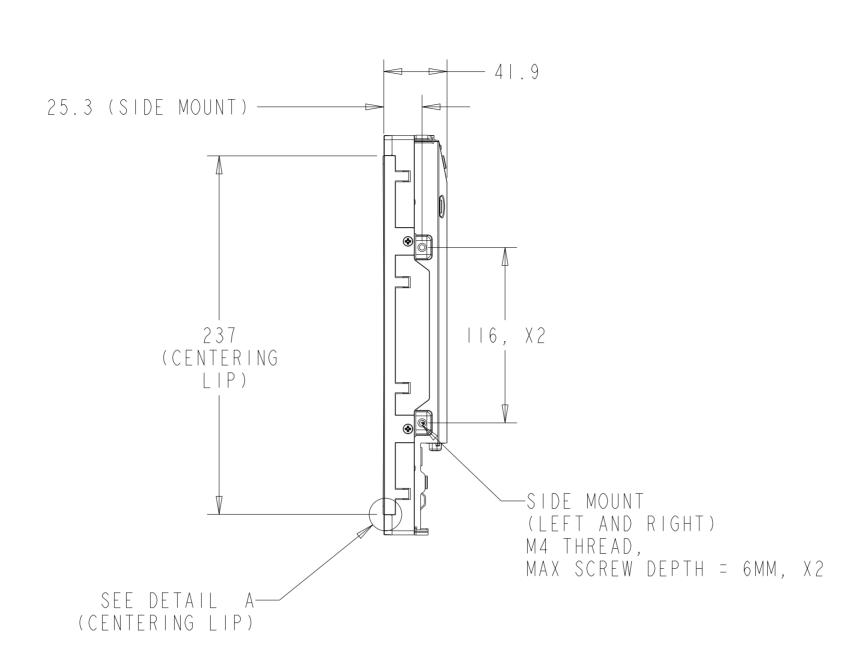


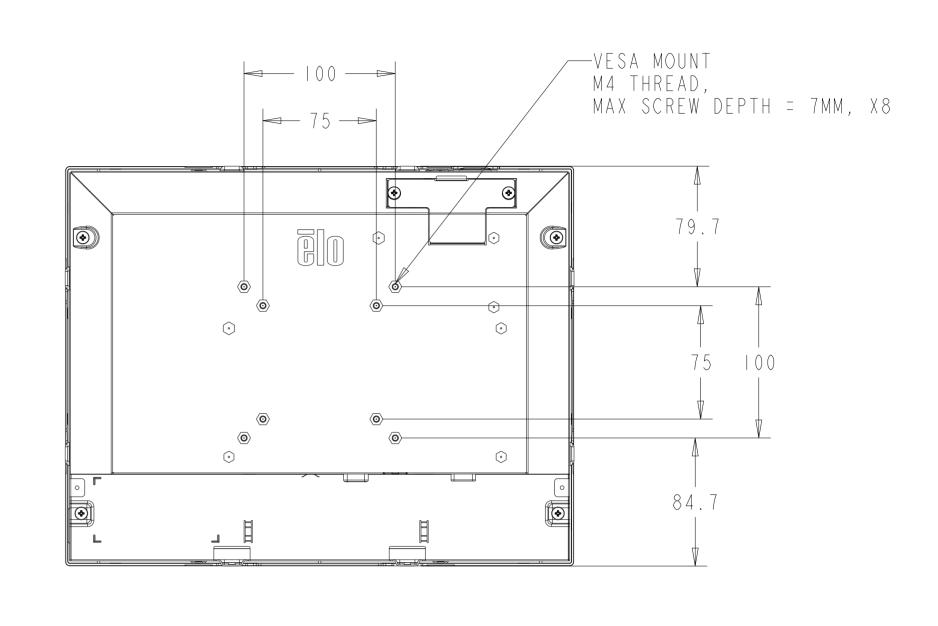

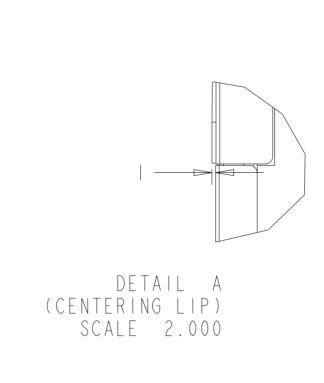


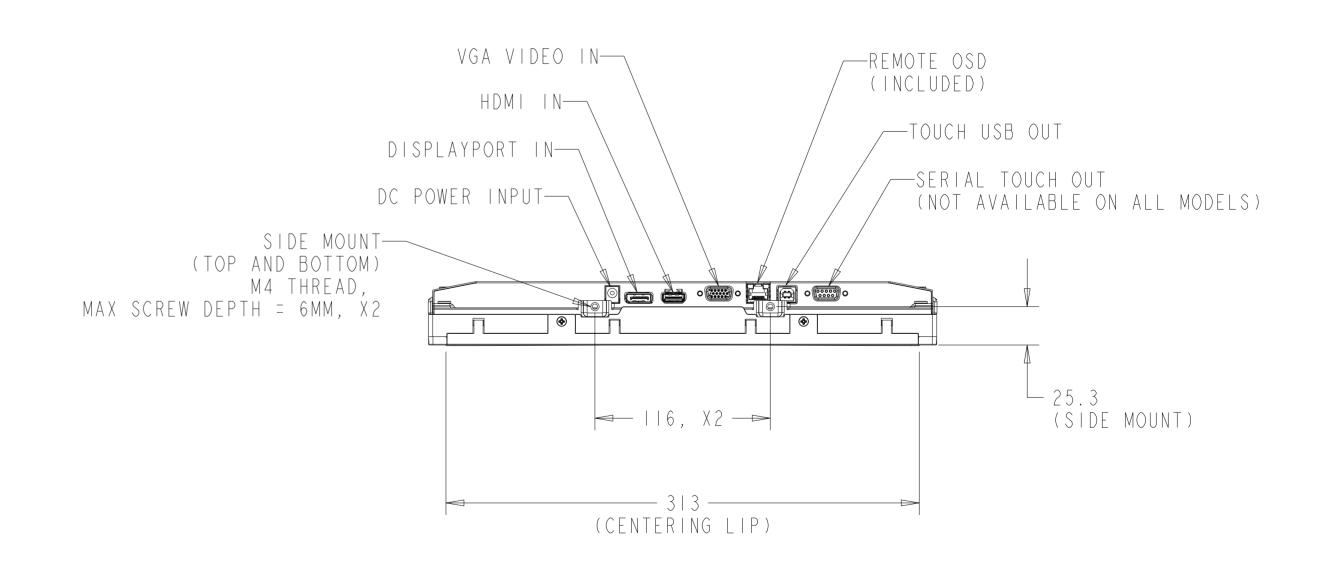


<u>WITH SIDE MOUNTING BRACKETS (2 INCLUDED)</u> <u>REPLACEMENT BRACKET KIT P/N E203787 AVAILABLE SEPARATELY</u>

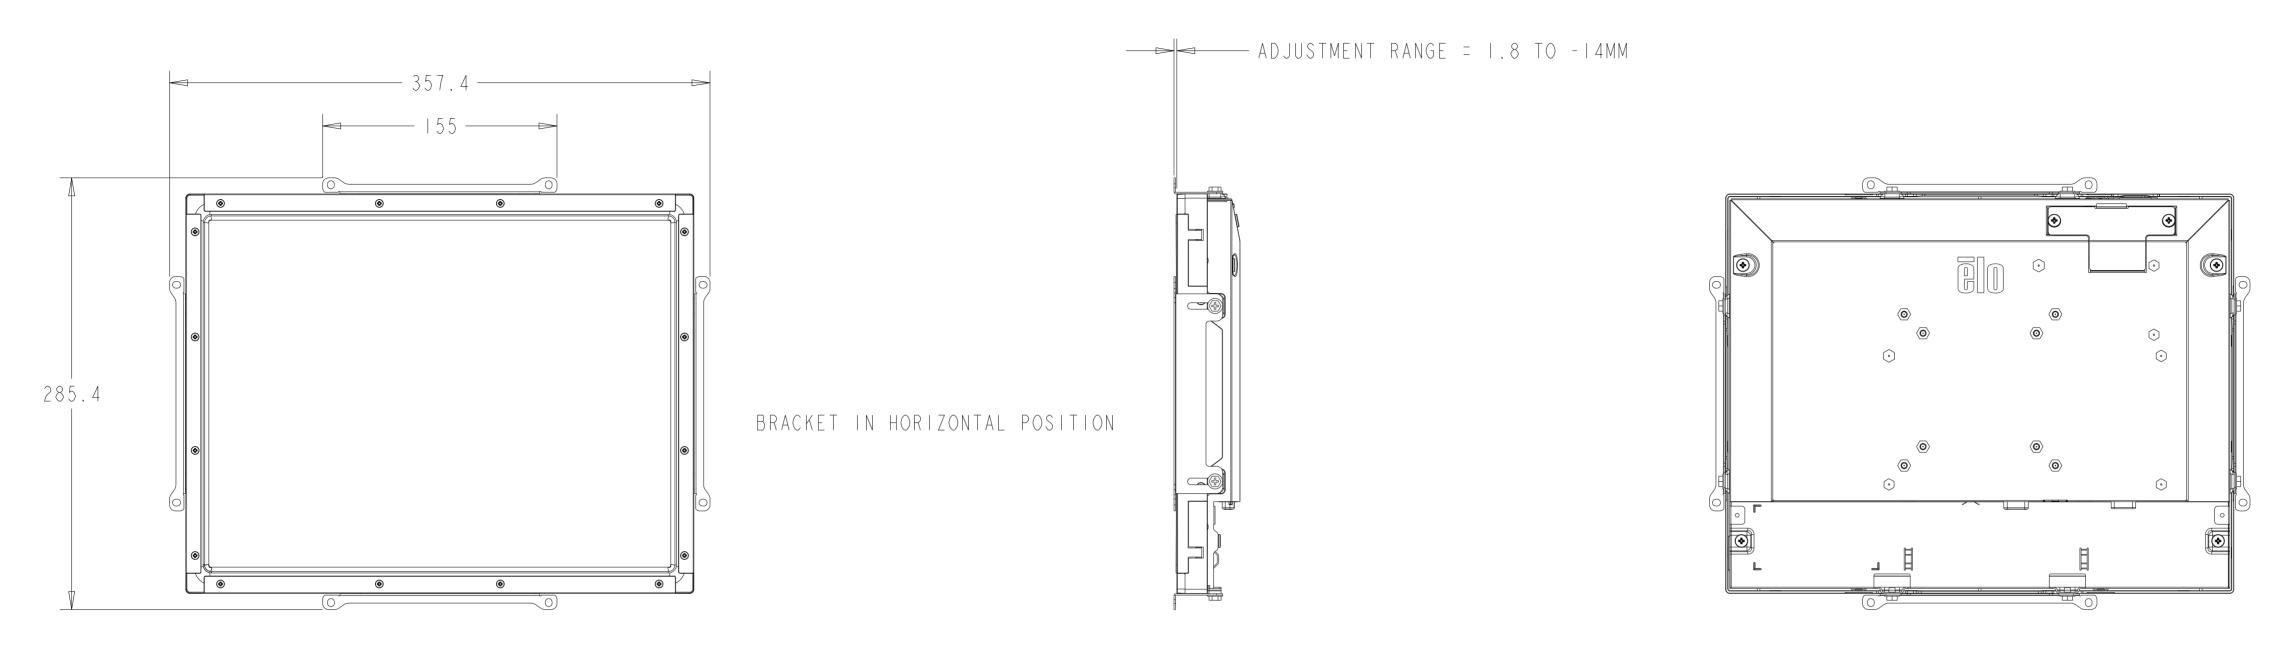



BRACKET IN VERTICAL POSITION

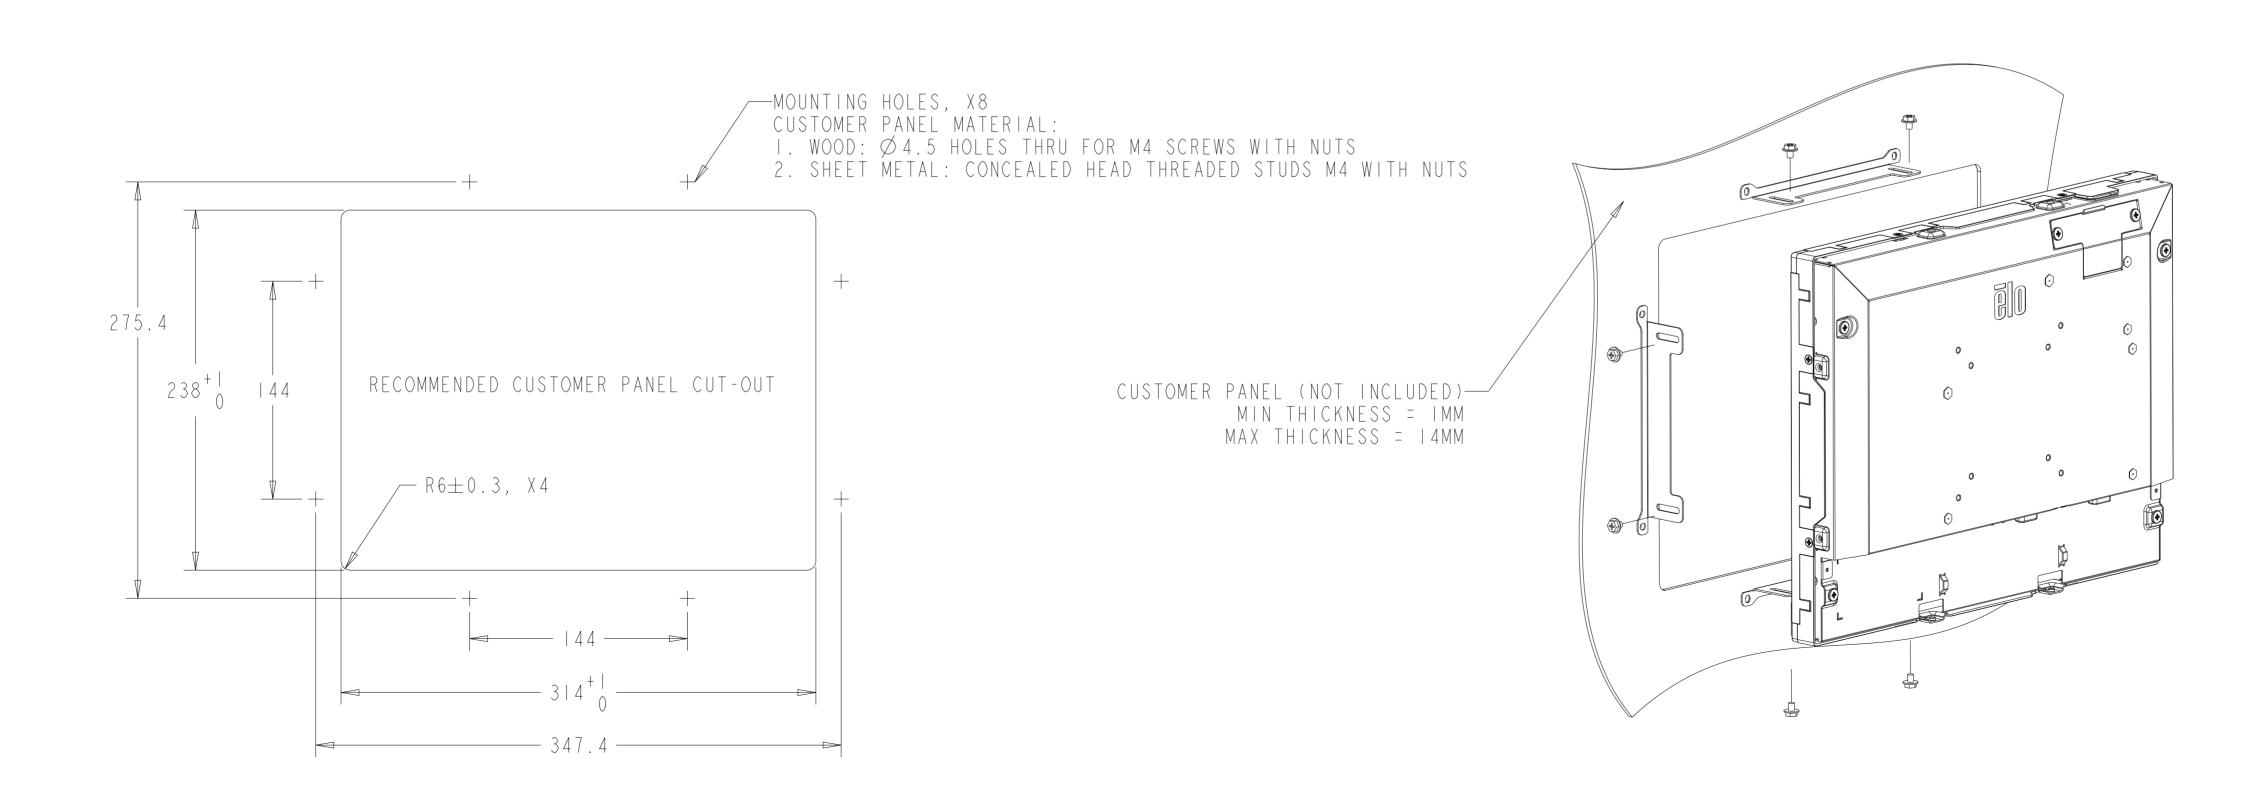


<u>FRONT MOUNT OPTION</u> <u>P/N E323425 ORDERED SEPARATELY, CUSTOMER ASSEMBLED</u>

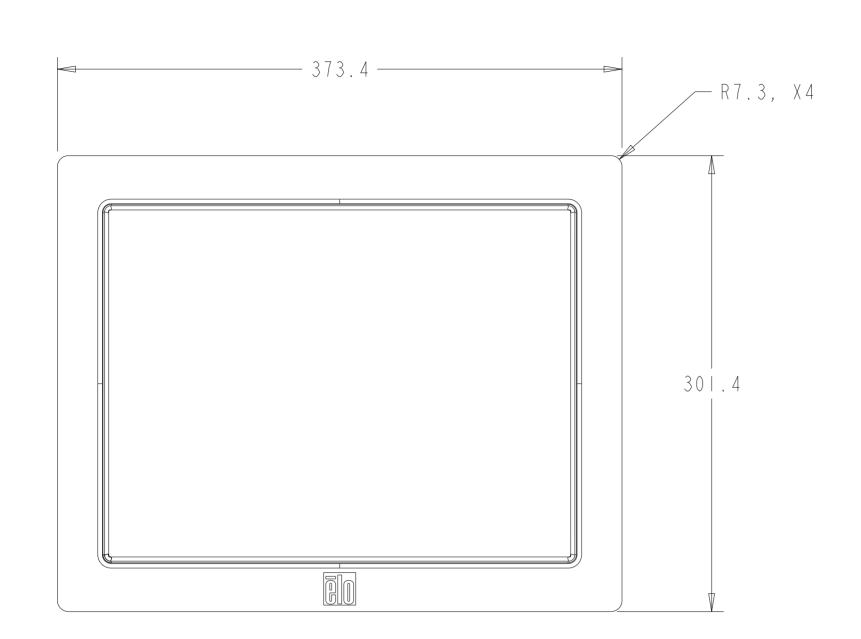

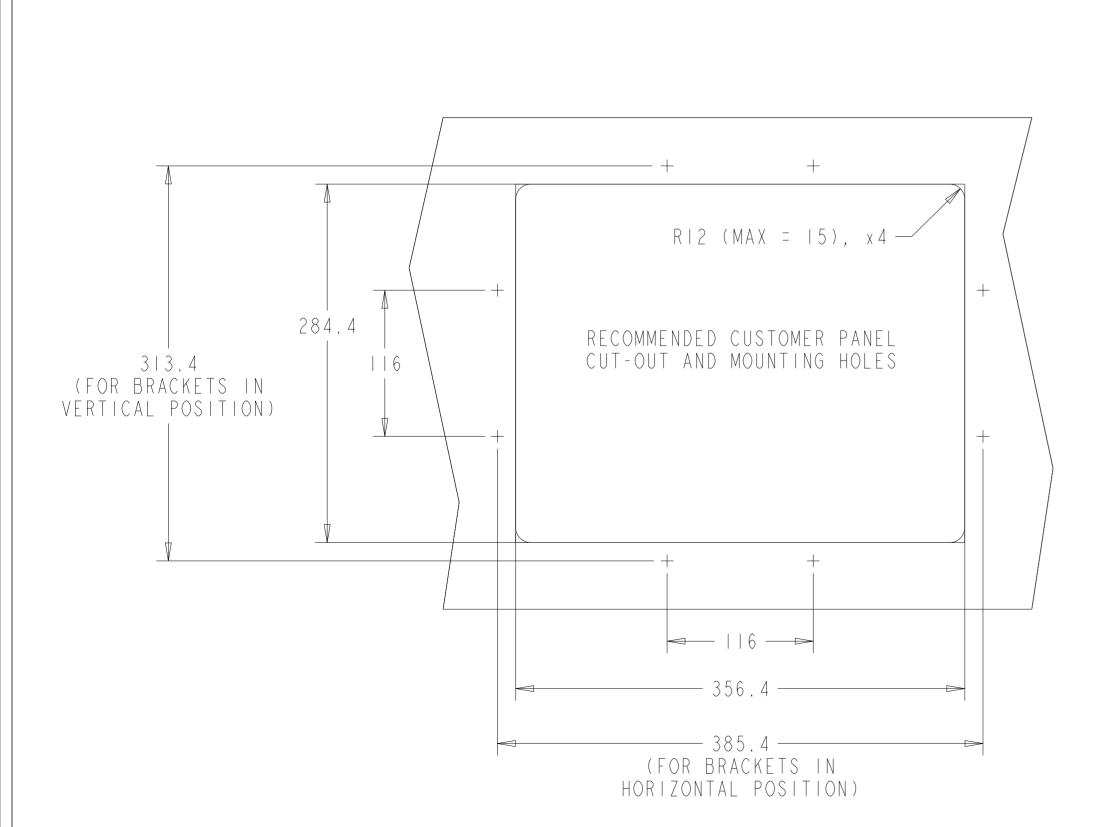

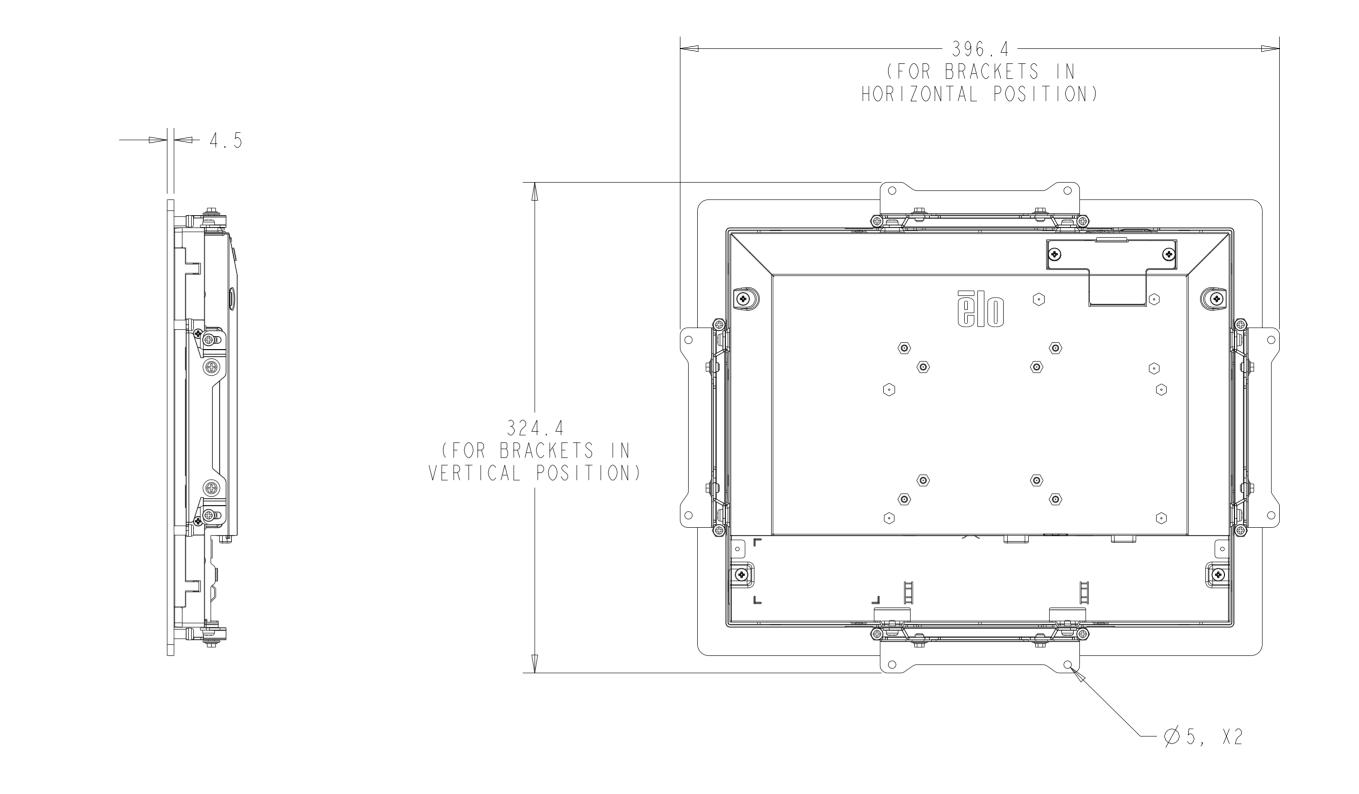

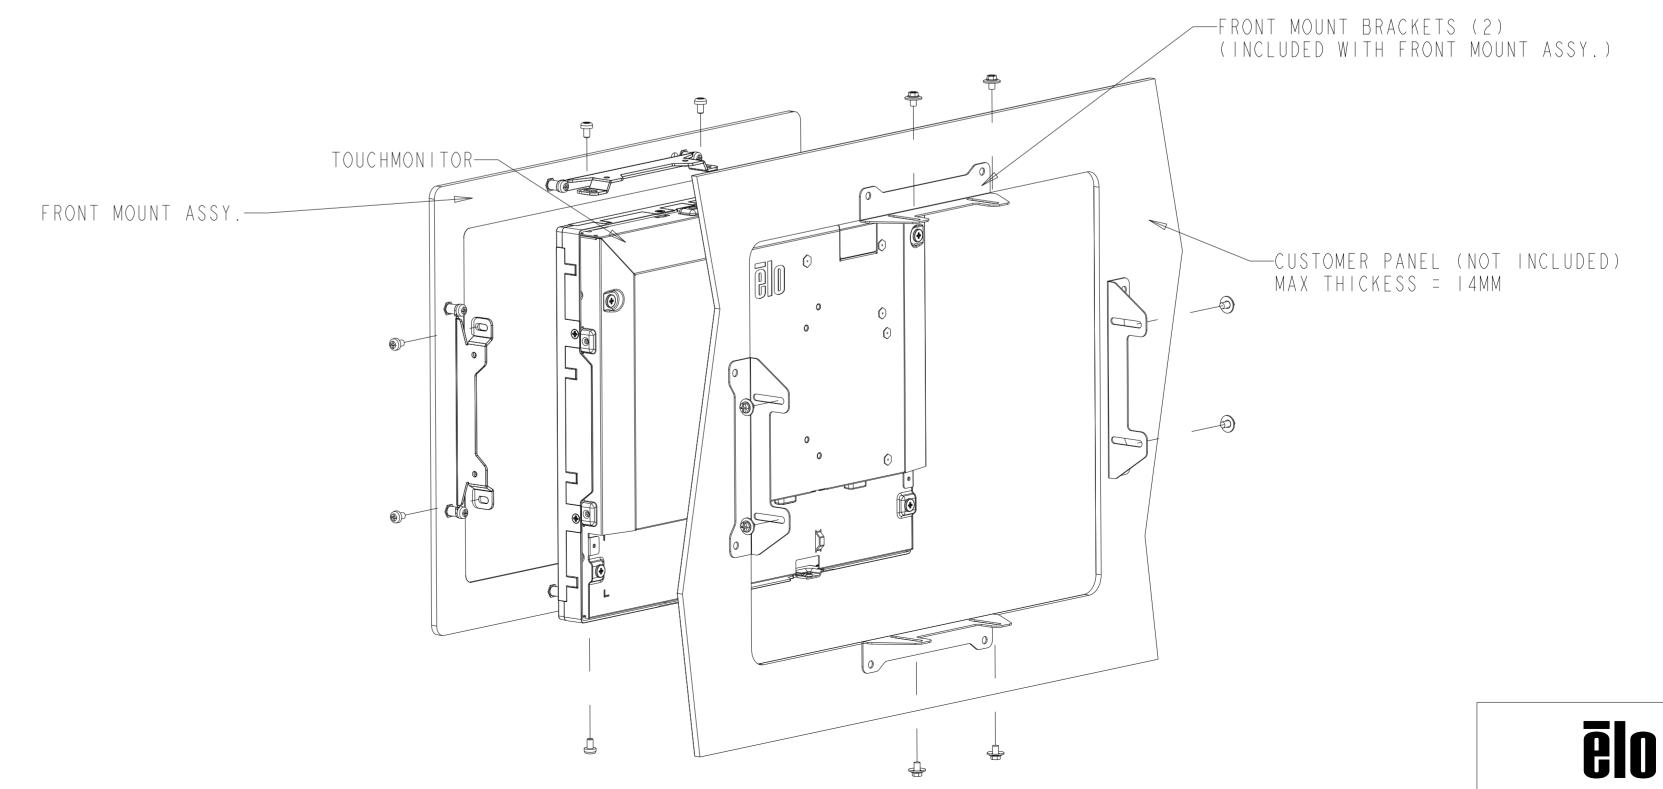

SHEET 5 OF 6

MS601689 DATE: 09/10/2019 REV: C

RACK MOUNT OPTION P/N E295006 ORDERED SEPARATELY, CUSTOMER ASSEMBLED

