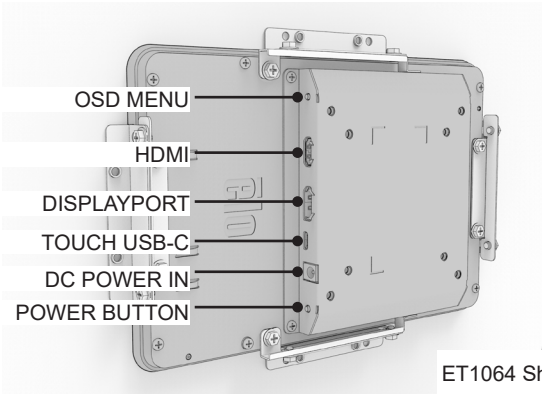## Connections

1. Connect DC power.
2. Connect Touch USB-C cable from touch display to computer.
3. If video through USB-C is not being used, connect HDMI or DisplayPort from touch display to computer.

OSD MENU

HDMI

DISPLAYPORT

TOUCH USB-C

DC POWER IN

POWER BUTTON

ET1064 Shown as example

**Quick Installation Guide**

MANUAL, QIG,

64 SERIES, NO DRIVER

Learn more about Elo at **EloTouch.com**

**America**
Tel +1 408 597 8000
EloSales.NA@elotouch.com

**Europe (EMEA)**
Tel +32 16 930 136
EMEA.sales@elotouch.com

**Asia Pacific**
Tel +86 (21) 3329 1385
EloAsia@elotouch.com

**www.EloTouch.com**

# Flush Mounting Instructions

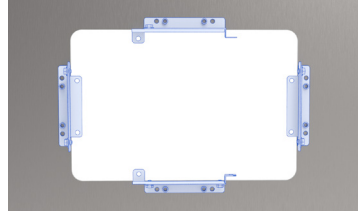Assemble each of the four "L" brackets to a display bracket using the M4x4mm screws included with the display. The shape of the display brackets varies with each display.

Display Bracket
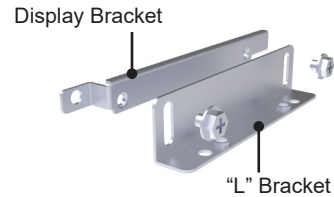
"L" Bracket

Attach assembled "L" brackets + display brackets to enclosure panel using appropriate screw length and type (not included). The "L" brackets include both threaded holes and clearance holes for M4 screws. Dimensions for bracket positions, enclosure opening, and hole locations are shown in the dimensional drawing for the display at www.elotouch.com

Loosen the M4x4mm screws on each of the four L-Bracket+display bracket assemblies and adjust the mounting flange so the distance matches the "mounting depth" dimensions below. Tighten the screws once the dimension is set.
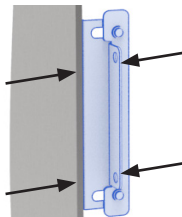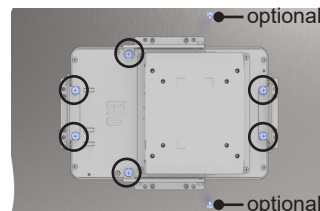
Mounting depth:
0764 = 12.1mm (top/bottom), 11.13mm (sides)
1064 = 15.4mm (top/bottom), 14.6mm (sides)
1564 = 14mm (all positions)

Install the touch display from the outside of the enclosure into the opening of the enclosure. The size of the opening must match the dimensions shown in the dimension drawing for the touch display. Re-adjust any of the mounting brackets to ensure the touch display is flush with the enclosure.
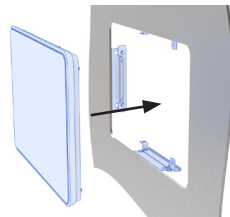
Install additional M4x4mm screws to secure the touchdisplay to the display brackets. The 0764L and 1064L include two optional screws that may be installed from the top and bottom of the display if space permits.

optional

optional

# VESA Mounting Instructions

Each XX64 Series touchdisplay has a mounting pattern on the rear to enable mounting the touch display to a variety of stands and mounts. The mounting holes accomodate M4 screws with a max depth into the display of 8.0mm
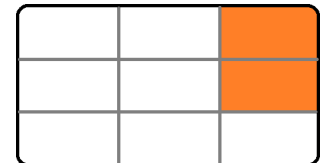
ET1064 Shown as example
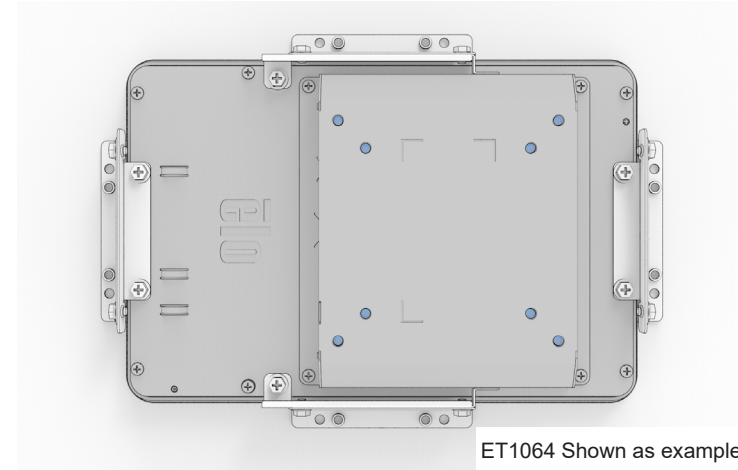
# Touch Gestures

**Open the OSD menu**: One finger on the top-left area and anther finger on the bottom-right corner at the same time for 2 seconds
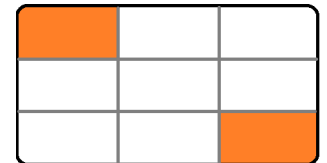
**Lock/Unlock the OSD button**: two fingers on the top-right area and two fingers on the center-right corner at the same time for 2 seconds.

**Lock/Unlock the power button**: two fingers on the center-right area and two fingers on the bottom-right corner at the same time for 2 seconds.